

SHARP®


ELECTRONIC CASH REGISTER

MODEL

ER-4100

ER-4110

INSTRUCTION MANUAL

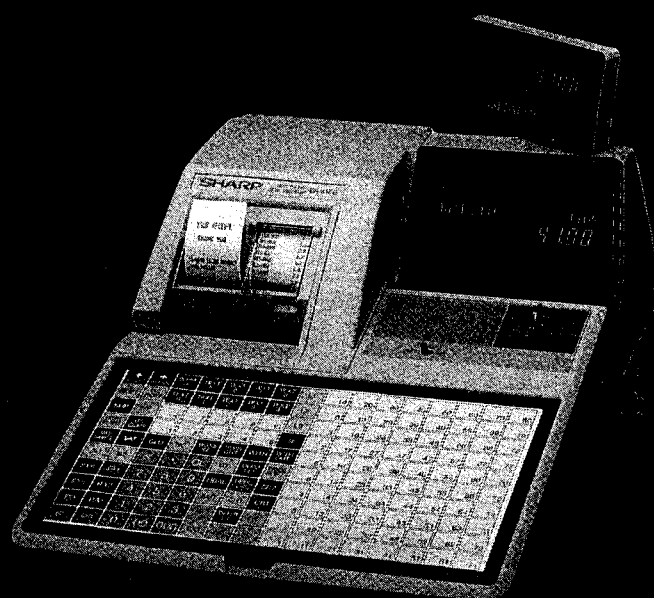

The above photo shows model ER-4100.

MC-Service

If undue force is applied to the drawer, the cash register will become unstable.

Bescheinigung des Herstellers/Importeurs

(nur für die Bundesrepublik Deutschland und West-Berlin anwendbar)

Hiermit wird bescheinigt, daß der/die/das

- Elektronisches Kassensystem Modell ER-4100/4110

In Übereinstimmung mit den Bestimmungen der

- Vfg. 1046/1984

funk-entstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der serie auf Einhaltung der Bestimmungen eingeräumt.

Sharp Electronics (Europe) GmbH

This apparatus complies with requirements of BS 800 and EEC directive 82/499/EEC.

Dieses Gerät stimmt mit den Bedingungen der EG-Richtlinien 82/499/EWG überein.

Cet appareil répond aux spécifications de la directive CEE 82/499/CEE.

Dit apparaat voldoet aan de vereiste EEG-reglementen 82/499/EEG.

Apparatet opfylder kravene i EF direktivet 82/499/EF.

Questo apparecchio è stato prodotto in conformità alle direttive CEE 82/499/CEE.

Αυτή η συσκευή τηρεί τις προδιαγραφές της EEC ντιρεκτίβα 82/499/EEC.

Este aparelho responde às especificações da directiva 82/499/CEE.

Este aparato cumple las especificaciones de la directriz de la CEE 82/499/CEE.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz, den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model ER-4100/4110.

Please read this Manual carefully before operating your machine in order to gain a full understanding of its functions and performance.

Please keep this Manual for further reference. It will help you, if you encounter any operational problems.

IMPORTANT

- **Install your ER-4100/4110 in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electrical components.
- **The register should not be operated by an individual with wet hands.**
The water could seep into the interior of the ER-4100/4110 and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use volatile liquid, such as benzine and thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The ER-4100/4110 register plugs into any standard wall outlet (local voltage $\pm 10\%$ AC).**
Other electrical devices on the same electrical circuit could cause the ER-4100/4110 to malfunction.
- **If the register malfunctions, call your local dealer for service – Do not try to repair the register yourself.**

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used.

Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in and its power switch must be set to the "ON" position. This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

	Page
● PHYSICAL CHARACTERISTICS OF THE ER-4100/4110 REGISTER	7
● KEYBOARD LAYOUT AND SWITCH AND KEY DESCRIPTIONS	10
1. Keyboard	10
2. Mode switch and mode keys	14
3. Cashier and clerk keys	15
4. Receipt ON-OFF switch	16
● DISPLAYS	17
1. Operator display	17
2. Customer display	20
● GENERAL INSTRUCTIONS	21
● HOW TO PROGRAM ALPHANUMERIC CHARACTERS	22
● PROGRAMMING	24
1. Setting the date and time	24
(1) Setting the date (#260)	24
(2) Setting the time (#261)	25
2. Setting the register number (#262)	25
3. Setting the consecutive number (#263)	26
4. Programming for departments	26
(1) Functional programming (#210)	26
(2) Assigning departments to groups (commission/sign & group) (#215) ...	28
(3) Programming of tax status (#211)	29
(4) Setting a limit amount (HALO) of entry (#212)	30
(5) Programming of unit prices (#110)	31
(6) Programming of department text (#214)	31
(7) Assigning print stations to departments (#218)	34
(8) Positioning of department keys (#219)	35
5. Programming for PLUs	36
(1) Definition of PLU codes and department assignment (#220)	37
(2) Assigning of PLUs to commission groups (#225)	38
(3) Programming of tax status (#221)	38
(4) Programming of PLU level start codes (#227)	39
(5) Programming of the opening time range (#222)	40
(6) Programming of set PLUs (#226)	41
(7) Programming of unit prices (#120)	42
(8) Programming of PLU text (#224)	42
(9) Assigning print stations to PLUs (#228)	43
(10) Positioning of direct PLU keys (#229)	44
(11) Programming of stock quantity (#127, #125 and #126)	44
(12) Programming of minimum stock quantity (#128)	46
(13) Programming for a range of PLUs (#255, #256 and #258)	47

	Page
(14) Programming of time unit parameter (#223)	50
6. Function parameter programming.	51
(1) Programming the rate (#130)	51
(2) Function programming 1 (for CA, CH, CR) (#230)	52
(3) Function programming 2 (for %, \ominus) (#231).	53
(4) Function programming 3 (HALO) (#232)	54
(5) Programming of function text (#234).	55
(6) Programming of the change limit (#235)	60
(7) Programming of the operating mode (#236).	61
(8) Programming of the tax exemption limit (#233)	62
(9) Programming a denomination of bank note (#237)	63
7. Clerk programming	64
(1) Clerk code definition (#141)	64
(2) Assigning of the names of clerks (#144)	65
(3) Functional programming (#240).	66
(4) Programming of guest check (GLU/PBLU) codes (#242).	67
8. Cashier programming.	68
(1) Cashier code definition (#150)	68
(2) Programming of the cashier name (#154)	69
(3) Assigning cashiers to drawers (#250)	70
9. Programming of validation printing and slip printing (#270)	71
10. Programming for optional feature selection (#271)	72
11. Guest check code (GLU/PBLU code) programming (#280 and #281)	73
12. Free text programming (#284)	74
13. Logo text programming (#264)	75
14. Programming of texts to be printed on slip (#274).	77
15. Programming of currency descriptor text (#294)	78
16. Programming of general report format (#205)	79
17. Selection X1/Z1 and X2/Z2 reports to be printed in the stacked report sequence (#295, #296, #297, #298 and #299).	80
18. Secret codes to control access to PGM1 mode, and Z1 and Z2 reports (#290, #291 and #292)	81
19. Programming of error messages (#265).	82
20. Reading stored programs.	84
(1) Program details and procedures for their reading.	84
(2) Sample printouts.	86


	Page
● TYPE OF RECEIPTS	102
1. Addition receipt type and addition + total receipt type	102
2. Single/double receipt type.	103
3. Single/double + total receipt type	104
4. Single/double + addition mode receipt type	105
5. Addition + single receipt type	106
● RECEIPT SHIFT	107
● REGISTRATIONS	108
* Preparations for entries	108
* Error warning	108
1. Clerk assignment	108
2. Cashier assignment	109
3. Item entries	109
(1) Single item entries	109
(2) Repeat entries	112
(3) Multiplication entries	113
(4) Single item cash sale (SICS) entries	114
4. Display of subtotals	115
(1) Merchandise subtotal	115
(2) Difference subtotal	115
5. Finalization of transaction	116
(1) Cash or cheque tendering	116
(2) Mixed tendering	116
(3) Cash or cheque sale that does not need a tender amount entry	117
(4) Credit sale	117
(5) Mixed-tender sale (cash or cheque tendering + credit sale)	117
(6) Tender operation with bank note keys	118
6. Currency exchange	119
7. Computation of VAT/TAX	120
(1) Manual VAT 1 system	120
(2) Manual VAT 1 – 6 system	120
(3) Auto VAT 1 – 6 system	120
(4) Auto TAX 1 – 6 system	120
8. VAT shift entries	121
9. Percent calculations (premium or discount)	122
(1) Percent calculation for item entries	122
(2) Percent calculation for the subtotal	122
10. Deduction	123
(1) Deduction for item entries	123
(2) Deduction for the subtotal	123
11. Refund entries	124
12. Half-pint entries	124
13. No sale (exchange)	125

	Page
14. Set PLU entries	125
15. With/Without function	126
16. PLU level shift (for direct PLU)	127
17. Unit price shift operation for PLU	129
(1) Price level selection by clerk price level programming	129
(2) Price level selection by the PRICE SHIFT key	129
18. Time PLU entries	130
19. Printing of non-add code numbers.	132
20. Guest check copy	132
21. Free text printing	133
22. Received on account entries	134
23. Paid out entries	135
24. Transfer a cash deal into a cheque or credit deal	135
25. Guest check entries (PBLU/GLU)	136
(1) PBLU system.	136
(2) GLU system	139
(3) Error messages.	141
26. Service charge	142
27. Deposit entries	143
28. Transferring guest checks out/in	144
(1) Transferring guest checks out	144
(2) Transferring guest checks in	144
29. Bill totalizing.	145
30. Guest check receipt (only for the GLU system)	146
● CORRECTION	148
1. Correction of the last entry (direct void).	148
2. Correction of the next-to-last or earlier entries (indirect void)	149
● CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)	150
● COPY RECEIPT PRINTING	151
● TRANSACTION FINALIZING (BY REMOVING THE CLERK KEY)	152
● OVERLAPPED CLERK ENTRY	153
● VALIDATION PRINTING FUNCTION	154
● MANAGER MODE	157
● PRINTING OF THE EMPLOYEE ARRIVAL AND DEPARTURE TIMES	158
● TIME DISPLAY AND AUTOMATIC UPDATING OF THE DATE	159
● READING (X) AND RESETTING (Z) OF SALES TOTALS	160
— SAMPLE REPORTS —	164
● COMPULSORY CASH/CHEQUE DECLARATION	192


• IN CASE OF POWER FAILURE	194
• IN CASE OF PRINTER'S MOTOR LOCKING	194
• PAPER ROLL NEAR-END SENSING FUNCTION (ONLY FOR JOURNAL PAPER)	195
• INSTALLING AND REMOVING THE PAPER ROLL	196
• INSTALLING THE INK RIBBON CASSETTE.....	199
• INK REFILL	200
• REMOVING THE TILL AND THE DRAWER.....	201
• OPENING THE DRAWER BY HAND.....	201
• MOVING THE DRAWER FROM THE REGISTER.....	202
• BEFORE CALLING FOR SERVICE.....	203
• LIST OF OPTIONS.....	204
• SPECIFICATIONS	205
• SLIP PRINTER (OPTION)	207

PHSICAL CHARACTERISTICS OF THE ER-4100/4110 REGISTER


ER-4100

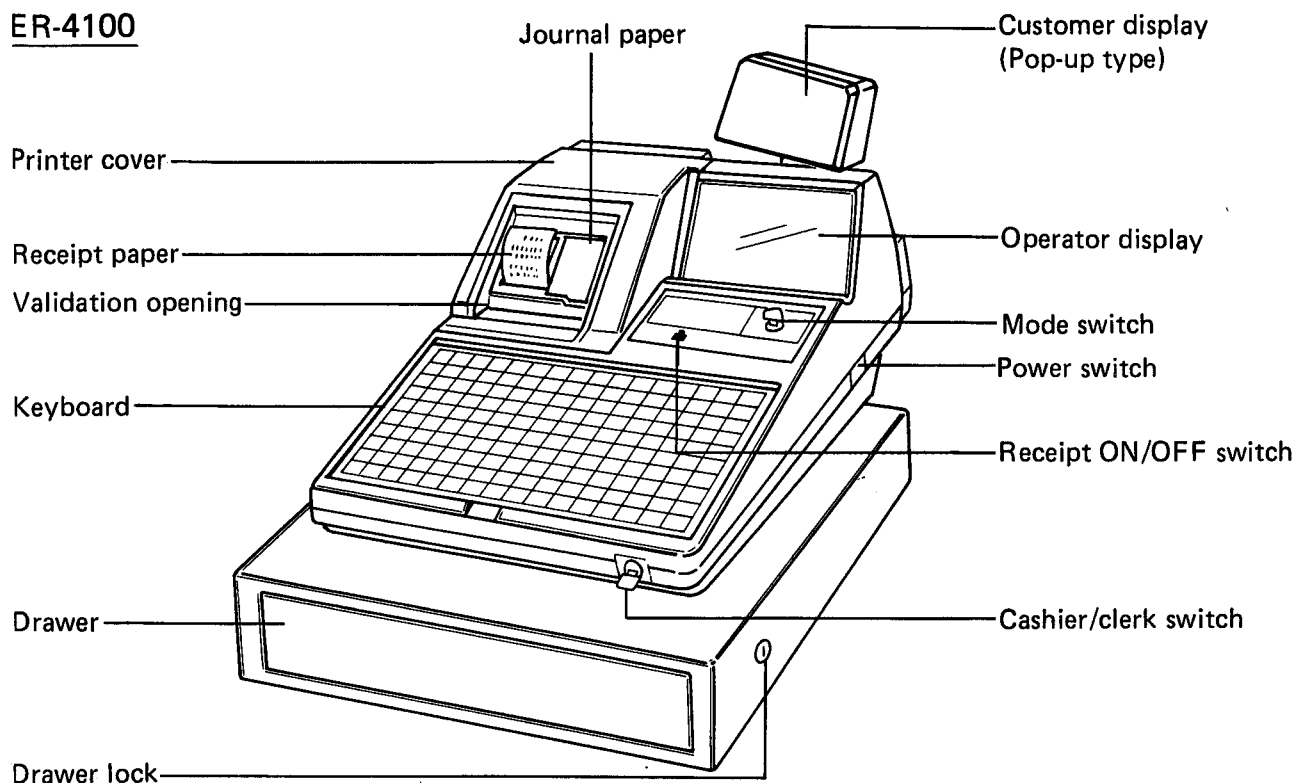

For the machines delivered to those sales area that Sharp Electronics (Europe) GmbH covers, the drawer is an option.

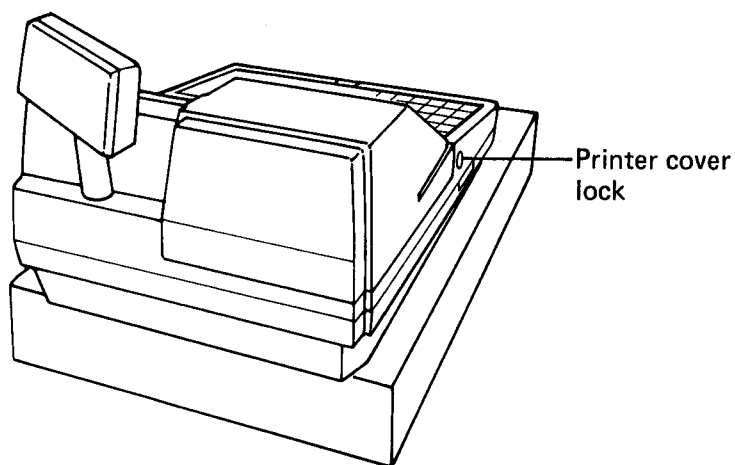


■ Printer cover lock key

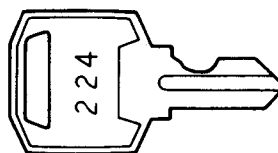



■ Printer cover lock


Lock: Turn 90 degrees counterclockwise.
Unlock: Turn 90 degrees clockwise.

■ Drawer open key

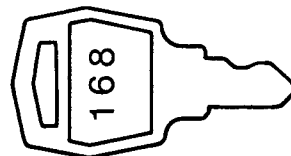

Unlock: Turn 45 degrees clockwise

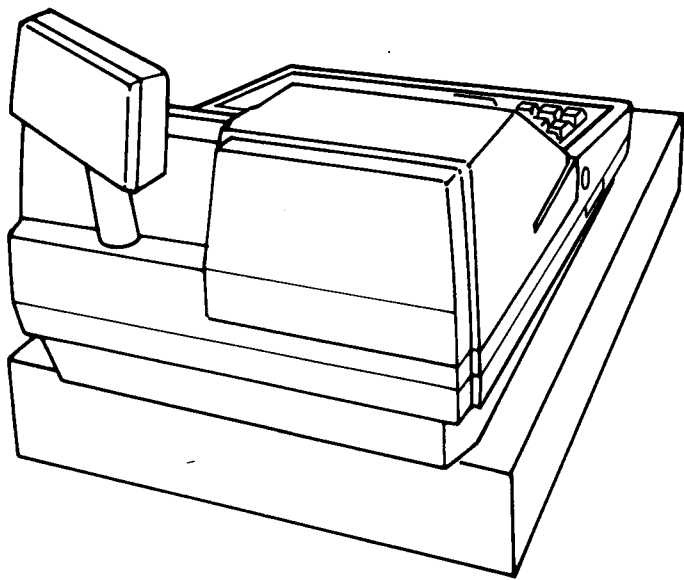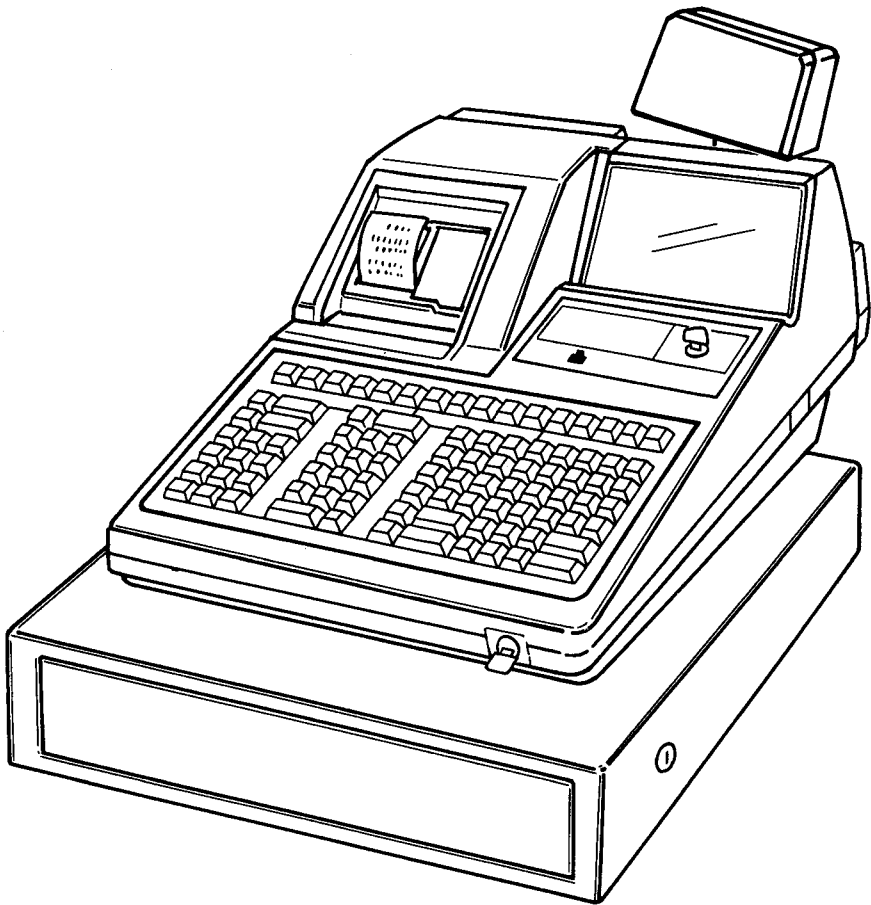

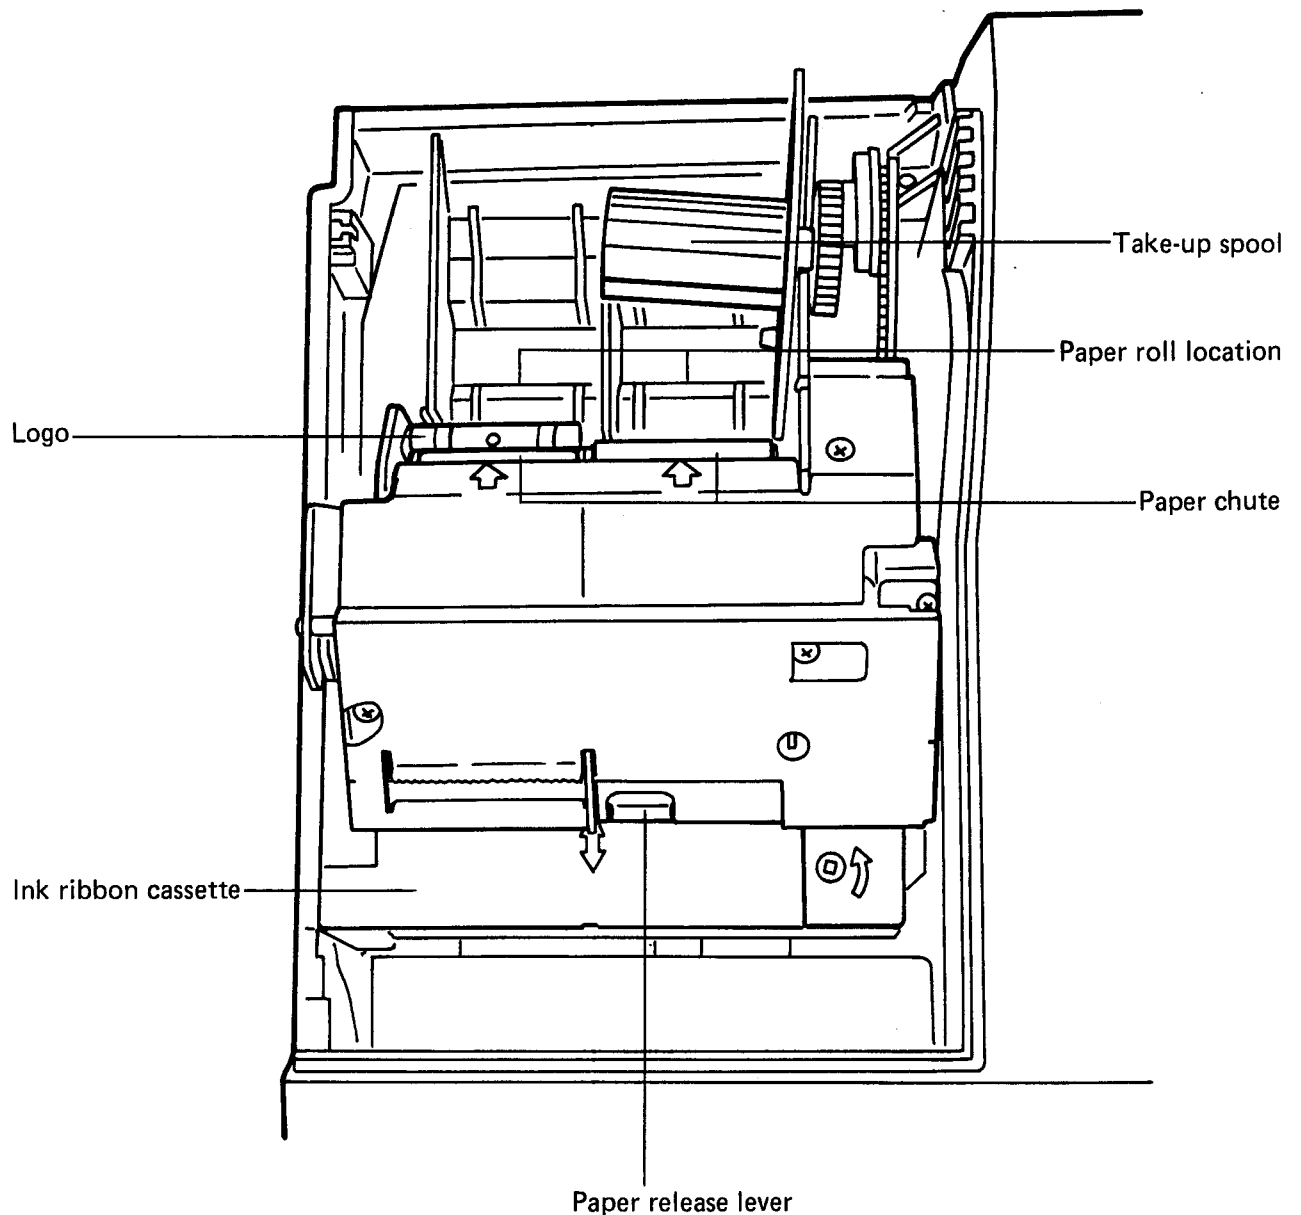

Used to load or unload the machine with paper roll (receipt and journal paper). Keep the lever down to take in or out the paper roll.

Note:

Do not attempt to take in or out the paper roll with this lever at the up position. This may result in trouble.

KEYBOARD LAYOUT AND SWITCH AND KEY DESCRIPTIONS

1. Keyboard

(1) ER-4100 standard keyboard layout

↑ RECEIPT	↑ JOURNAL	GUEST #	TEXT 5	TEXT 6	TEXT 7	TEXT 8	L1	10	20	30	40	50	60	70	80
RCPT	GC RCPT	TEXT #	TEXT 1	TEXT 2	TEXT 3	TEXT 4	L2	9	19	29	39	49	59	69	79
SLIP	VP	6	7	8	9	10	L3	8	18	28	38	48	58	68	78
RCPT SHIFT	GC COPY	1	2	3	4	5	#	7	17	27	37	47	57	67	77
VAT SHIFT	VAT	GLU	NC	TRANS IN	TRANS OUT	WITH	WITH OUT	6	16	26	36	46	56	66	76
%1	%2	⊗	•	CL	BT	DEPO (+)	PRICE SHIFT	5	15	25	35	45	55	65	75
STS	⊖1	7	8	9	NBAL	DEPO (-)	CR2	4	14	24	34	44	54	64	74
ETS	RA2	4	5	6	AMT	EX1	CR1	3	13	23	33	43	53	63	73
PO	RA1	1	2	3	PLU/ SUB	DIFFER ST	CH1	2	12	22	32	42	52	62	72
RF	∞	0	00	000	NS	ST	TL	1	11	21	31	41	51	61	71

(2) ER-4110 standard keyboard layout

↑ RECEIPT	↑ JOURNAL	RCPT	RCPT SHIFT	GC RCPT	SLIP	VP	GC COPY	TEXT #	GUEST #	PRICE SHIFT	VAT	VAT SHIFT	STS	ETS	#
--------------	--------------	------	---------------	------------	------	----	------------	-----------	------------	----------------	-----	--------------	-----	-----	---

NC	NBAL	
BT	GLU	
TRANS IN	%1	%2
TRANS OUT	⊖1	RA2
WITH	PO	RA1
WITH OUT	RF	∞

AMT	PLU/SUB	
⊗	•	CL
7	8	9
4	5	6
1	2	3
0	00	

 
 
 

 
 

TEXT 6	6	10	6	12	18	DEPO (+)	DEPO (-)
TEXT 5	5	9	5	11	17	EX1	NS
TEXT 4	4	8	4	10	16	CR1	CR2
TEXT 3	3	7	3	9	15	DIFFER ST	CH1
TEXT 2	2		2	8	14	ST	
TEXT 1	1		1	7	13	TL	

Note: All the keys but the receipt paper feed and journal paper feed keys can be changed in their positions. If you want to change the layout, however, contact your dealer.

0	}	Numeric keys	BT	Bill total key
9			AMT	Amount key
00			EX1	Currency exchange 1 key
000			TRNS IN	Transfer in key
.		Decimal point key	TRNS OUT	Transfer out key
⊗		Multiplication key	DEPO (+)	Deposit (+) key
CL		Clear key	DEPO (-)	Deposit (-) key
1	}	Department keys	PRICE SHIFT	Price shift key
10			WITH	With key
1	}	Direct price lookup/subdepartment keys	WITH OUT	Without key
80			STS	Start time sale key
PLU/SUB		Price lookup/subdepartment key	ETS	End time sale key
L1	}	PLU's level shift keys	PO	Paid-out key
L2			RA1	Received-on account 1 and 2 keys
L3			RA2	
%1	}	Percent 1 and 2 keys	TEXT #	Text number key
%2			TEXT 1	Direct text keys
⊖1		Discount 1 key	TEXT 8	
RF		Refund key	GC COPY	Guest check copy key
∞		Void key	RCPT SHIFT	Receipt shift key
VAT SHIFT		Value added tax shift key	GC RCPT	Guest check receipt key
VAT		Value added tax key	#	Non add key
NS		No sale key	DIFFER ST	Difference subtotal key
GUEST #		Guest number key	ST	Subtotal key
GLU		Guest look up key	TL	Total/Amount tendered key
NC		New check key	CH1	Check 1 key
NBAL		New balance key		

<div>CR1</div>	}	Credit 1 and 2 keys	<div>*<div>BANK NOTE1</div></div>	}	Bank note 1 thru 3 keys
<div>CR2</div>			<div>*<div>BANK NOTE3</div></div>		
<div>SLIP</div>		Slip print key	<div>*<div>CLK#</div></div>		Clerk code key
<div>VP</div>		Validation print key	<div>*<div>HALF PINT</div></div>		Half pint key
<div>RCPT</div>		Receipt print key	<div>*<div>1/2</div></div>		Half penny key
<div><div>↑</div><div>RECEIPT</div></div>		Receipt paper feed key	<div>*<div>WP</div></div>		Wide printer key
<div><div>↑</div><div>JOURNAL</div></div>		Journal paper feed key	<div>*<div>A</div></div>	}	Push down clerk keys (A,B,D,E,H,K,L,M,N,P,Q,R,S,T,U)
<div>*<div>11</div></div>	}	Department keys	<div>*<div>B</div></div>		
<div>*<div>50</div></div>			<div>*<div>D</div></div>		
<div>*<div>81</div></div>	}	Direct price lookup/subdepartment keys	<div>*<div>E</div></div>		
<div>*<div>100</div></div>			<div>*<div>U</div></div>		
<div>*<div>TEXT 9</div></div>	}	Direct text keys			
<div>*<div>TEXT 10</div></div>					
<div>*<div>CR3</div></div>	}	Credit keys			
<div>*<div>CR8</div></div>					
<div>*<div>CH2</div></div>		Check 2 key			
<div>*<div>⊖2</div></div>		Discount 2 key			
<div>*<div>EX2</div></div>	}	Currency exchange 2 and 3 keys			
<div>*<div>EX3</div></div>					
<div>*<div>%3</div></div>	}	Percent 3 and 4 keys			
<div>*<div>%4</div></div>					

Note 1: In case of the ER-4100, the standard keyboard is not equipped with those keys that are marked with (*).


Note 2: In case of the ER-4110, the standard keyboard is not equipped with the  ,  ~  ,  ~  , and  ~  keys and those keys that are marked with (*).

Attaching of the key sheet

The ER-4100 packing carton contains three types of key sheet: the standard keyboard layout, the blank key sheet, and that for programming.

You can write or type captions on the blank key sheet.

Insert the key sheet between the key cover and the top cabinet from the front as illustrated below.

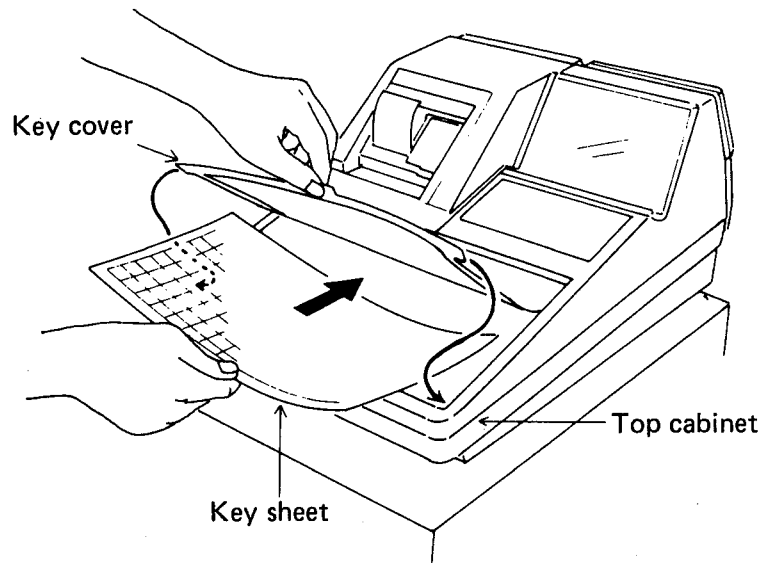

The standard key sheet can be replaced with either of the other two types.

Note 1) Do not pull the key cover too tightly. The cover may be broken.

Note 2) Replace the key sheet with new one if by chance it gets wet. Too long use of a wet key sheet may result in a machine trouble.


Note 3) Be sure to use the SHARP-specified key sheets. Too thick or hard sheets can make you feel heavy on key operation, or worse, keying-in might be impossible.

Note 4) Spread the key sheet properly under the key cover, without any fold or wrinkle, to ensure easy key-in operation.


Note 5) If you require the key sheet, please consult your dealer.

2. Mode switch and mode keys


The mode switch can be operated by inserting one of the three supplied mode keys — manager (MA), submanager (SM), and operator (OP) keys. The keys can be inserted or removed only when they are in the REG or ⏻ position.

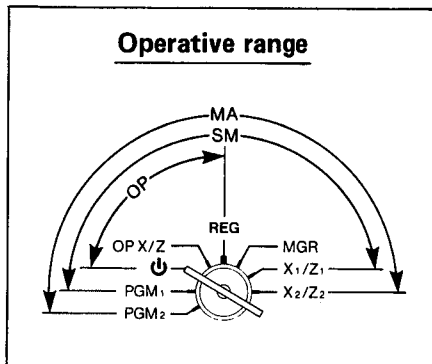


• Manager key (MA)

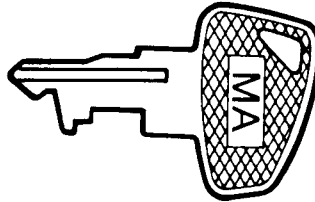

• Submanager key (SM)

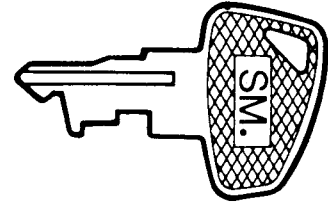

• Operator key (OP)

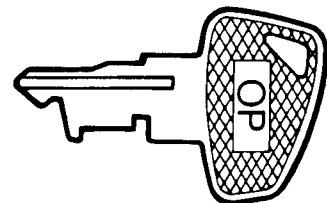

* The power switch is positioned at the right side of the cabinet viewed from the front of the set. Set the power switch to the ON position prior to using your machine.

The mode switch has these settings:

- ⏻ : This mode locks all register operations.
No change occurs to register data.
- OP X/Z : This setting allows cashiers (or clerks) to take X or Z reports for their sales information. It can also be used for displaying the time and printing the employee arrival and departure times.
- REG : For entering sales.
- PGM1 : To program those items that need to be changed often: e.g., unit prices of departments or PLUs and percentages.
- PGM2 : To program all PGM1 programs and those items that do not require frequent changes: e.g., date, time, or variety of register functions.
- MGR : For manager's entries
The manager can use this mode to make entries that are not permitted to be made by cashiers (or clerks) — for example, after-transaction voiding and override entry.
- X1/Z1 : To take X/Z report for various daily totals.
- X2/Z2 : To take X/Z report for periodic (weekly or monthly) consolidation or daily totals.

3. Cashier and clerk keys

The ER-4100/4110 allows the operator to use cashier and clerk keys in the following four ways.

- Real clerk keys (standard 6 clerks/max. 15 clerks: A, B, D, E, ----, U)
- Push-button clerk keys (standard 6 clerks/max. 15 clerks: A, B, D, E, ----, U)
- Clerk code numbers (standard 6 clerks/max. 99 clerks)
- Real cashier keys + clerk code numbers (two cashier keys)

The standard machine has been shipped with the real clerk key system being programmed. If you want to change the cashier/clerk system, consult your local dealer.

(1) Real clerk keys

Fifteen keys for clerks A, B, D, E, H, K, L, M, N, P, Q, R, S, T, and U.
Six keys are usable. (9 clerk keys are optionally available.)



- These keys serve to identify clerks.
Put one of the A thru U keys in the cashier/clerk switch.
The register prints the symbol that corresponds to the inserted clerk key. (The register prints the symbol "A" both on the receipt and on the journal when operated with the clerk key A.)


(2) Push-button clerk keys

A B D E H K
(L M N P Q R S T U : optionally available)

- These keys identify clerks.
Press any one of these keys.
The register prints the symbol that corresponds to it.

(3) Clerk code numbers



When a clerk code is entered by the procedure,

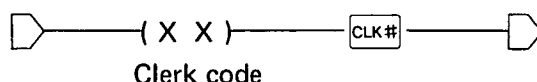


the register is ready to operate.
The register prints the clerk code.

(4) Real cashier keys + clerk code numbers

Two cashier keys are usable.

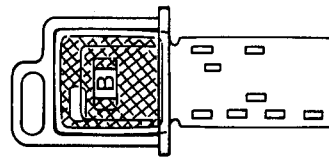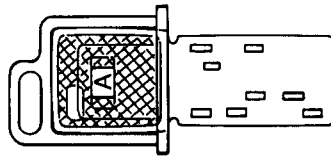


- When a cashier key is inserted into the cashier/clerk switch and a clerk code is entered by the procedure,

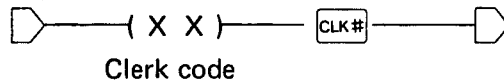

the register is ready to operate.

4. Receipt ON-OFF switch

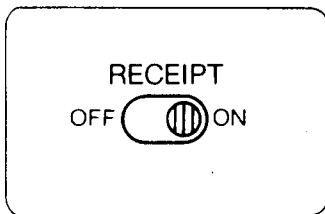


This switch permits or prohibits receipt printing. To permit printing on the journal alone without receipt, slide the switch to the OFF position and to permit printing on both the journal and the receipt, slide it to the ON position.

Note: Your register will print receipts regardless of the position of this switch except when the mode switch is in the REG position. This means that the receipt roll must be installed even when this switch is kept in the OFF position.

DISPLAYS

1. Operator display

The operator display consists of a 16-position dot matrix display (upper) and a 11-position 7-segment display (lower).

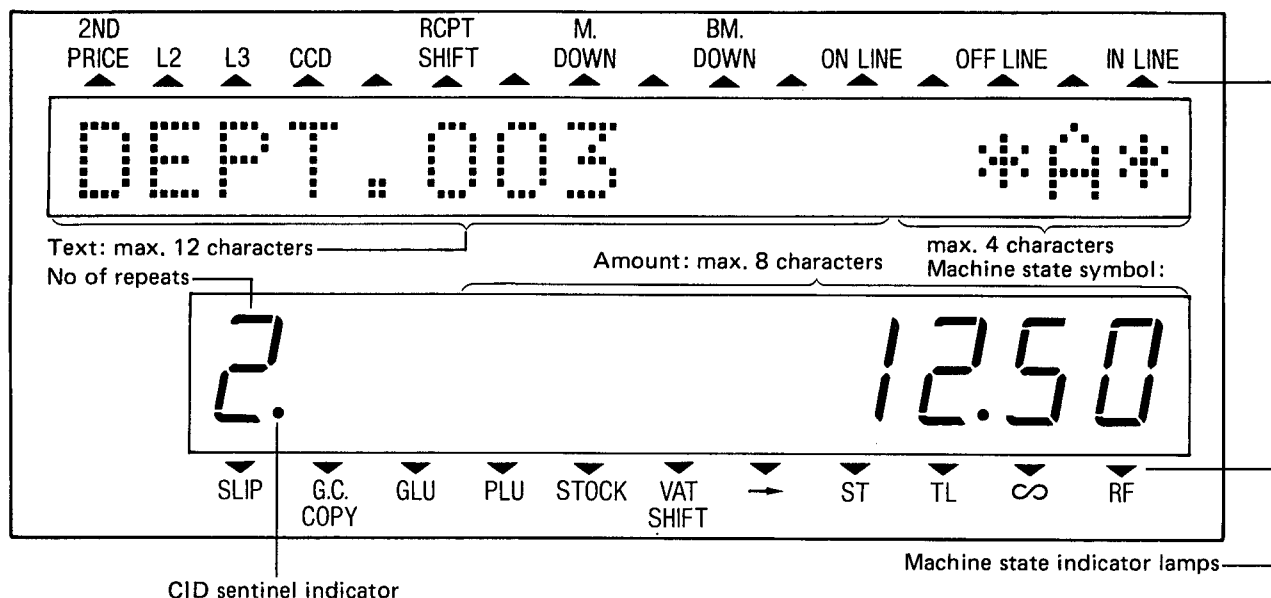

• Dot matrix display

Text:

A text such as department number, PLU number, or error message appears in the leftmost 12 (max.) positions. The text for each function appears in the leftmost 8 (max.) positions.

Non-add code:

A non-add code entered appears in the full 16 positions.

Machine state symbol:

A machine mode caption or guidance appears in the rightmost 4 (max.) positions.

Display	Description
* A *	REG mode (This display lights when the clerk key A is in the clerk switch with the machine being programmed for real clerk key system.)
M * A *	MANAGER mode (This display lights when the clerk key A is in the clerk switch with the machine being programmed for real clerk key system.)
V * A *	VOID mode (When the clerk key A is in the clerk switch.)
PGM1	PGM1 mode
PGM2	PGM2 mode
O * A *	OP X/Z mode (This display lights when the clerk key A is in the clerk switch with the machine being programmed for real clerk key system.)
X/Z1	X1/Z1 mode
X/Z2	X2/Z2 mode
VAL	This display lights when the machine is programmed for compulsory validation printing.
#	This display lights when the machine is programmed for compulsory number entry.
LOCK	This display lights when the clerk key is removed from the clerk switch.
SLIP	This display lights when the machine is programmed for compulsory slip printing.

- **7-segment display**

Amount: An amount appears in the rightmost 8 (max.) positions.

Number of repeats for repetitive registrations:

 

The number of repeats is displayed from "2" and counted up with each repeat. When you've registered ten times, the display shows "0"


 



Example: (2 → 3 → 4 9 → 0 → 1 → 2)

— : (Floating) Appears when an entry into a minus department or PLU/subdept. or of deduction, discount, or refund is made or corrected.

- **Machine state indicator lamps**

RF : Lights up when the RF key is pressed or when a refund item entry is made.

 : Lights up when the  key is pressed or when an item void entry is made.

TL : Lights up when a transaction is finalized by pressing the  ,  thru  ,  , or  key without any amount tendered entry.

ST : Lights up when subtotals are displayed.

→ : Lights up whenever the change due appears in the display or when the total sale amount is negative.

VAT SHIFT : Lights up when the VAT status is shifted.

STOCK : Lights up when the stock quantity is found negative by checking.

PLU : Lights up when a PLU/subdepartment registration is performed.

GLU : Lights up when the guest lookup or previous balance lookup function is in use.

G.C. COPY : Lights up while the guest check copy function is performed.

SLIP : Lights up when the SLIP key is pressed (in alternative printing) or when slip printing is compulsory.

2ND PRICE : Lights up when the PLU price level is shifted to 2nd price.

L2, L3 : Lights up when a second or third level direct PLU is selected.

CCD : Lights up during the execution of compulsory cash/cheque declaration.

RCPT SHIFT : Lights up when the receipt shift key is pressed.

● :
(Sentinel lamp) Appears right below the eleventh place when the cash in drawer amount exceeds a programmed sentinel amount. The sentinel check is performed for the total cash in drawer.

ON LINE : Lights up during online communication.


OFF LINE : Lights up when the machine is in the offline mode.

IN LINE : Lights up during inline communication.

BM. DOWN : Lights up while the back-up master is out of order.

M. DOWN : Lights up while the master is out of order.

2. Customer display (7-segment display)

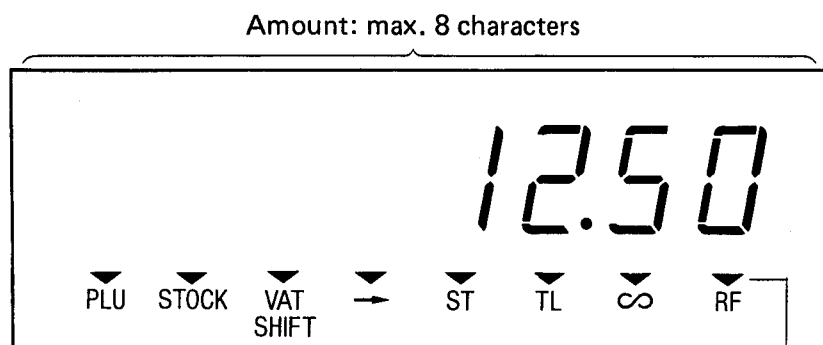

Machine state indicator lamps*

* These lamps light up in the same manner as the machine state indicator lamps situated in the 7-segment display of the operator display.

GENERAL INSTRUCTIONS

There are a few things you should keep in mind when programming the ER-4100/4110. The following sections are considered general instructions because they apply to the majority of jobs and procedures contained in this manual. If you take the few minutes to read these, you might save yourself some time and aggravation when programming.

Entering numbers

When entering the job number or numbers as part of a procedure, use the numeric key. It contains the decimal $\boxed{\cdot}$ key and the $\boxed{\otimes}$ key used in all procedures.

To change memory

To change the memory of the machine, always press the decimal $\boxed{\cdot}$ key after entering the job number.

Reading a program

To take a reading of a program, that is printed on the register printer, do not press the decimal $\boxed{\cdot}$ key as indicated in the procedure. After you press the \boxed{TL} key, the reading is printed on the register printer.

Entering options as a part of a procedure

In procedures that allow entry of multiple options, e.g., A B C D, **leading zeros are not required**; however, **trailing zeros are required**. In the A B C D example, if you wanted to program a 1 for the C option, you would enter 10. (Leading zeros for A and B are not required; trailing zeros are required.)

Reading and entering key operations

You'll notice that there's an illustration for each job entitled — Key operation. What that illustration shows is how you would enter the associated example into the machine, using the numeric and alpha key.

The key operation for setting the register number is listed as:

262 $\boxed{\cdot}$ $\boxed{\otimes}$ (1)

123 \boxed{TL} (2)

In (1) above, you would enter 262, press the decimal $\boxed{\cdot}$ key and then press the $\boxed{\otimes}$ key.

In (2) above, you would enter 123 (for the sample register number) and then press the \boxed{TL} key. This completes the procedure.

In most cases you end a procedure by pressing the \boxed{TL} key.

Recovering from an error message

If you happen to get an error beep and message when programming, to recover and correct the condition, simply press the \boxed{CL} key. You'll notice that the error message is cleared from the display and you can continue programming.

HOW TO PROGRAM ALPHANUMERIC CHARACTERS

Use the accompanying programming key sheet to key in numbers, letters and symbols. Using the assigned touch keys, it is easy to program alphabetical letters as well as symbols.

- Numerals, letters and symbols are programmable simply by pressing the touch keys.
- Double-size characters can be made by using the (DC) key.

Example: To program the word "SHARP" in double size, do the following key-in.

(DC) S (DC) H (DC) A (DC) R (DC) P

- In this layout there are all the keys required for programming. So you can do every kind of programming on this key sheet.

Programming key sheet (ER-4100)

↑ RECEIPT	↑ JOURNAL	1													
Γ	Ψ	2		∞	{	}	←	→	◀	▶	↑	↓	_	[]
(SLIP)	Ω	3		∞		!!	..	'	‘	<	>	^	¿	=	+
Θ	Δ	4	(WP)	”	@	Æ	Ø	Å	Ñ	Ç	Q	Pt	£	?	(BACK) (SPACE)
Λ		1/2	(DC)	i	!	“	§	\$	%	¢	&	()	*	#
Ξ		⊗	•	CL	1	2	3	4	5	6	7	8	9	0	B
Π		7	8	9	Q	W	E	R	T	Y	U	I	O	P	Ü
Σ		4	5	6	A	S	D	F	G	H	J	K	L	Ö	Ä
Τ		1	2	3		Z	X	C	V	B	N	M	;	:	/
Φ		0	00	000		ST	TL	(SPACE)	(SPACE)	(SPACE)	(SPACE)	(SHIFT)	,	.	-

Note 1) The shaded keys () cannot be used as a character key.

Note 2) The (DC) means double-size character code and this key is used for double-size character programming.

Programming key layout (ER-4110)

		+	-	#	*	1	2	3	4	5	6	7	8	9	0
		[∞]	[∞]	[;]	[:]	[,]	[.]	[**]	[!!]	[!]	[i]	[l]	[)]	[<]	[>]
Ω	[**]	”	[→]	%	[\$]	(DC)	[^]	A	B	C	D	E	F	G	H
B	[‘]	’	[←]				[¿]	I	J	K	L	M	N	O	P
Γ	≡	Φ	[►]				[?]	Q	R	S	T	U	V	W	X
Δ	π	ψ	[◄]				[_]	Y	Z	Æ	Ø	Å	Ñ	Ç	(BACK SPACE)
⊙	Σ	Ω	[↑]				[=]	((\$)	(SPACE)	Ä	Ü	Ö	[{]	
Λ	Υ	/	[↓]				[Φ])	[@]	(SHIFT)	Pt	£	&	[}]	

Note 1) The (DC) means double-size character code and this key is used for double-size character programming.

Note 2) The [] keys are optionally available.

PROGRAMMING

Your machine allows you to program in two modes: PGM1 and PGM2. The PGM1 mode is for programming those items that need to be changed often: unit prices of departments/PLUs, and percentages. The PGM2 mode is used for programming all PGM1-mode programs and those items that require less frequent changes: date, time, tax rate, and the functions of each key.

We describe below the programming or setting procedures of various items. Program every item necessary for your store following the appropriate procedures.

- * To set the mode switch to the PGM1 position, use the manager or submanager key; and to set to the PGM2 position, use the manager key.

Preparations for programming

1. Plug your machine into a standard wall outlet.
2. Put the manager or submanager key in the mode switch and turn it to the PGM1 or PGM2 position depending upon the programming you are about to do.
3. Put the clerk (or cashier) key in the cashier/clerk switch.
4. Check to see whether both journal and receipt rolls are present in the machine. If they are missing, install journal and receipt rolls correctly.
5. Program necessary items into your machine.

1. Setting the date and time (PGM2 mode)

(1) Setting the date


Procedure



Key operation	Print
<div style="display: flex; justify-content: space-around; align-items: center;"> 260 [.] [⊗] </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> <div style="display: flex; justify-content: space-around;"> 26 12 88 </div> <div style="display: flex; justify-content: space-around; font-size: small;"> <div>Day</div> <div>Month</div> <div>Year</div> </div> </div> <div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px 5px;">TL</div> </div> </div>	<div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 80%;"> <div style="font-family: monospace; font-size: small;"> 26/12/88 8:30A 000#0038 *A* CLERK01 #260 *PGM2* </div> </div>

(2) Setting the time

Procedure

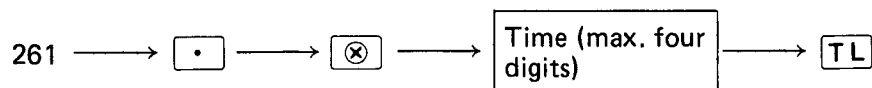


Key operation	Print
2 6 1 [.] [⊗] 1 4 3 0 [TL] Hour Minute	26/12/88 2:30P 000#0039 *A* CLERK01 #261 *PGM2*

Note: Your machine can be programmed to display and print the time on the 24-hour system.

2. Setting the register number (PGM2 mode)

When your store has two or more registers, it is practical to set separate register numbers for their identification. You may set them in a maximum of three digits.

Procedure

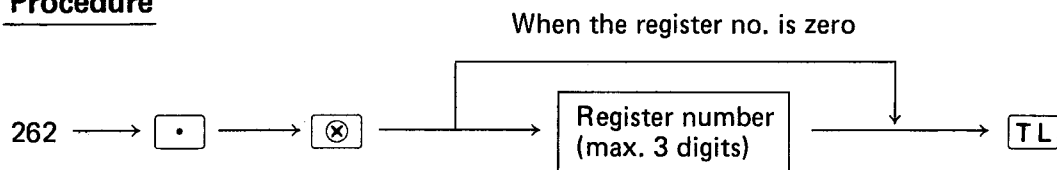


Key operation	Print
2 6 2 [.] [⊗] 1 2 3 [TL]	26/12/88 2:30P 123#0040 *A* CLERK01 #262 *PGM2*

3. Setting the consecutive number (PGM2 mode)

The consecutive number is increased by one each time a receipt is published.
Enter a number (one to four digits) that is one less than the desired starting number.

Procedure

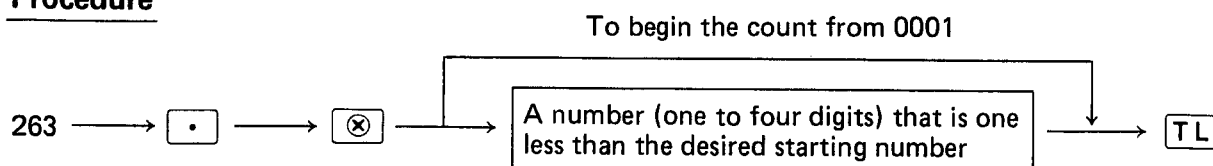

Key operation		Print
Starting from "1001"	2 6 3 [.] [⊗] 1 0 0 0 [TL]	26/12/88 2:40P 123#1000 *A* CLERK01 #263 *PGM2*

4. Programming for departments

Your machine allows you to perform the following programming for each department.

(1) Functional programming (PGM2 mode)

① Single/double/SICS (single-item cash sale)


- The programming of "single" or "double" is significant only when the receipt is of "Single/double", "Single/double + total" or "Single/double + addition mode" type.
- If entries are made for the departments which SICS has been assigned to when the receipt is of "Addition" type, these departments serve as SICS departments only when a PBAL entry or other department entry is not carried out. In other cases, the departments serve in the same manner as ordinary departments.

② Four types of unit price entry

You may select one of the following four types of unit price entry for each department.

- (a) Open and preset
- (b) Preset only
- (c) Open only
- (d) Inhibit department key

Procedure

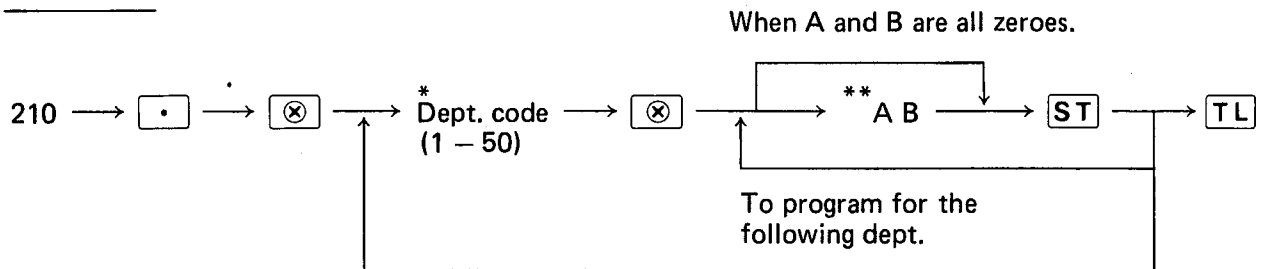

* Dept. code: Standard 10 departments/max. 50 departments.

**

Item			Entry
A	Single/double/SICS	Single-item cash sale	2
		Double receipt	1
		Single receipt	0
B	Type of unit price entry	Open and preset	3
		Preset only	2
		Open only	1
		Inhibit	0

Key operation

2 1 0 . (X)
 1 (X) 3 ST
 1 0 (X) 2 ST
 TL

Print

```


#210 *PGM2*

*D01          0.00
DPT.01        000000
SINGL         KPO01 LM18
OP&PR         G  01 C  0
*D10          0.00
DPT.10        000000
SINGL         KPO01 LM18
PR            G  01 C  0
  
```

(2) Assigning departments to groups (commission/sign & grouping) (PGM2 mode)

- Your machine allows you to assign a commission group (1 – 3) to each department.
- You can assign departments to a maximum of 9 groups.

Procedure

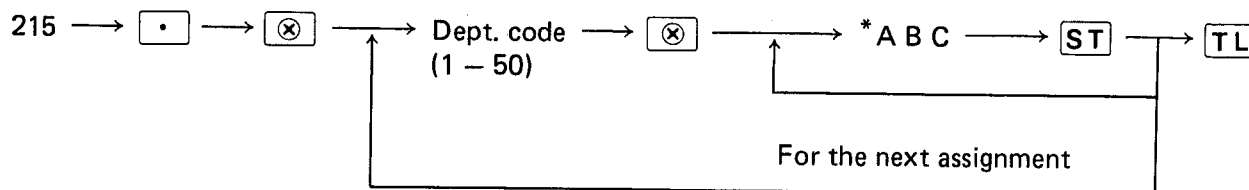

*A: Commission group 0 – 3 (0 = no commission)
BC: Dept. (+) 1 – 9 (group 1 thru group 9)
 Dept. (–) 10
 Hash (+) dept. 11

Key operation

2 1 5 . ⊗
 1 ⊗
 3 ST
 5 ⊗
1 0 6 ST
 TL

Print


```
#215  *PGM2*

*D01          0.00
DPT.01        000000
SINGL        KPO01 LM18
OP&PR        G  03 C  0
*D05          0.00
DPT.05        000000
SINGL        KPO01 LM18
OP           G  06 C  1
```

(3) Programming of tax status (PGM2 mode)

Program a tax status (taxable 1 to 6) for each department.

Procedure

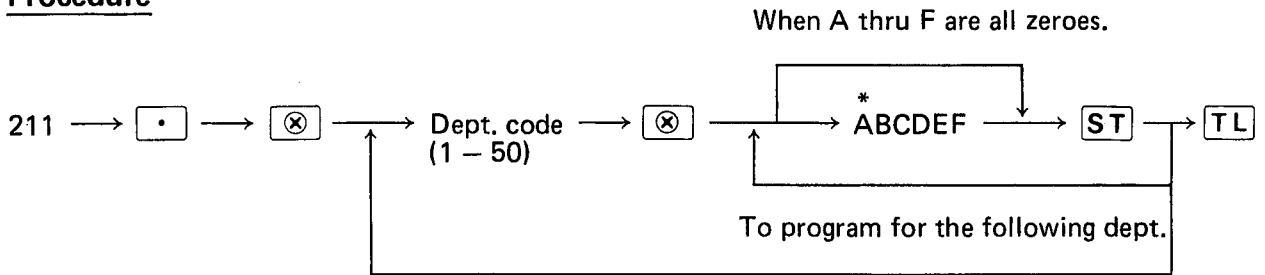

- *A: Taxable 6
To select taxable 6, enter 1; and to select another tax status, enter 0.
- B: Taxable 5
To select taxable 5, enter 1; and to select another tax status, enter 0.
- C: Taxable 4
To select taxable 4, enter 1; and to select another tax status, enter 0.
- D: Taxable 3
To select taxable 3, enter 1; and to select another tax status, enter 0.
- E: Taxable 2
To select taxable 2, enter 1; and to select another tax status, enter 0.
- F: Taxable 1
To select taxable 1, enter 1; and to select another tax status, enter 0.

Key operation

```
2 1 1  .  (X)
          1  (X)
        1 1 0 1  ST
          9  (X)
        1 0 0 1 1 0  ST
                          TL
```

Print

```
#211  *PGM2*

*D01          0.00
DPT.01        001101
SINGL      KFO01 LM18
OP&PR   G   03  C  0
*D09          0.00
DPT.09        100110
SINGL      KFO01 LM18
OP         G   01  C  0
```


(4) Setting a limit amount (HALO) of entry (PGM2 mode)

You can set upper limit amounts (HALO: High Amount Lockout) for each department.

The limit is effective for the REG-mode operations and can be overridden in the MGR mode.

HALO limit is represented by two figures as follows.

Procedure

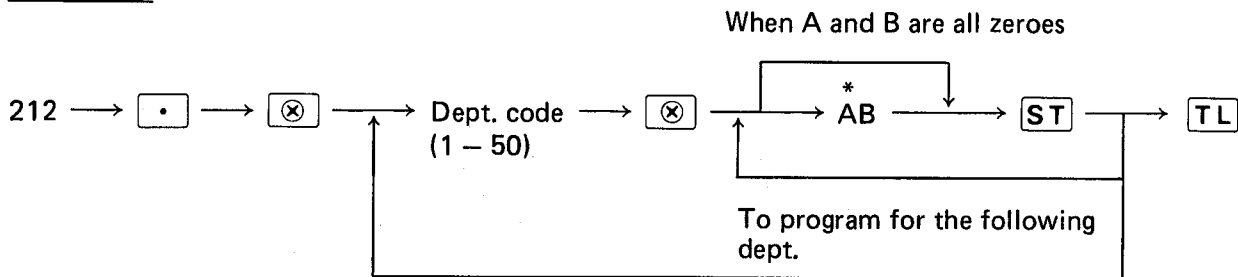

*AB is the same as $A \times 10^B$.

A: Significant digit (1 through 9)

B: 0 through 8

For example, presetting 14 (*100.00) here means that amount entries up to *99.99 are allowed in REG mode. (In this case, HALO limit is *99.99)

Key operation

2 1 2 [.] [⊗]
1 [⊗] 1 6 [ST]
8 [⊗] 1 5 [ST]
[TL]

Print


```
#212 *PGM2*

*D01          0.00
DPT.01        001101
SINGL      KPO01 LM16
OP&PR   G   03 C 0
*D08          0.00
DPT.08        000000
SINGL      KPO01 LM15
OP          G   01 C 0
```


(5) Programming of unit prices (PGM1 or PGM2 mode)

Program a unit price for each department.

Procedure

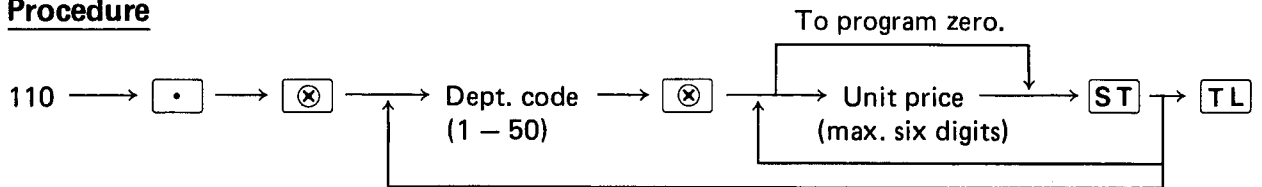


Key operation	Print
1 1 0 . ⊗	<pre> #110 *PGM2* *D10 1.50 DPT.10 000000 SINGL KPO01 LM18 PR G 01 C 0 </pre>
1 0 ⊗	
1 5 0 ST	
TL	

(6) Programming of department text (PGM2 mode)

You can program a maximum of 12 characters for each department.

Procedure

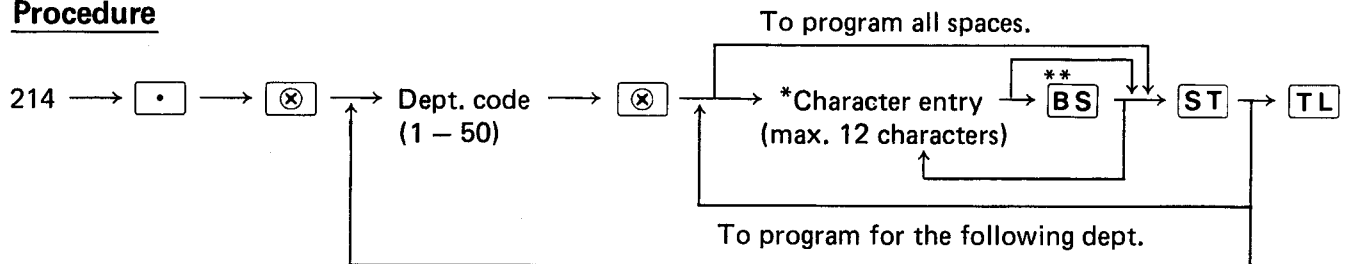

** Backspace key

*: The character entry can be achieved either by using character keys or by entering character codes.

1) When entering characters by using character keys:

-- y y y y y y y y y y y y --

y: character key

- Find out desired character key(s) on the alphanumeric key pad and press the key(s).
- If you press the **(DC)** key (double-size character key) before pressing a character key, that character is printed in double size.

- 2) When entering characters by using corresponding character codes
(see the alphanumeric character code table.)

ZZZ → 00

ZZZ is a character code.

- When entering characters by using character keys:

Key operation	Print
<div style="text-align: right; margin-bottom: 10px;">2 1 4 . ⊗</div> <div> 1 ⊗ (DC) S T E A K ST TL </div>	<div style="border: 1px solid black; padding: 10px; min-height: 150px;"> <pre>#214 *PGM2* *D01 0.00 STEAK 001101 SINGL KPO01 LM16 OP&PR G 03 C 0</pre> </div>

- When entering characters by using character codes:

Key operation	Print
<div style="text-align: right; margin-bottom: 10px;">2 1 4 . ⊗</div> <div style="text-align: right; margin-bottom: 10px;">1 ⊗</div> <div> 2 5 1 00 0 8 3 00 0 8 4 00 0 6 9 00 0 6 5 00 0 7 5 00 ST TL </div>	<div style="border: 1px solid black; padding: 10px; min-height: 150px;"> <pre>#214 *PGM2* *D01 0.00 STEAK 001101 SINGL KPO01 LM16 OP&PR G 03 C 0</pre> </div>

ALPHANUMERIC CHARACTER CODE TABLE


CODE	Char.	CODE	Char.	CODE	Char.	CODE	Char.	CODE	Char.	CODE	Char.
224	§	044	,	069	E	094	^	119	W	152	Ö
225	ä	045	—	070	F	095	—	120	X	153	é
226	ö	046	•	071	G	096	‘	121	y	154	è
227	ü	047	/	072	H	097	a	122	z	155	P _t
228	æ	048	0	073	I	098	b	123		156	i
229	φ	049	1	074	J	099	c	124		157	Ñ
230	á	050	2	075	K	100	d	125		158	ò
231	É	051	3	076	L	101	e	126	β	159	£
232	¨	052	4	077	M	102	f	127	Φ	240	Γ
233	[053	5	078	N	103	g	128		241	Δ
234]	054	6	079	O	104	h	135	←	242	θ
235	ñ	055	7	080	P	105	i	136	→	243	Λ
028	↑	056	8	081	Q	106	j	137	∞	244	Σ
032	(SPACE)	057	9	082	R	107	k	138	∞	245	π
033	!	058	:	083	S	108	l	139	◀	246	Σ
034	”	059	;	084	T	109	m	140	▶	247	Υ
035	#	060	<	085	U	110	n	143	↓	248	Φ
036	\$	061	=	086	V	111	o	144	Ç	249	Ψ
037	%	062	>	087	W	112	p	145	°	250	Ω
038	&	063	?	088	X	113	q	146	¿	251	DC
039	'	064	@	089	Y	114	r	147	ù	133	½
040	(065	A	090	Z	115	s	148	à		
041)	066	B	091	Ä	116	t	149	Æ		
042	*	067	C	092	Ö	117	u	150	Ø		
043	+	068	D	093	Ü	118	v	151	Å		

DC: Double Character Code

(7) Assigning print stations to departments (PGM2 mode)

- When you use a remote printer (kitchen printer), consult your local dealer.

Procedure

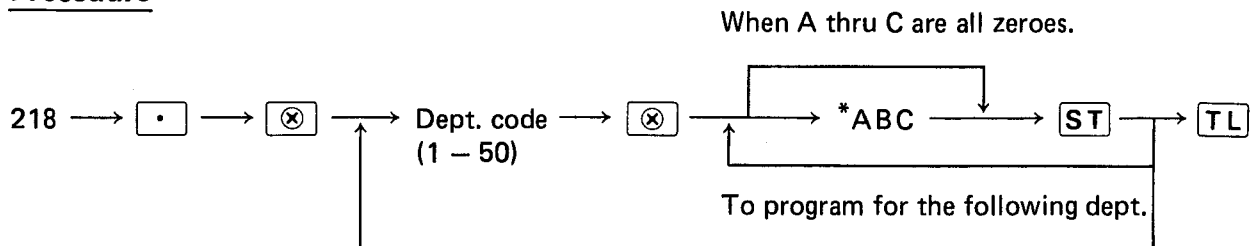

*A: In-line remote printer number = 0 thru 9 (0 = no output)

B: Printing on on-line remote printer Yes/No = 1/0

C: Printing on receipt Yes/No = 1/0

Key operation

2 1 8 . ⊗
9 ⊗ 1 0 1 ST
 TL


Print

```
#218  *PGM2*

*D09          0.00
DPT.09        100110
SINGL      KP101 LM18
OP          G  01 C  0
```

(8) Positioning of department keys (PGM2 mode)
Assign department codes to direct (menu) keys.

Procedure

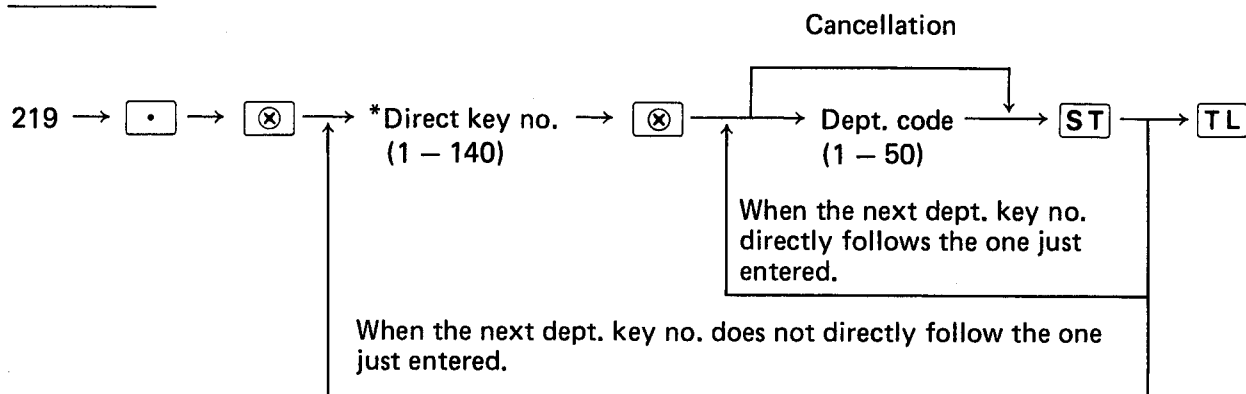

* Direct key no.: 1 - 140

Key operation	Print
2 1 9 . ⊗ 1 ⊗ 1 ST 1 0 ⊗ 1 0 ST TL	<pre>#219 *PGM2* 001KEY D01 010KEY D10</pre>

5. Programming for PLUs

A standard model is equipped with 100 PLUs.

Your machine has two kinds of PLU registration ways.

Direct PLU registration: Accomplished by depressing item key (direct PLU key) directly.

Indirect PLU registration: Accomplished by making an entry of PLU code, same as utilized in the current models.

Each PLU requires you to program the following.


- **PLU code (four digits)**
- **PLU type (PLU, subdepartment, time PLU, or delete mode)**
 - (i) If the PLU mode (i.e. automatic preset amount entry) is selected, individual PLU entries can be made by entering the assigned code and depressing the PLU/SUB key (or by depressing a direct PLU key).
 - (ii) If the subdepartment mode is selected, the entry of the assigned code and depression of the PLU/SUB key must then be followed by the entry of a unit price.
 - (iii) If the time PLU mode is selected, a corresponding PLU is used for time unit sale with depression of the STS (or ETS) key.
 - (iv) If the delete mode is selected, data programmed for each PLU is deleted.
- **Associate department**

When a PLU is associated with a department, the following functions of the PLU depend on the programming for the department.

 - (i) Sign & grouping (group 1 thru group 9)
 - (ii) Single item cash sale/double receipt/single receipt
 - (iii) HALO (for subdepartment only)
- **Item label (12 characters)**
- **First unit price and second unit price (max. six digits each)**
- **PLU level start number**
- **Tax status**
- **Stock quantity (max. seven digits)/minimum stock (max. six digits)**
- **Commission group (1 thru 3)**
- **Set PLU (up to 6 PLUs can be linked to each set PLU.)**
- **Print station**
- **Positioning of direct PLU keys**
- **Opening time (usable time range of the time PLU entry)**

(1) Definition of PLU codes and department assignment (PGM2 mode)

Procedure

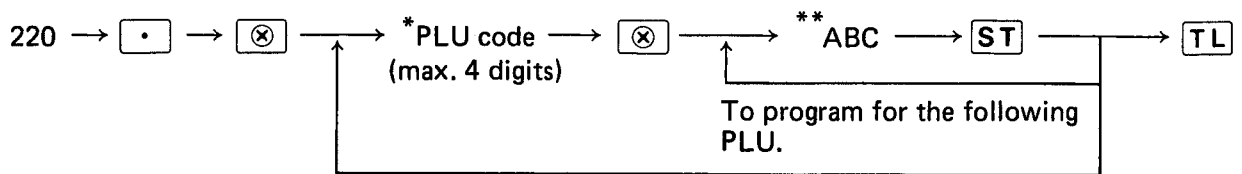

*PLU code: 1 thru 9999 (free code)

**A: PLU type

To prohibit PLU/subdept., enter 0.

To select the subdept. mode, enter 1.

To select the PLU mode, enter 2.

To select the time PLU mode, enter 3.

To select the delete mode, enter 4.

BC: Associate department code


Note: These parameters also can be programmed for a range of PLUs. (see 5. (13))

Key operation	Print
220 . ⊗	#220 *PGM2*
1 ⊗ 205 ST	*P0001 0.00
TL	D05 0.00
	PLU.0001 000000
	PLU KPO01 C 0

(2) Assigning of PLUs to commission groups (PGM2 mode)

You can assign PLUs (or subdepartments) to commission groups

Procedure

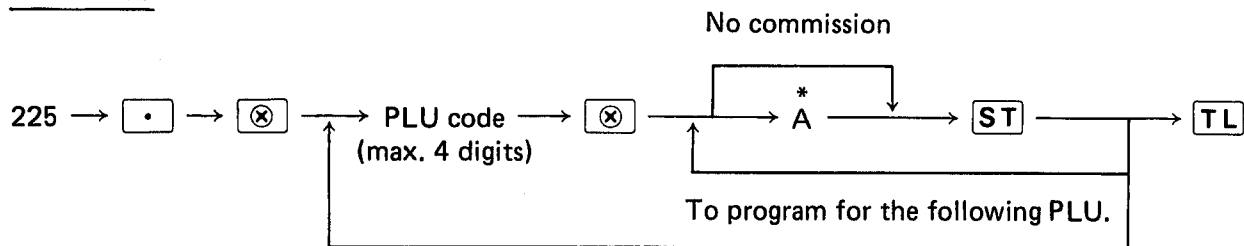


* A: Commission group = 0 – 3 (0 = no commission)

Key operation	Print
2 2 5 . ⊗ 1 ⊗ 1 ST TL	<div style="border: 1px solid black; padding: 10px; min-height: 150px;"> <pre>#225 *PGM2* *P0001 0.00 D05 0.00 PLU.0001 000000 PLU KPO01 C 1</pre> </div>

(3) Programming of tax status (PGM2 mode)

Procedure

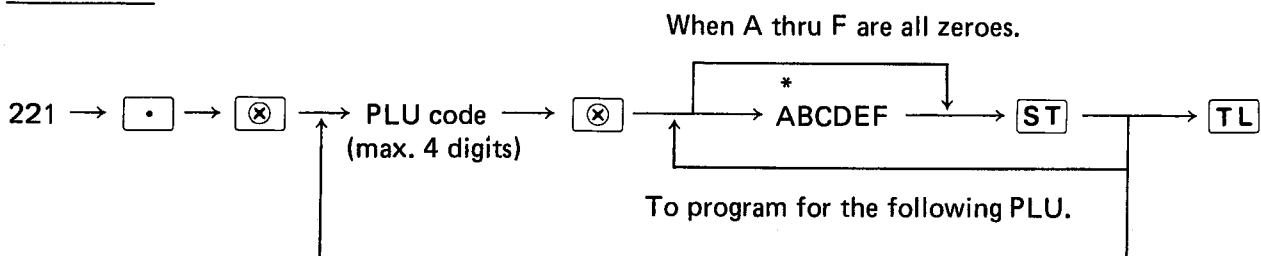

- *A: Taxable 6
To select taxable 6, enter 1; and to select another tax status, enter 0.
- B: Taxable 5
To select taxable 5, enter 1; and to select another tax status, enter 0.
- C: Taxable 4
To select taxable 4, enter 1; and to select another tax status, enter 0.
- D: Taxable 3
To select taxable 3, enter 1; and to select another tax status, enter 0.
- E: Taxable 2
To select taxable 2, enter 1; and to select another tax status, enter 0.
- F: Taxable 1
To select taxable 1, enter 1; and to select another tax status, enter 0.


Note: These parameters also can be programmed for a range of PLUs (see 5.(13))

Key operation	Print
2 2 1 . ⊗ 1 ⊗ 1 ST TL	<div style="border: 1px solid black; padding: 10px; min-height: 150px;"> <pre>#221 *PGM2* *P0001 0.00 D05 0.00 PLU-0001 000001 PLU KPO01 C 1</pre> </div>

(4) Programming of PLU level start codes (PGM2 mode)

You can program the start PLU code for each PLU level.

Procedure

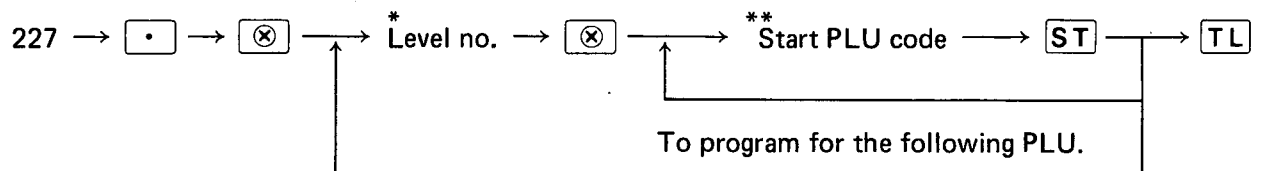

* Level no.: 1 thru 3


** Start PLU code: 1 thru 9999

Key operation	Print
2 2 7 . ⊗ 1 ⊗ 1 ST TL	<div style="border: 1px solid black; padding: 10px; min-height: 100px;"> <pre>#227 *PGM2* L-NO. 1 P0001</pre> </div>


(5) Programming of the opening time range (PGM2 mode)

Your machine prints the operating ratio of each time PLU to the opening time range in PLU reports.

Procedure

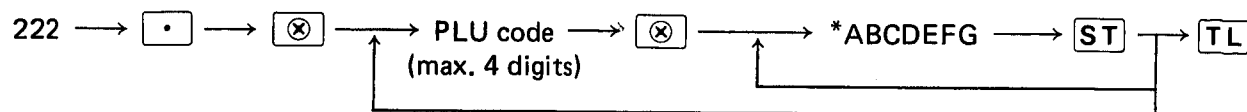

*ABCDEFG: Opening time range (in minutes) 1 thru 9999999


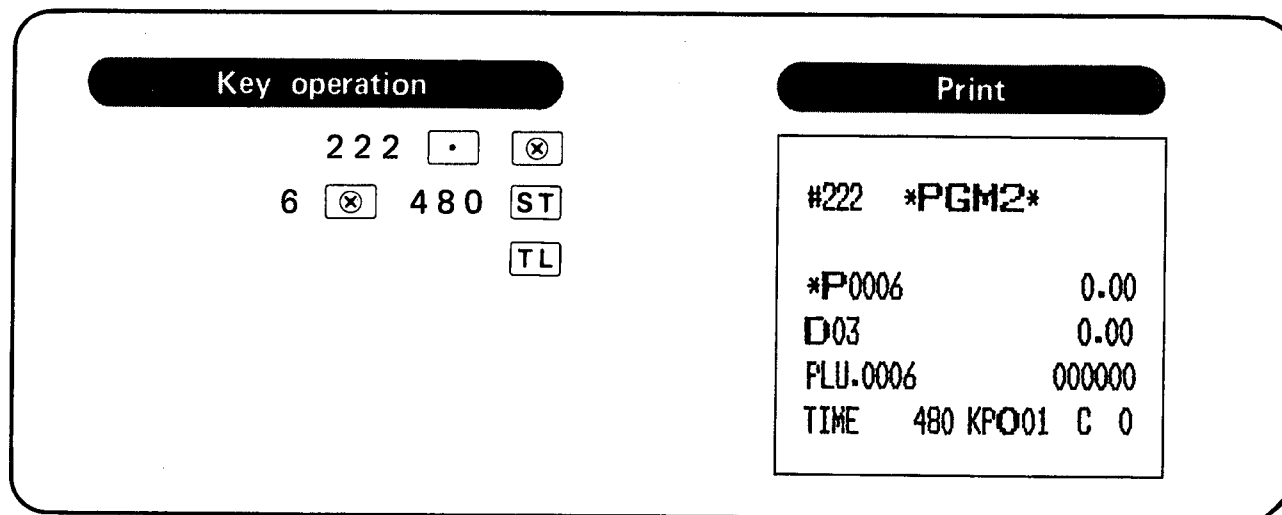


(6) Programming of set PLUs (PGM2 mode)

When two or more menu items, consisting of some PLUs, are to be programmed together, set PLUs should be specified.

Up to 6 PLUs can be linked to each set PLU.

Procedure

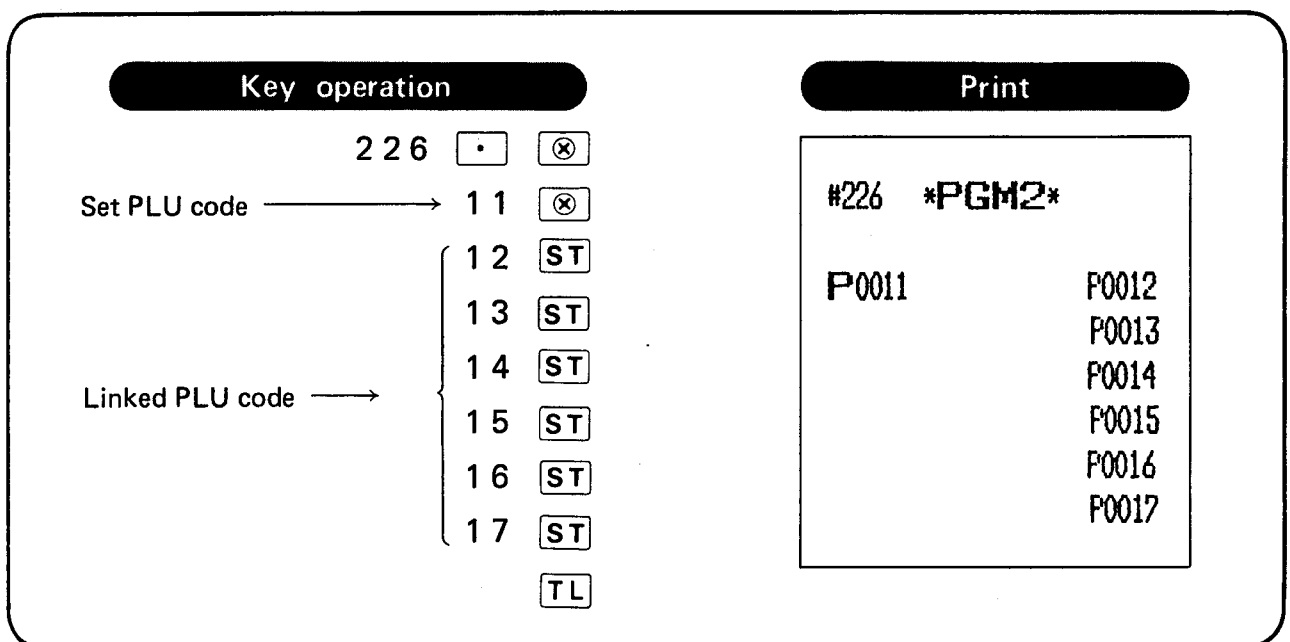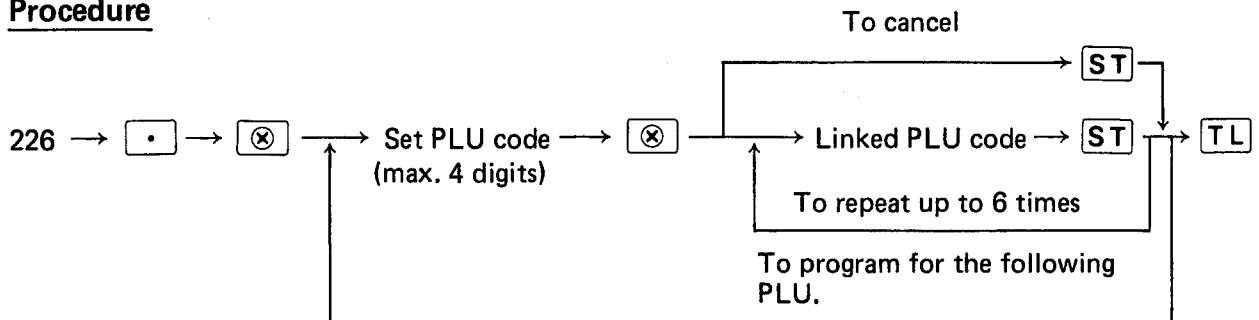


Note 1) Each linked PLU can be programmed in two or more set PLUs.

Note 2) Programming various parameters (e.g. associate dept., unit price, text...) of the set PLU is carried out the same way as for ordinary PLU.

(7) Programming of unit prices (PGM1 or PGM2 mode)

You can program two unit prices for each PLU.

Procedure

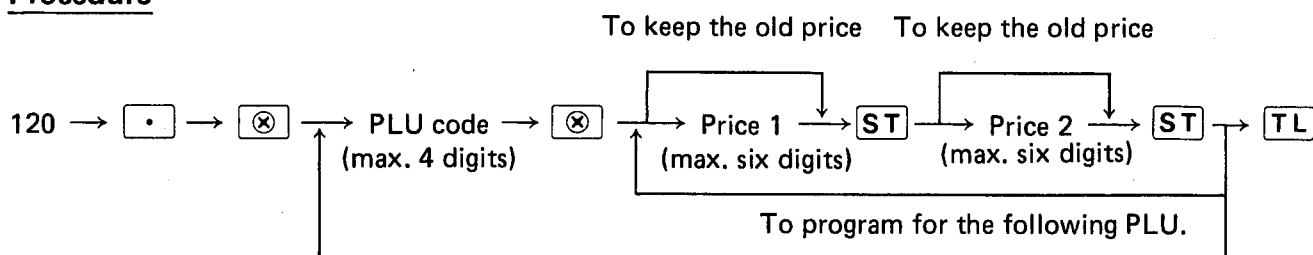


Key operation	Print
1 2 0 . ⊗	#120 *PGM2*
1 ⊗ 2 4 0 0 ST	*P0001 24.00
2 0 0 0 ST	D05 20.00
TL	PLU-0001 000001
	PLU KPO01 C 1

(8) Programming of PLU text (PGM2 mode)

You can program a maximum of 12 characters for each PLU.

Procedure

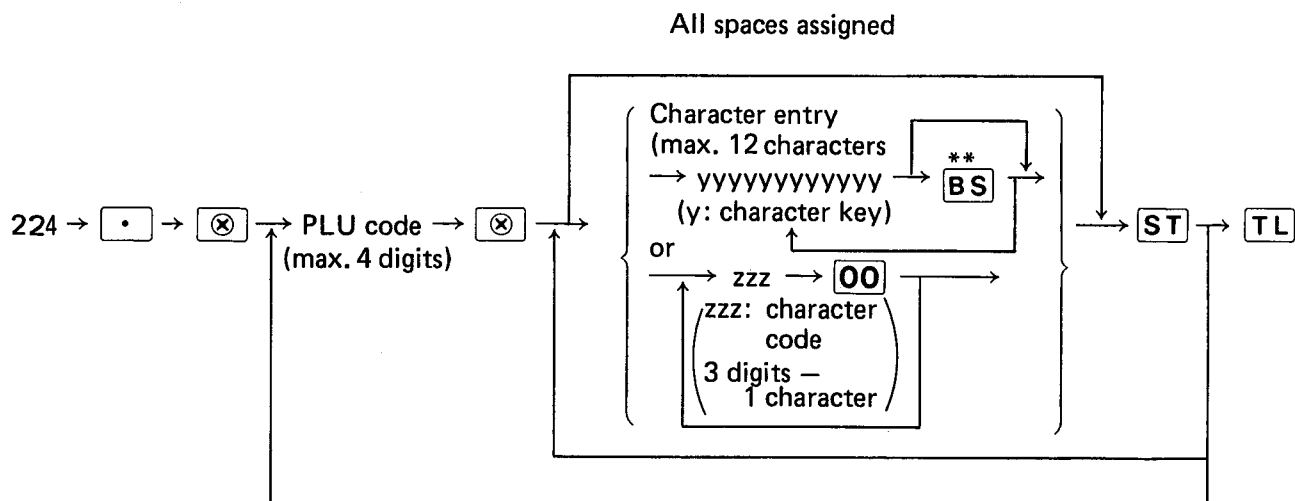


** Backspace key

(10) Positioning of direct PLU keys (PGM2 mode)

You can assign PLU codes to fixed keys and use those keys as direct PLU keys.

Procedure

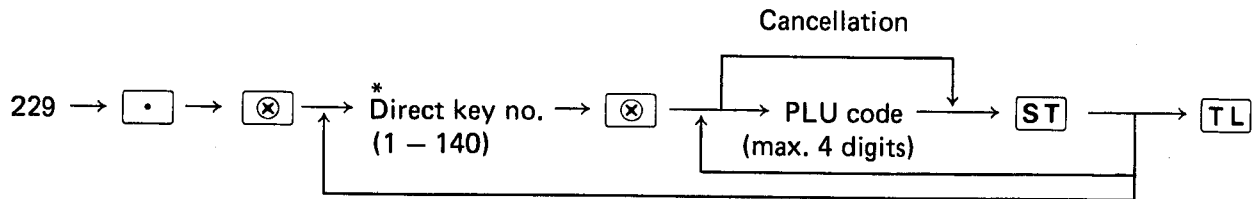


*Direct key no.: 1 – 140

Key operation	Print
2 2 9 . ⊗	#229 *PGM2*
2 0 ⊗ 1 0 ST	020KEY P0010
2 5 ⊗ 1 5 ST	025KEY P0015
TL	

(11) Programming of stock quantity (PGM1 or PGM2 mode)

- Assigning a new stock quantity (overwrite)


Procedure

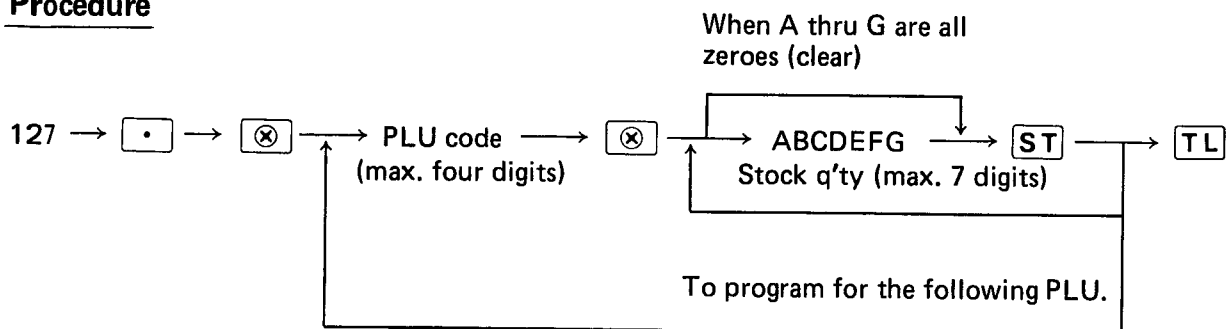

Key operation	Print
1 2 7 . ⊗ 2 ⊗ 1 0 0 0 0 ST TL	<pre> #127 *PGM2* P0002 0 10000 S 10000 </pre>

- Adding or subtracting a stock quantity

Procedure

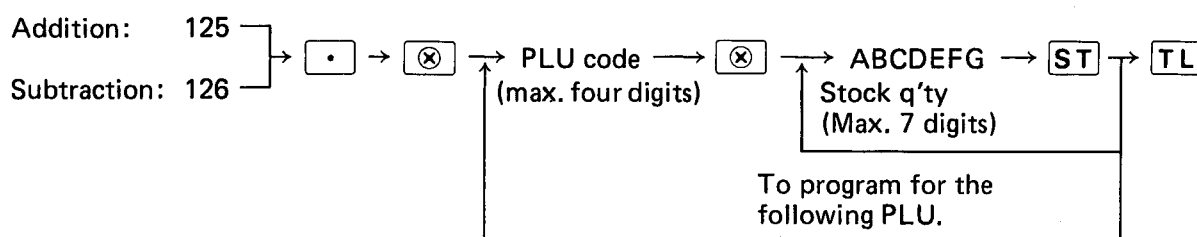

Adding the stock quantity


Key operation	Print
1 2 5 . ⊗ 1 2 ⊗ 4 0 0 0 ST TL	<pre> #125 *PGM2* P0012 0 4000 S 4000 </pre>

Subtracting the stock quantity

Key operation	Print
1 2 6 <input type="text" value="."/> <input type="text" value="⊗"/>	<div>#126 *PGM2*</div> <div>P0011 0</div> <div>S -1500</div> <div>S -1500</div>

(12) Programming of minimum stock quantity (PGM1 or PGM2 mode)

Procedure

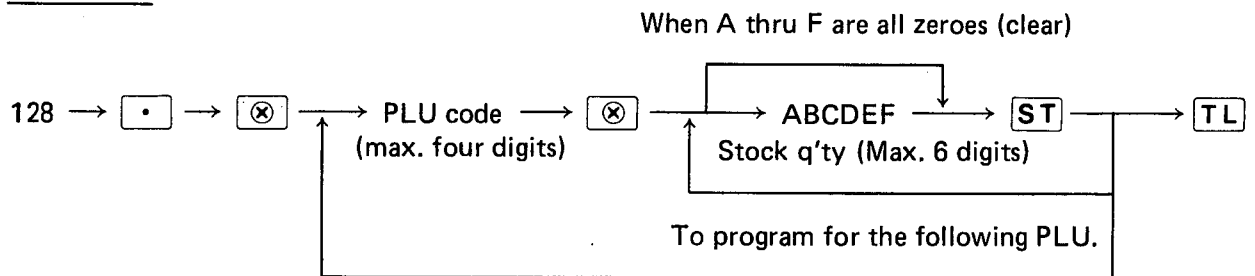


Key operation	Print
1 2 8 <input type="text" value="."/> <input type="text" value="⊗"/>	<div>#128 *PGM2*</div> <div>P0011 M 1000</div>
1 1 <input type="text" value="⊗"/>	
1 0 0 0 <input type="text" value="ST"/>	
<input type="text" value="TL"/>	

(13) Programming for a range of PLUs (PGM2 mode)

- Definition of PLU codes and department assignment

Procedure

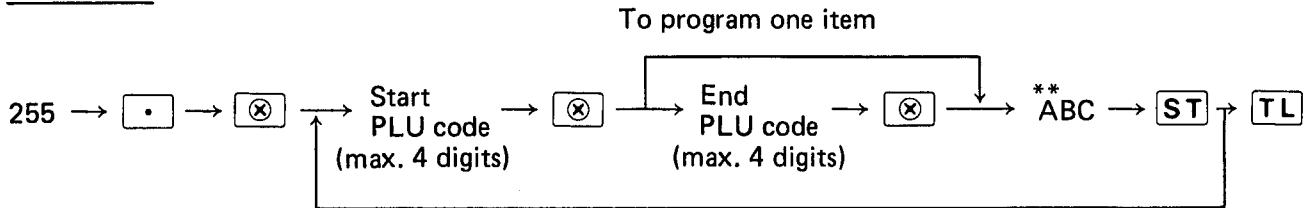

**

A: PLU type

To prohibit PLU/subdept., enter 0.

To select the subdept. mode, enter 1.

To select the PLU mode, enter 2.

To select the time PLU mode, enter 3.


To select the delete mode, enter 4.

BC: Associate department code

Key operation	Print
2 5 5 • ⊗	#255 *PGM2*
1 2 ⊗ 1 4 ⊗	P0012-P0014
2 0 5 ST	D05
TL	PLU

- Programming of tax status

Procedure

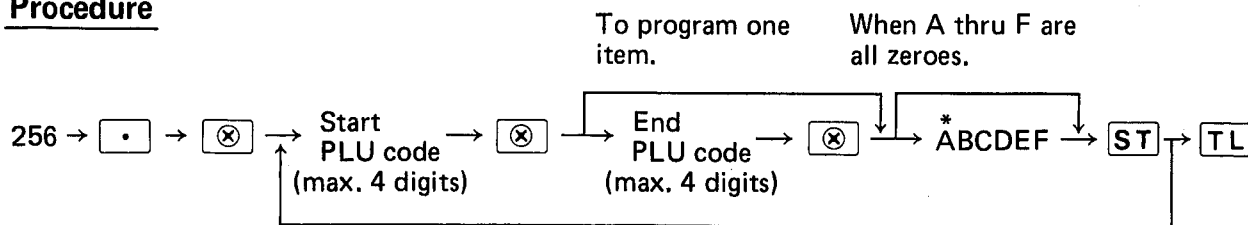

***A: Taxable 6**

To select taxable 6, enter 1; and to select another tax status, enter 0.

B: Taxable 5

To select taxable 5, enter 1; and to select another tax status, enter 0.

C: Taxable 4

To select taxable 4, enter 1; and to select another tax status, enter 0.

D: Taxable 3

To select taxable 3, enter 1; and to select another tax status, enter 0.

E: Taxable 2

To select taxable 2, enter 1; and to select another tax status, enter 0.


F: Taxable 1

To select taxable 1, enter 1; and to select another tax status, enter 0.

Key operation	Print
2 5 6 . ⊗	<div>#256 *PGM2*</div> <div>P0012-P0014</div> <div>000001</div>

- Assigning print stations to PLUs

Procedure

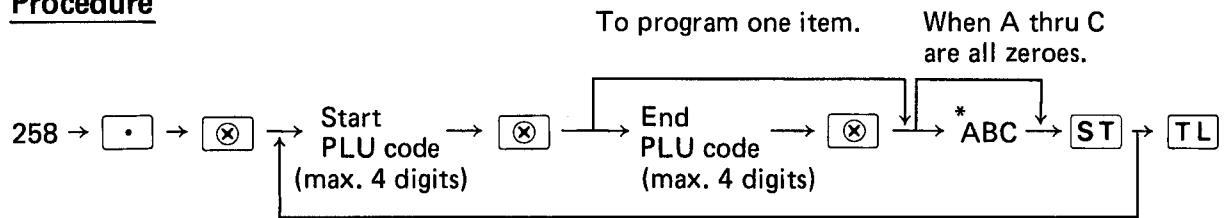

- *A: In-line remote printer number = 0 thru 9 (0 = no output)
- B: Printing on on-line remote printer Yes/No = 1/0
- C: Printing on receipt Yes/No = 1/0

Key operation	Print
2 5 8 . ⊗ 1 2 ⊗ 1 4 ⊗ 1 0 1 ST TL	<pre> #258 *PGM2* P0012-P0014 KP101 </pre>

(14) Programming of time unit parameter (PGM2 mode)

Procedure

223 → [.] → [⊗] → *ABCD → [TL]

*A: Multiple entry of time PLU (that is already in use on another guest check)
allowed/disallowed = 1/0

BC: Time rounding range (in minutes) 1 thru 60

D: Rounding method raising to a unit/disregarding = 1/0


Key operation	Print
2 2 3 [.] [⊗]	#223 *PGM2*
1 5 1 [TL]	0 15 1

6. Function parameter programming

(1) Programming the rate (PGM1 or PGM2 mode)

You can program a % rate, foreign currency exchange rate, VAT (tax) rate, commission rate, or service charge for the functions shown in the table below.

Procedure

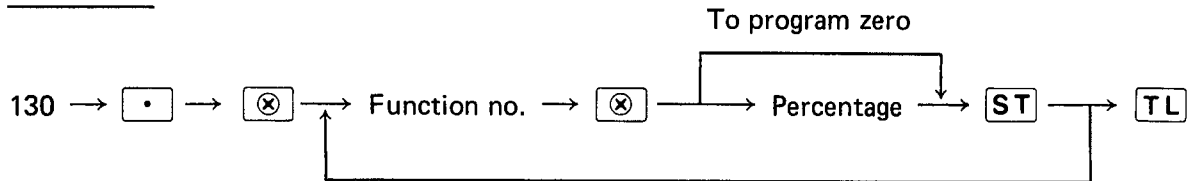


Function	Function no.	Percentage
% 1	4	a maximum of 3-digit integer + 2-digit decimal (0.00 – 100.00)
% 2	5	
% 3	6	
% 4	7	
VAT/TAX 1	17	a maximum of 2-digit integer + 4-digit decimal (0.0000 – 99.9999)
VAT/TAX 2	18	
VAT/TAX 3	19	
VAT/TAX 4	20	
VAT/TAX 5	21	
VAT/TAX 6	22	
FOREIGN CURRENCY 1	56	a maximum of 4-digit integer + 4-digit decimal (0.0000 – 9999.9999)
FOREIGN CURRENCY 2	57	
FOREIGN CURRENCY 3	58	
COMMISSION 1	66	a maximum of 3-digit integer + 2-digit decimal (0.00 – 999.00)
COMMISSION 2	67	
COMMISSION 3	68	
SERVICE CHARGE	73	a maximum of 2-digit integer + 2-digit decimal (0.00 – 99.99)

Key operation	Print
130	<div style="border: 1px solid black; padding: 5px; margin: 0 auto; width: 80%;"> #130 *PGM2* F005 %2 SETL 10.00% 100.00% </div>
.	
5	
1000	
TL	

(2) Function programming 1 (for CA, CH, CR) (PGM2 mode)

Procedure

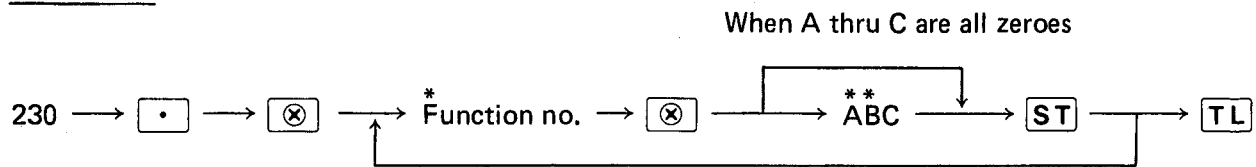

*Function no.;

CASH = 45

CHECK1 = 46

CHECK2 = 47

CREDIT1 = 48

CREDIT2 = 49

CREDIT3 = 50

CREDIT4 = 51

CREDIT5 = 52

CREDIT6 = 53

CREDIT7 = 54

CREDIT8 = 55

**

A: Drawer open allowed/disallowed = 1/0

B: Simply depression of a corresponding medium key compulsory/non-compulsory = 1/0

C: Amount tendering

(for cash and check) compulsory/non-compulsory = 1/0

(for credit) compulsory/inhibited = 1/0

Key operation

2 3 0 [.] [⊗]
 4 5 [⊗] [ST]
 4 6 [⊗] 1 [ST]
 [TL]

Print

#230 *PGM2*

F045 CASH

000 LM. 18

CH-LM. 18


F046 CHECK1

001 LM. 18

CH-LM. 18

(3) Function programming 2 (for %, \ominus) (PGM2 mode)

Procedure

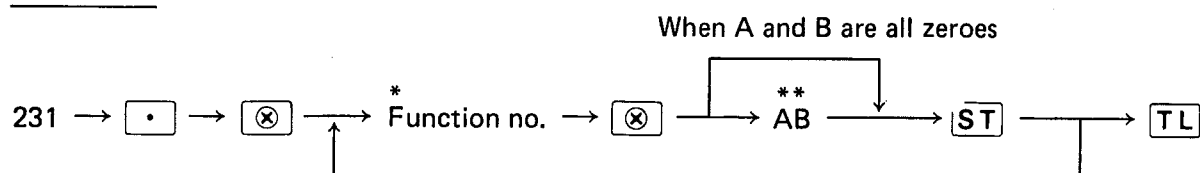

*

Function	Function no.	A	B
% 1	4	○	○
% 2	5	○	○
% 3	6	○	○
% 4	7	○	○
\ominus 1	8		○
\ominus 2	9		○

**

A: Sign (only for %1 thru %4) $-/+ = 1/0$

B: Subtotal or item selection

(for %1 thru %4) subtotal %/item % = 1/0


(for \ominus 1 and \ominus 2) subtotal \ominus /item \ominus = 1/0

Key operation	Print
2 3 1 . ⊗ 4 ⊗ 1 0 ST TL	<div style="border: 1px solid black; padding: 10px; min-height: 150px;"> <p>#231 *PGM2*</p> <p>F004 %1</p> <p>ITEM -10.00%</p> <p style="text-align: right;">100.00%</p> </div>

(4) Function programming 3 (HALO) (PGM2 mode)

Your machine allows you to program the upper limit for the following functions.

Procedure

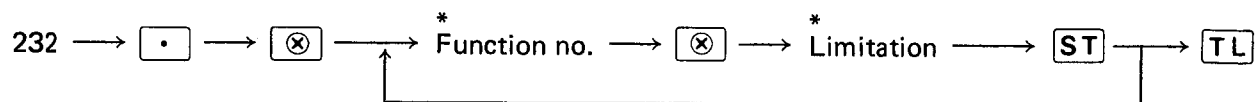


*

Function	Function no.	Limitation
% 1	4	Percentage limitation a maximum of 3-digit integer + 2-digit decimal (0.01 ~ 100.00)
% 2	5	
% 3	6	
% 4	7	
⊖ 1	8	Entry limitation 2 digits (AB) AB is the same as $A \times 10^B$ A: Significant digit (1 thru 9) B: 0 thru 8 (e.g. 14 = *100.00)
⊖ 2	9	
RA1	40	
RA2	41	
PO	42	
DEPOSIT (+)	43	
DEPOSIT (-)	44	
CASH	45	
CHECK 1	46	
CHECK 2	47	
CREDIT 1	48	
CREDIT 2	49	
CREDIT 3	50	
CREDIT 4	51	
CREDIT 5	52	
CREDIT 6	53	
CREDIT 7	54	
CREDIT 8	55	
CID (sentinel amount)	59	Amount limitation max. 9 digits (*0.01 ~ *9999999.99)

Key operation	Print
2 3 2 . ⊗ 8 ⊗ 1 6 ST TL	<pre>#232 *PGM2* F008 (-)1 SETL LM. 16</pre>

(5) Programming of function text (PGM2 mode)

Procedure

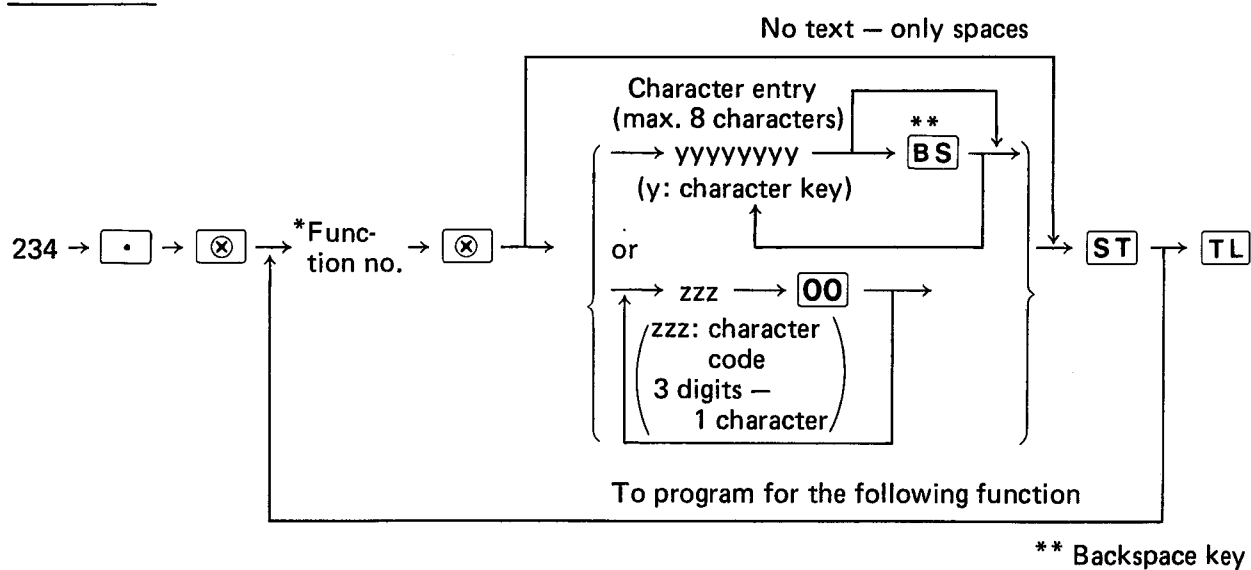

* Function no.: See "LIST OF FUNCTION TEXTS" described later.

Key operation	Print
2 3 4 . ⊗ 4 5 ⊗ CASH ST TL	<pre>#234 *PGM2* F045 CASH 000 LM. 18 CH-LM. 18</pre>

LIST OF FUNCTION TEXTS

Func. no.	Function	Default text
1	Dept. (+) total	* DEPT TL
2	Dept. (—) total	* DEPT (—)
3	Hash dept. total	* HASH TL
4	% 1	%1
5	% 2	%2
6	% 3	%3
7	% 4	%4
8	(—)1	(—) 1
9	(—)2	(—) 2
10	DIFFER	DIFFER
11	Taxable 1 subtotal	TAXABLE1
12	Taxable 2 subtotal	TAXABLE2
13	Taxable 3 subtotal	TAXABLE3
14	Taxable 4 subtotal	TAXABLE4
15	Taxable 5 subtotal	TAXABLE5
16	Taxable 6 subtotal	TAXABLE6
17	VAT/Tax 1	VAT 1
18	VAT/Tax 2	VAT 2
19	VAT/Tax 3	VAT 3
20	VAT/Tax 4	VAT 4
21	VAT/Tax 5	VAT 5
22	VAT/Tax 6	VAT 6
23	Non taxable subtotal	NON TAX
24	Net 1 total	NET1
25	Net 2 total	NET2
26	Refund	REFUND
27	∞	∞
28	∞ mode total	∞ MODE
29	MGR ∞	MGR ∞
30	Hash refund	HASH RF
31	Hash ∞	HASH ∞
32	VAT shift	VAT SFT

Func. no.	Function	Default text
33	VAT delete	TAX DELE
34	Validation print count	VP CNT
35	Slip count	SLIP CNT
36	No sale	NO SALE
37	Previous balance	* * * PBAL
38	New balance	* * * NBAL
39	Guest check count	G. C. CNT
40	RA 1	* * * RA1
41	RA 2	* * * RA2
42	PO	* * * PO
43	Deposit (+)	DEPOSIT
44	Deposit (—)	DEPOS (—)
45	Cash	CASH
46	Check 1	CHECK1
47	Check 2	CHECK2
48	Credit 1	CREDIT1
49	Credit 2	CREDIT2
50	Credit 3	CREDIT3
51	Credit 4	CREDIT4
52	Credit 5	CREDIT5
53	Credit 6	CREDIT6
54	Credit 7	CREDIT7
55	Credit 8	CREDIT8
56	Currency exchange 1	EXCHNG1
57	Currency exchange 2	EXCHNG2
58	Currency exchange 3	EXCHNG3
59	CID	* * * CID
60	CASH IS	CASH IS
61	Cash/check in drawer	CA/CH ID
62	Check change	CHK/CG
63	Guest	GUEST
64	Transfer out	TRAN. OUT


Func. no.	Function	Default text
65	Transfer in	TRAN. IN
66	Commission sale 1	COM. SAL1
67	Commission sale 2	COM. SAL2
68	Commission sale 3	COM. SAL3
69	Non commission	NON COM
70	Order total	ORDER TL
71	Paid total	PAID TL
72	Working time	WK TIME
73	Service charge	SER. CHRG
74	Time sales total	TIME TTL
75	NET 1	NET 1
76	NET 2	NET 2
77	NET 3	NET 3
78	NET 4	NET 4
79	NET 5	NET 5
80	NET 6	NET 6
81	Subtotal	SUBTOTAL
82	Merchandise subtotal	MDS SBTL
83	Difference subtotal	DIFF ST
84	Total	* * * TOTAL
85	Change	CHANGE
86	Due	DUE
87	Sales q'ty	ITEMS
88	Start time	START
89	Transfer cash	TRANSFER
90	Void mode title	VOID
91	Copy receipt title	COPY
92	Bill total title	B. T.
93	Guest check receipt title	G. C. RCPT
94	Guest check copy title	G. C. COPY
95	Slip print journal message	SLIP PR.
96	Slip next page	NEXT P.

Func. no.	Function	Default text
97	Average	AVE.
98	Group	GROUP
99	Group total	GROUP TL
100	CCD	CCD
101	CCD difference	DIFFER
102	Order total – Paid total	O–P
103	Commission amount 1	COM. AMT1
104	Commission amount 2	COM. AMT2
105	Commission amount 3	COM. AMT3
106	Bill balance	BILL BAL
107	Free guest look up	FREE GLU
108	Turnover per table	T. TABLE
109	Turnover per guest	T. GUEST
110	Turnover per bill	T. BILL
111	Item per guest	I. GUEST
112	Item per bill	I. BILL
113	Ave. price per item	AVE. ITEM
114	GT report title	* G T *
115	Dept. report title	* D P T *
116	Group report title	* GROUP *
117	PLU report title	* P L U *
118	Stock report title	* STOCK. *
119	Transaction report title	* TRANS. *
120	CID report title	* C I D *
121	Clerk report title	* CLERK *
122	Cashier report title	* CASH. *
123	Hourly report title	* HOURLY *
124	Daily report title	* DAILY *
125	GLU/PBLU report title	* G L U *
126	Chief report title	* CHIEF *
127	Sales report title	* SALES *
128		

(6) Programming of the change limit (PGM2 mode)

You can program a cash change limit for each medium tendering.

Procedure

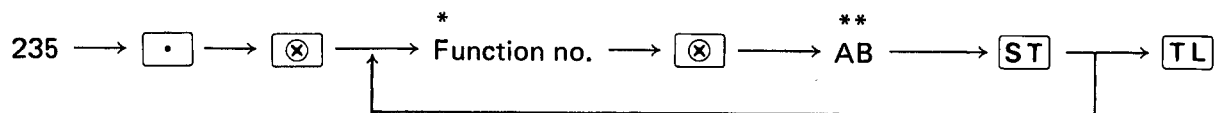

*

Function No.	Function
45	CASH
46	CHECK1
47	CHECK2
48	CREDIT1
49	CREDIT2
50	CREDIT3
51	CREDIT4
52	CREDIT5
53	CREDIT6
54	CREDIT7
55	CREDIT8

**AB: AB is the same as $A \times 10^B$

A: Significant digit (1 thru 9)


B: 0 thru 8

Key operation	Print
235 [.] [⊗]	#235 *PGM2*
45 [⊗] 18 [ST]	F045 CASH
[TL]	000 LM. 18
	CH-LM. 18

(7) Programming of the operating mode (PGM2 mode)

Your machine allows you to program the operating mode for the following functions.

Procedure

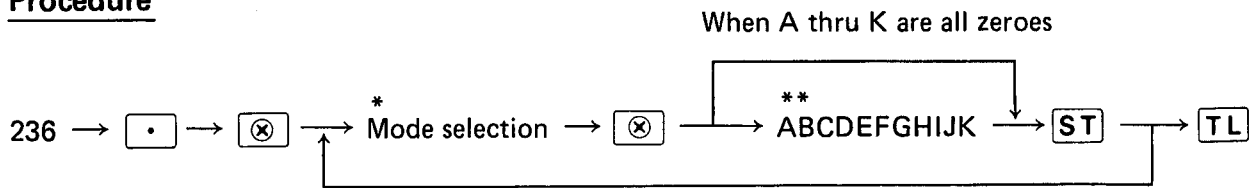

*Mode selection: (1 or 2)

1 = in REG mode

2 = in MGR mode


**

A: RA1	disallowed/allowed = 1/0
B: RA2	disallowed/allowed = 1/0
C: PO	disallowed/allowed = 1/0
D: Past void	disallowed/allowed = 1/0
E: Last void	disallowed/allowed = 1/0
F: Refund	disallowed/allowed = 1/0
G: Guest check receipt	disallowed/allowed = 1/0
H: Transfer cash	disallowed/allowed = 1/0
I: Level shift	disallowed/allowed = 1/0
J: Price shift	disallowed/allowed = 1/0
K: Void mode	disallowed/allowed = 1/0

Key operation	Print
236 . F1	#236 *PGM2*
1 F1	
1000 ST	00000001000 IN REG
TL	

(8) Programming of the tax exemption limit (PGM2 mode)

Procedure

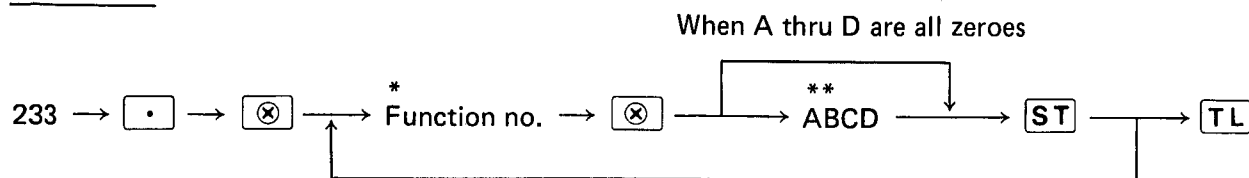

*Function no.:

- 17 = VAT/Tax 1
- 18 = VAT/Tax 2
- 19 = VAT/Tax 3
- 20 = VAT/Tax 4
- 21 = VAT/Tax 5
- 22 = VAT/Tax 6

**


ABCD: Tax exemption limit (0 thru *99.99)

Key operation	Print
233 . ⊗	#233 *PGM2*
19 ⊗ 100 ST	F019 VAT 3
TL	0.0000
	1.00

(9) Programming a denomination of bank note (PGM2 mode)

You can program a denomination for each bank note key (1 ~ 3).

Procedure

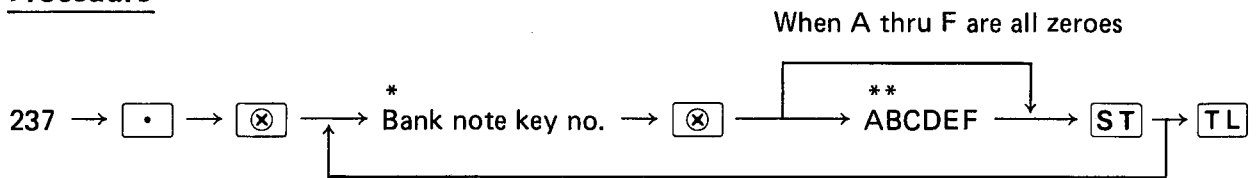

*Bank note key no.: 1 thru 3

**

ABCDEF: Denomination of bank note (0 thru *9999.99)


(0 = prohibits a corresponding bank note key)

Key operation	Print
237 . (X)	#237 *PGM2*
1 (X) 1000 ST	K-NO. 1 10.00
TL	

7. Clerk programming

(1) Clerk code definition (PGM1 or PGM2 mode)

Procedure

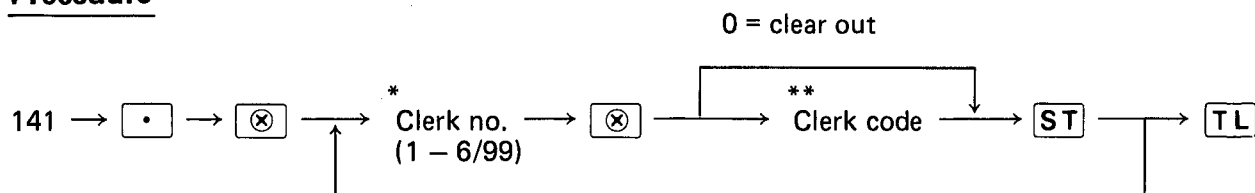

*Clerk no.: 1 thru 6 (Standard)/max. 99

**Clerk code

- When the real clerk key system has been selected : 1 thru 6 (standard)/max. 99
- When the push-button clerk key system has been selected : 1 thru 15

When either the real clerk key system or the push button clerk key system has been selected, you can specify the following keys by entering the corresponding numbers.

A = 1	L = 7	S = 13
B = 2	M = 8	T = 14
D = 3	N = 9	U = 15
E = 4	P = 10	"01" = 16
H = 5	Q = 11	} }
K = 6	R = 12	"84" = 99

- When the clerk code entry system has been selected : 1 thru 99

Note: The standard machine allows the use of clerk keys A thru K (or 1 to 6) alone when the real clerk key system has been selected. So only those keys are supplied with the machine.
Other clerk keys are optionally available.

Key operation

1 4 1 [.] [⊗]
2 [⊗] 2 [ST]
[TL]


Print

```
#141  *PGM2*

02CLK#02
CLERK02      0000000
              0001-9999
```

(2) Assigning of the names of clerks (PGM1 or PGM2 mode)

Procedure

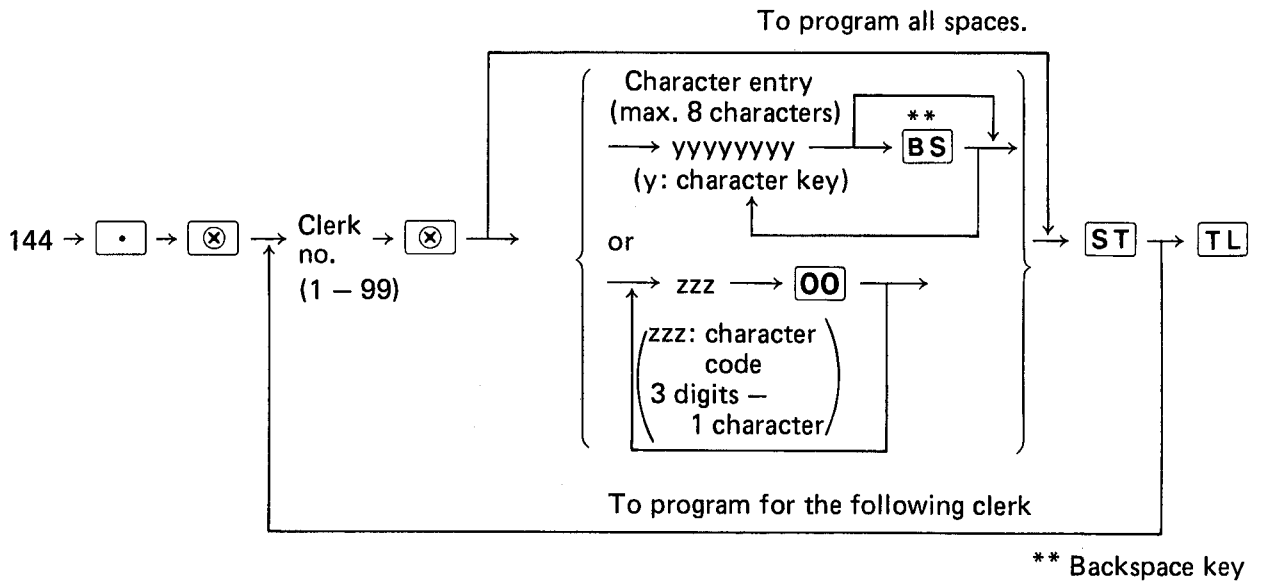


Key operation	Print
1 4 4 . [Enter]	#144 *PGM2*
2 [Enter]	02CLK#02
PETERS [ST]	PETERS 0000000
[TL]	0001-9999

(3) Functional programming (PGM2 mode)

You can program functions A thru G shown in the table below for clerks.

Procedure

When A thru G are all zeroes.

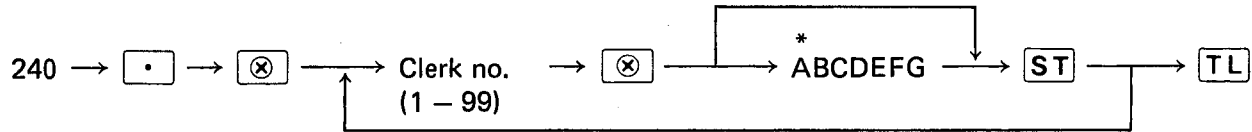

*

Item	Function	Selection	Enter
A	Guest look up/previous balance look up	Compulsory	1
		Non-compulsory	0
B	Guest check copy	Disable	1
		Enable	0
C	Slip printing	Compulsory	1
		Non-compulsory	0
D	VAT status shift	State	1
		Not	0
E	Price level	Price 2 active	1
		Price 1 active	0
F	Working time control	Yes	1
		No	0
G	Drawer no.	Drawer 1 - 4/no use	1-4/0

Key operation

240 . ⊗
 2 ⊗
 1 ST
 TL

Print


```
#240  *PGM2*

02CLK#02
PETERS      0000001
              0001-9999
```

(4) Programming of guest check (GLU/PBLU) codes (PGM2 mode)

You can program the range of guest check codes available to each individual clerk.

Procedure

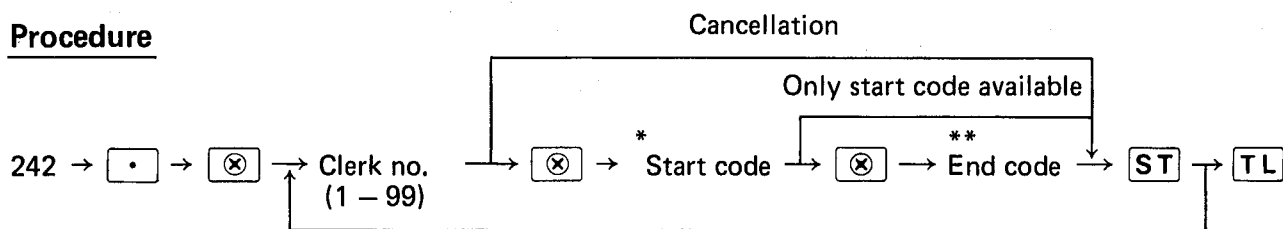

*Start code: 1 thru 9999


**End code: 1 thru 9999

Key operation	Print
2 4 2 [.] [⊗]	#242 *PGM2*
2 [⊗]	
1 0 0 1 [⊗]	02CLK#02
1 0 0 3 [ST]	PETERS 0000001
[TL]	1001-1003

8. Cashier programming

(1) Cashier code definition (PGM1 or PGM2 mode)

Procedure

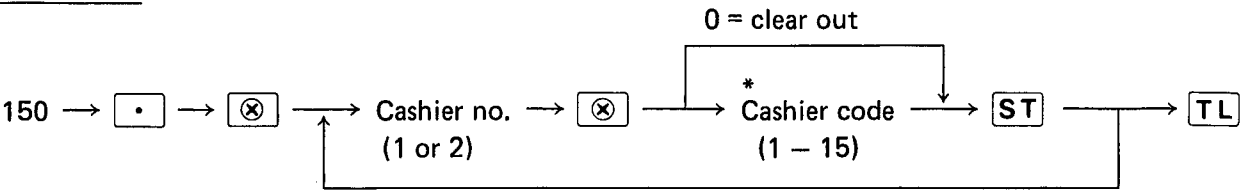

* Cashier code:

A = 1	N = 9
B = 2	P = 10
D = 3	Q = 11
E = 4	R = 12
H = 5	S = 13
K = 6	T = 14
L = 7	U = 15
M = 8	

Key operation

1 5 0 . ⊗

1 ⊗

1 ST

TL

Print


#150 *PGM2*

01CSR.A

CSR01 00.

(2) Programming of the cashier name (PGM1 or PGM2 mode)

Procedure

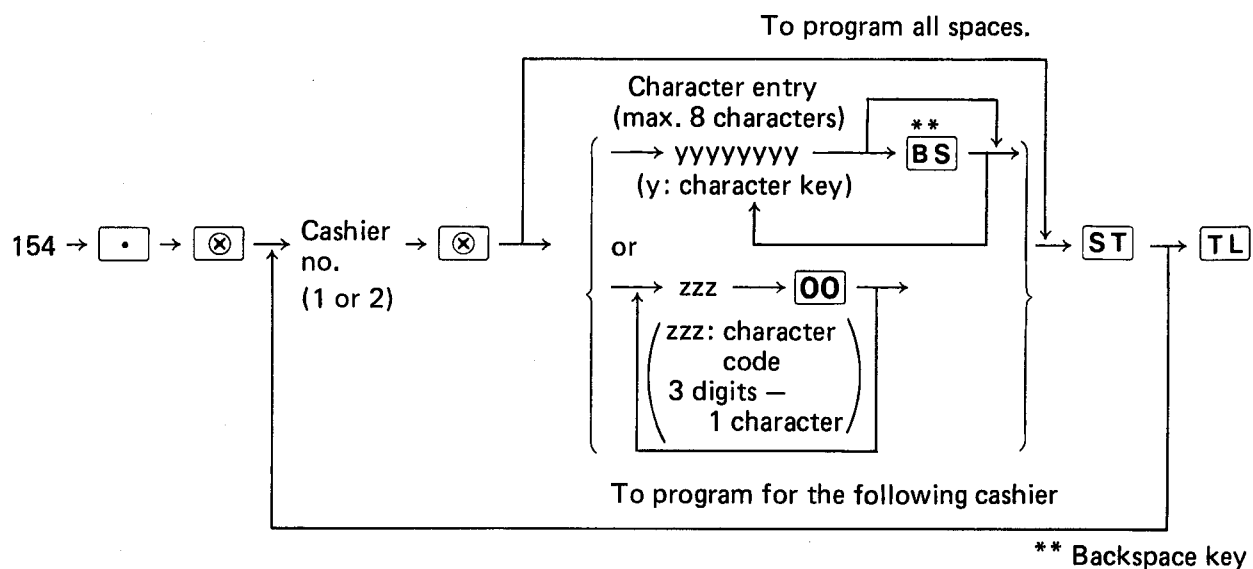


Key operation	Print
1 5 4 [.] [Enter]	#154 *PGM2*
1 [Enter]	01CSR.A
MEYER [ST]	MEYER DO.
[TL]	

(3) Assigning cashiers to drawers (PGM2 mode)

You can assign drawers available to individual cashiers.

Procedure

To program 0 (= drawer remains closed)

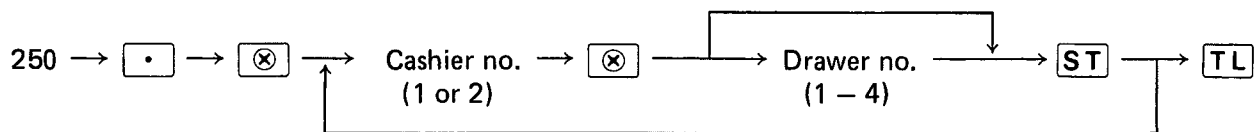

Key operation

2 5 0 • ⊗
1 ⊗ 1 ST
 TL

Print

#250 *PGM2*


01CSR.A

MEYER

01.

9. Programming of validation printing and slip printing (PGM2 mode)

Procedure

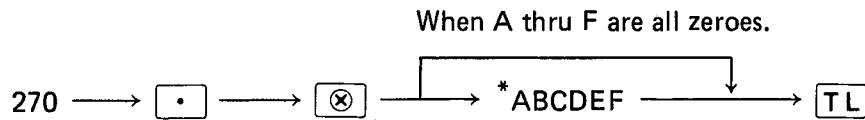


- *
- AB: Slip initial feed lines (0 ~ 64 lines)
- CD: Maximum number of slip print lines (0 ~ 99 lines)
- E: Slip printing counter (0 or 1 time)
To inhibit slip printing, enter 0.
- F: Validation printing counter (0 or 1 time)
To inhibit validation printing, enter 0.

Key operation	Print
270 . X	#270 *PGM2*
1 TL	00 00 0 1

10. Programming for optional feature selection (PGM2 mode)

Procedure

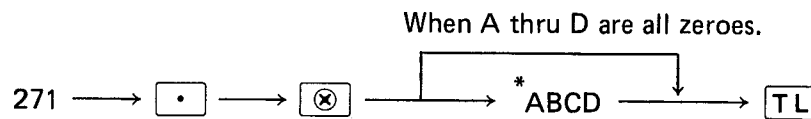

- | | |
|--|---|
| *A: Item printing on slip | Skip/print = 1/0 |
| B: Journal select printing (plus dept./plus PLU) | Yes/No = 1/0 |
| C: PLU price shift mode | Lock shift mode/automatic return mode = 1/0 |
| D: PLU level shift mode | Lock shift mode/automatic return mode = 1/0 |

Note) Automatic return mode: The price/level status are changed each other only when the shift key has been pressed.


Lock shift mode: The price/level status stays unchanged until the shift key is pressed again.

Key operation	Print
<div style="display: flex; justify-content: space-between; align-items: center;"> 2 7 1 <div style="display: flex; gap: 10px;"> <div style="border: 1px solid black; padding: 2px 5px;">.</div> <div style="border: 1px solid black; padding: 2px 5px;">⊗</div> </div> </div> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 10px;"> 1 <div style="border: 1px solid black; padding: 2px 5px;">TL</div> </div>	<div style="border: 1px solid black; padding: 10px; min-height: 100px;"> <div style="display: flex; justify-content: space-between;"> #271 *PGM2* </div> <div style="text-align: right; margin-top: 50px;">0001</div> </div>

11. Guest check code (GLU/PBLU code) programming (PGM2 mode)

Consecutive guest checks can be added to or deleted from the list of usable check codes with two program job codes (#280, #281)

Procedure

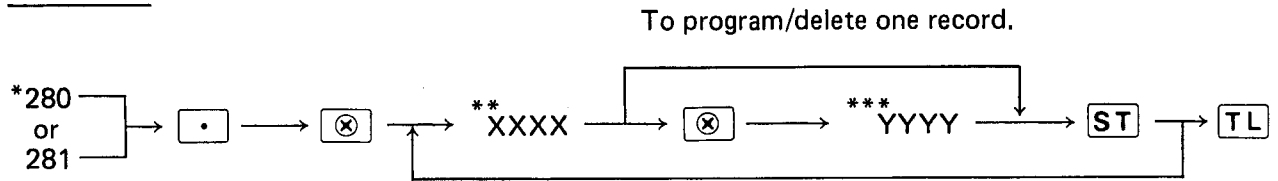

*280: Designate usable guest check(s)

281: Delete guest check(s)

**


XXXX: Start GLU/PBLU code 1 thru 9999 (free code)

YYYY: End GLU/PBLU code 1 thru 9999 (free code)

Key operation	Print
280 . ⊗	#280 *PGM2*
1000 ⊗	GLU 1000-1005
1005 ST	CREATE
TL	

12. Free text programming (PGM2 mode)

Procedure

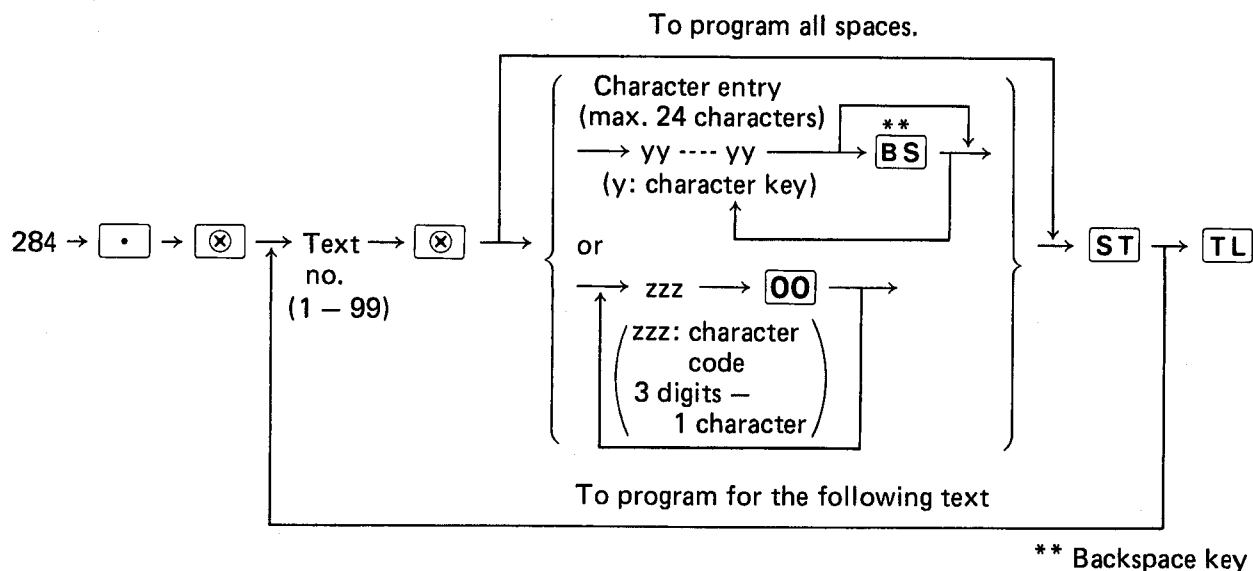


Key operation		Print	
284	[.] [⊗]	#284	*PGM2*
1	[⊗] HARD [ST]	#01	
	[TL]	HARD	

13. Logo text programming (PGM2 mode)

Your machine can print logo messages in the following five manners. The standard model provides no message line; it allows stamping only. If you need the printing of programmed messages, please consult your dealer.


- (1) No logo message printed (store name only)
- (2) 3-line logo message instead of store name
- (3) 3-line logo message and store name
- (4) 6-line logo message instead of store name
- (5) 3-line header, 3-line footer and store name

Print positions on the receipt

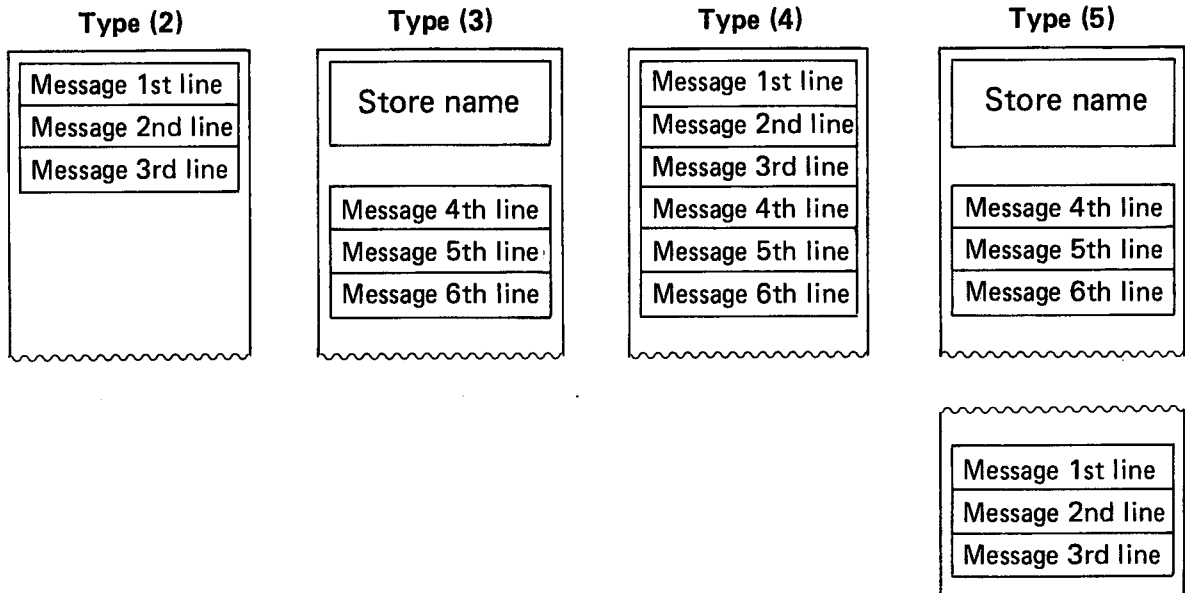

Note) Up to 24 characters can be programmed per line.

Procedure

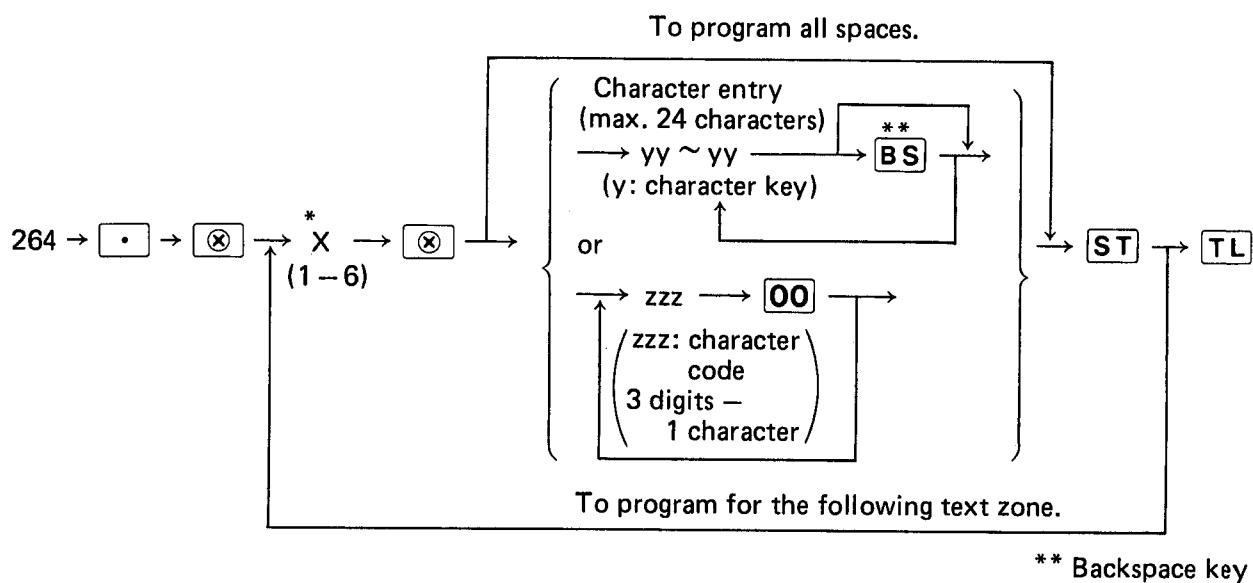

*X: Line number for logo message (1 thru 6)

Key operation

2 6 4 . (X)

4 (X)

*	*	*	*	*	*	R
E	S	T	A	U	R	A
N	T	*	*	*	*	*

ST

5 (X)

*	*	*	*	*	*	(DC)
S	(DC)	H	(DC)	A	(DC)	R
(DC)	P	*	*	*	*	*

ST

TL

Print

```
#264  *PGM2*


*****RESTAURANT*****
*****SHARP*****
```

14. Programming of texts to be printed on slip (PGM2 mode)


You can program the texts (3 lines) to be printed on slip.

Up to 48 characters can be programmed per line.

A text line consists of three sections.

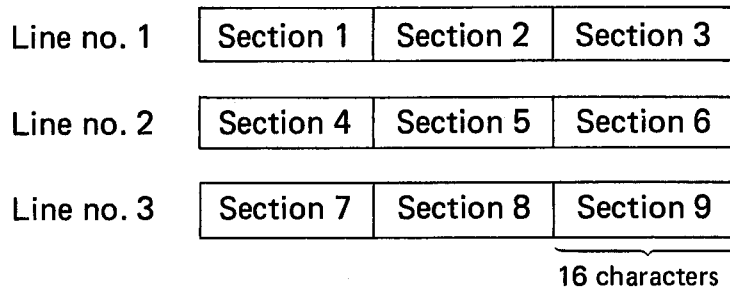


Procedure

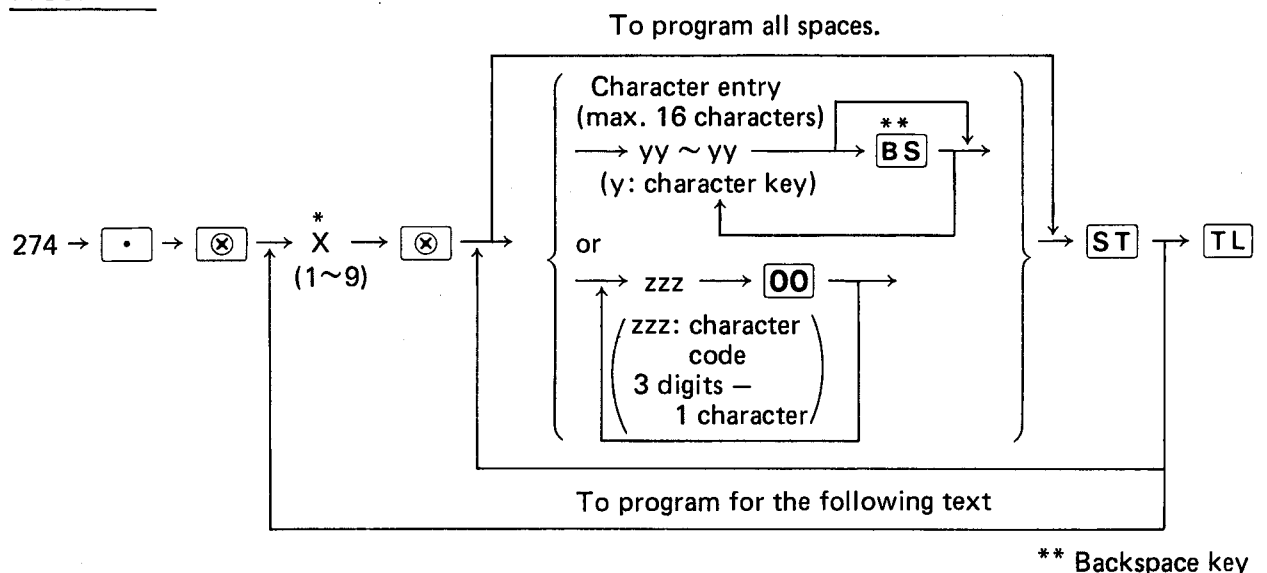


** Backspace key

*X: Section no. (1 thru 9)

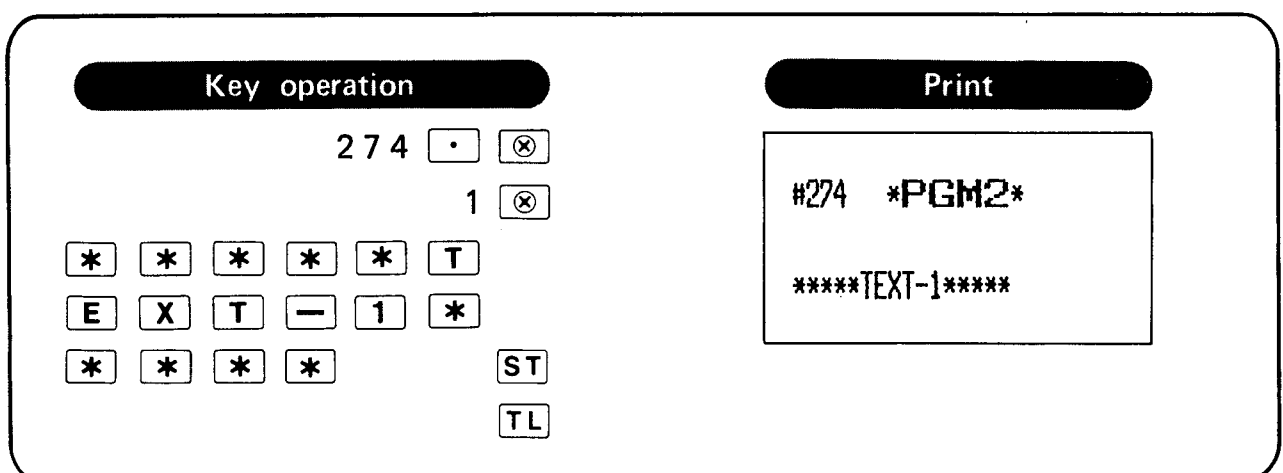

15. Programming of currency descriptor text (PGM2 mode)

Procedure

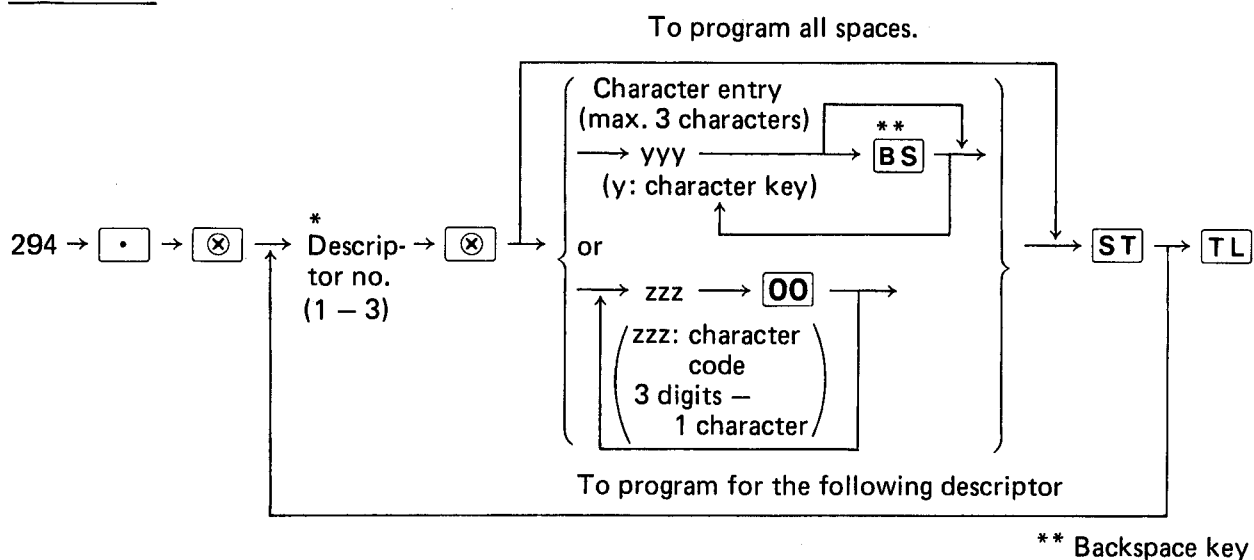

*


Descriptor No.	
1	Foreign currency 1
2	Foreign currency 2
3	Foreign currency 3

Key operation	Print
294 [.] [⊗]	#294 *PGM2*
1 [⊗]	
EX1 [ST]	EX1 EX1
[TL]	

16. Programming of general report (#100 or #200) format (PGM2 mode)

You can program whether to skip or print the following items in general report printing.

Procedure

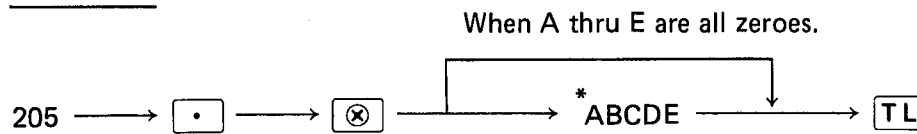


*A: Department skip/print = 1/0
B: Transaction skip/print = 1/0
C: Tax sales skip/print = 1/0
D: CID skip/print = 1/0
E: Guest and net skip/print = 1/0

Key operation	Print
205 [.] [X]	#205 *PGM2*
10000 [TL]	
	10000

17. Selection of X1/Z1 and X2/Z2 reports to be printed in the stacked report sequence (PGM2 mode)

Your register is equipped with the stacked report printing function that enables multiple X/Z reports to be printed in sequence with only a single request, up to maximum of 5 reports. This function continuously prints a maximum of 5 kinds of reports with a single operation.

Procedure

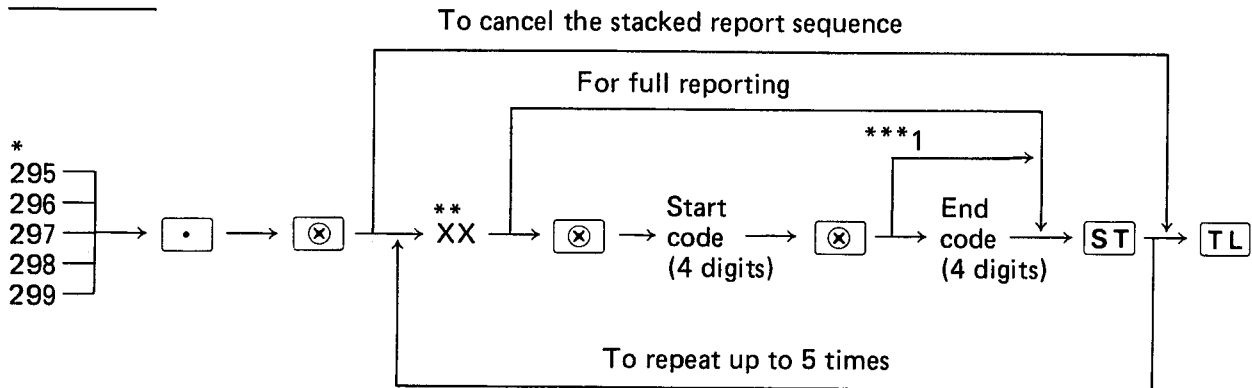

- *295 = Stacked report 1 (Job no. 90)
- 296 = Stacked report 2 (Job no. 91)
- 297 = Stacked report 3 (Job no. 92)
- 298 = Stacked report 4 (Job no. 93)
- 299 = Stacked report 5 (Job no. 94)

**
XX: Report job number


1: When a single item should be printed on the report.

Key operation	Print
2 9 5 . ⊗	<div style="border: 1px solid black; padding: 10px; margin: 0 auto; width: 80%;"> #295 *PGM2* <div style="display: flex; justify-content: space-between; margin-top: 20px;"> #10 #13 </div> </div>
1 0 ST	
1 3 ST	
TL	

18. Secret codes to control access to PGM1 mode, and Z1 and Z2 reports (PGM2 mode)


- When changing stored programs in the PGM1 mode, those operations are inhibited if no secret code is entered.
- When printing Z1 and Z2 (resetting) reports, the printing is inhibited if no secret code is entered.
- A secret code must be entered using the procedure below before attempting to read stored programs (in the PGM1 mode) or to print Z1 and Z2 (resetting) reports.

Procedure

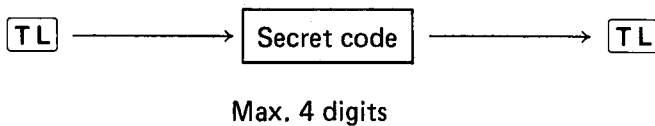


Note: Once a secret code is entered, it does not need to be entered again unless the mode switch setting is changed and any operation, such as a sales registration, reporting, or programming, is performed.

Procedure

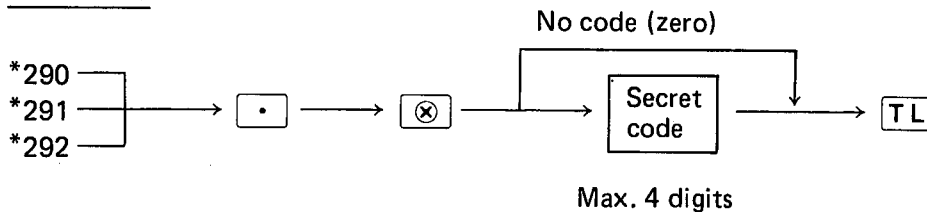


*: 290 for PGM1 mode
291 for Z1 report
292 for Z2 report

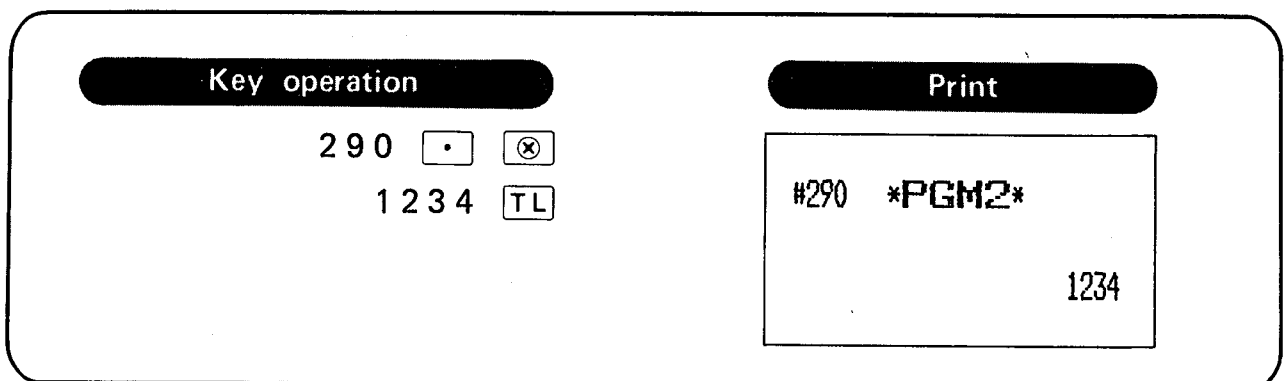

19. Programming of error messages (PGM2 mode)

Procedure

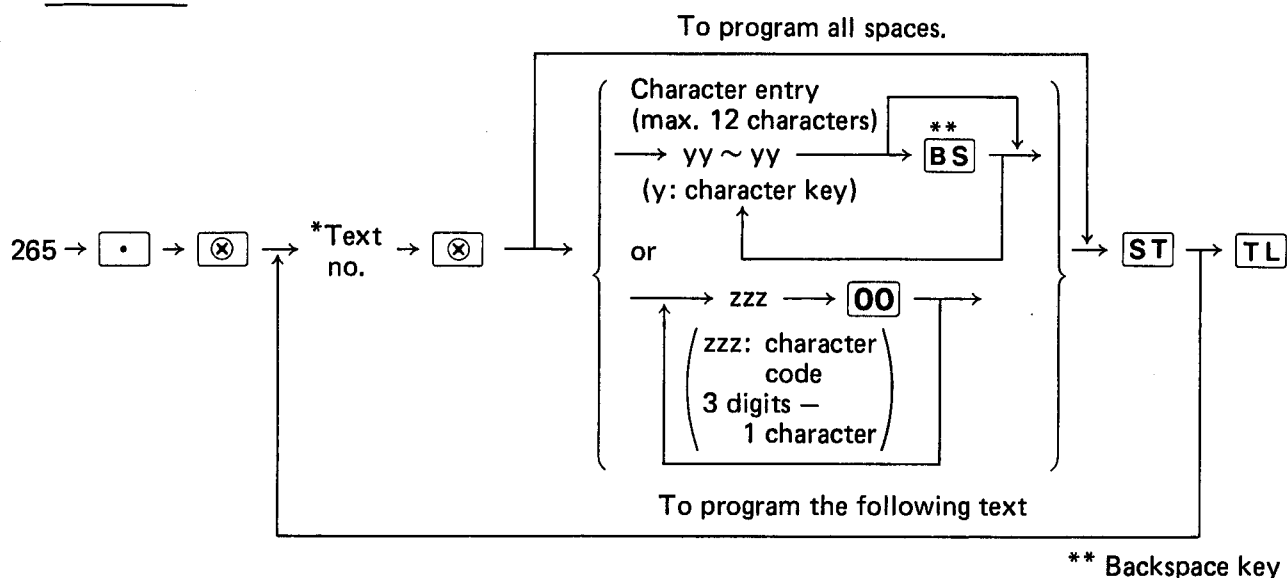

*Text no.: See "LIST OF ERROR TEXT" described later.

Key operation	Print
265 [.] [⊗]	#265 *PGM2*
1 [⊗]	#01 ENTRY ERROR
ENTRY ERROR [ST]	
[TL]	

LIST OF ERROR TEXT

TEXT NO.	TEXT	DEFAULT
1	Entry error	ENTRY ERROR
2	Misoperation	MISOPERATE
3	Desired code is not programmed yet	NO RECORD
4	Paper out	PAPER EMPTY
5	Secret code error	SECRET CODE
6	Desired code is in use	NOT FREE
7	Memory is filled up	MEMORY FULL
8	Slip insert pressed	INSERT SLIP
9	The clerk has entered a code for which he or she is not authorized	NO AUTHORITY
10	Desired record is locked	RECORD LOCK
11	Stock empty	STOCK EMPTY
12	Setting slip paper again	SLIP SET
13	After Z1 report	ENTRY ERR Z1
14	Close store state	CLOSE STORE
15	During in processing the resetting report	* LOCK(Z) *
16	The target machine was busy	BUSY
17	A transmission error occurred	INLINE ERROR
18	The target machine made no response	NO RESPONSE
19	Power of the target machine off	POWER OFF
20	Printer's motor locking	MOTOR LOCK
21	Buffer full	BUFFER FULL
22	A hard error occurred	HARD ERROR
23	Off line	OFF LINE
24	Wide printer error	WP ERROR
25	Open store state	OPEN STORE
26	Sign on	SIGN ON
27	Time PLU	TIME PLU
28	GLU error save	ERROR SAVED
29	Retry message	RETRY ?
30	CHECK# message	CHECK#

20. Reading stored programs

Your machine allows you to read every program stored in the PGM1 and PGM2 modes.

(1) Program details and procedures for their reading

Program for:	Mode switch position	Job code no.	Procedure	Related job code nos.
① Departments	PGM2 or PGM1	110	<pre> graph LR 110 --> X1((X)) X1 --> StartDept[Start dept. no.] StartDept --> ForInd[For individual reading] ForInd --> X2((X)) X2 --> EndDept[End dept. no.] EndDept --> TL[TL] </pre>	110, 210, 211 212, 214, 215 218
② PLUs/ subdepartments	PGM2 or PGM1	120	<pre> graph LR 120 --> X1((X)) X1 --> StartPLU[Start PLU no.] StartPLU --> ForInd[For individual reading] ForInd --> X2((X)) X2 --> EndPLU[End PLU no.] EndPLU --> TL[TL] </pre>	120, 220, 221 222, 224, 225 228, 255, 256 258
③ PLU stock	PGM2 or PGM1	125	<pre> graph LR 125 --> X1((X)) X1 --> StartPLU[Start PLU no.] StartPLU --> ForInd[For individual reading] ForInd --> X2((X)) X2 --> EndPLU[End PLU no.] EndPLU --> TL[TL] </pre>	125, 126, 127 128
④ Dept. and PLU codes for direct keys	PGM2	219	<pre> graph LR 219 --> X1((X)) X1 --> StartKey[Start key no.] StartKey --> ForInd[For individual reading] ForInd --> X2((X)) X2 --> EndKey[End key no.] EndKey --> TL[TL] </pre>	219, 229
⑤ Clerks	PGM2 or PGM1	140	<pre> graph LR 140 --> X1((X)) X1 --> TL[TL] </pre>	141, 144, 240 242
⑥ Cashiers	PGM2 or PGM1	150	<pre> graph LR 150 --> X1((X)) X1 --> TL[TL] </pre>	154, 250
⑦ Function preset	PGM2 or PGM1	130	<pre> graph LR 130 --> X1((X)) X1 --> StartFunc[Start func. no.] StartFunc --> ForInd[For individual reading] ForInd --> X2((X)) X2 --> EndFunc[End func. no.] EndFunc --> TL[TL] </pre>	130, 230, 231 232, 233, 234 235, 260, 261 262, 263

Program for:	Mode switch position	Job code no.	Procedure	Related job code nos.
⑧ Error messages	PGM2 or PGM1	103	→ 103 → [X] → [TL]	265
⑨ Guest check numbers (GLU/PBLU codes)	PGM2	280	→ 280 → [X] → [Start GLU/PBLU code] → [X] → [End GLU/PBLU code] → [TL]	280, 281
⑩ Miscellaneous presets (1)	PGM2 or PGM1	100	→ 100 → [X] → [TL]	205, 223, 227 236, 237, 270 271
⑪ Miscellaneous presets (2)	PGM2 or PGM1	101	→ 101 → [X] → [TL]	264, 274, 294
⑫ Miscellaneous presets (3)	PGM2 or PGM1	102	→ 102 → [X] → [TL]	290, 291, 292 295, 296, 297 298, 299
⑬ Set PLUs	PGM2 or PGM1	126	→ 126 → [X] → [Start PLU no.] → [X] → [End PLU no.] → [TL] For individual reading	226
⑭ Free texts	PGM2	284	→ 284 → [X] → [Start text no.] → [X] → [End text no.] → [TL] For individual reading	284

Note: To take the reports of the above readings on a slip printer (option), press the [SLIP] key in place of the [TL] key.

(2) Sample printouts

- ① Reading of programmed items for departments
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT			
THANK YOU			
26/12/88 8:56P 123#1095			
A CLERK01			
#110 *PGM2*			
*D01	0.00	Dept. code/unit price	
STEAK	001101	Text/taxability (6-1)	
SINGL	KPO01 LM16	Receipt type/print station/HALO	
OP&PR	G 03 C 0	Type/group/commission	
*D02	0.00		
DPT.02	000000		
SINGL	KPO01 LM18		
OP	G 01 C 0		
{ OP & PR: Open & preset			
{ PR: Preset			
{ OP: Open			

*D09	0.00		
DPT.09	100110		
SINGL	KP101 LM18		
OP	G 01 C 0		
*D10	1.50		
DPT.10	000000		
SINGL	KPO01 LM18		
PR	G 01 C 0		

- ② Reading of programmed items for PLUs/subdepartments
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT			
THANK YOU			
26/12/88 8:57P 123#1096			
A CLERK01			
#120 *PGM2*			
*P0001	24.00	PLU code/price 1	
D05	20.00	Associate dept./price 2	
PLU-0001	000001	Text/taxability (6-1)	
PLU	KPO01 C 1	Type/print station/commission	
*P0002	0.00	{ PLU: PLU SUB: Subdept. TIME: Time PLU	
D01	0.00		
PLU-0002	000000		
PLU	KPO01 C 0		

*P0099	0.00
D01	0.00
PLU-0099	000000
PLU	KPO01 C 0
*P0100	0.00
D01	0.00
PLU-0100	000000
PLU	KPO01 C 0

- ③ Reading of PLU's stock
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT

THANK YOU

26/12/88 9:00P 123#1097
A CLERK01

#125 *PGM2*

P0001	M	0			
	S	0			
P0002	M	0			PLU code/minimum stock
	S	10000			Stock
P0003	M	0			
	S	-1			
P0004	M	0			
	S	0			
P0005	M	0			
	S	0			
P0007	M	0			
	S	0			

P0095	M	0			
	S	0			
P0096	M	0			
	S	0			
P0097	M	0			
	S	0			
P0098	M	0			
	S	0			
P0099	M	0			
	S	0			
P0100	M	0			
	S	0			

- ④ Reading of programmed dept. and PLU codes for direct keys
(Reading in the PGM2 mode)

YOUR RECEIPT

THANK YOU

26/12/88 9:01P 123#1098
A CLERK01

#219 *PGM2*

001KEY	D01
002KEY	D02
003KEY	D03
004KEY	D04
005KEY	D05
006KEY	D06
007KEY	D07
008KEY	D08
009KEY	D09
010KEY	D10
011KEY	P0001
012KEY	P0002
013KEY	P0003
014KEY	P0004
015KEY	P0005
016KEY	P0006
017KEY	P0007
018KEY	P0008
019KEY	P0009
020KEY	P0010
021KEY	P0011

137KEY D00
138KEY D00
139KEY D00
140KEY D00

—Key no./dept. or PLU code

- ⑤ Reading of programmed items for clerks
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT		
THANK YOU		
26/12/88 9:02P 123#1099		
A CLERK01		
#140 *PGM2*		
01CLK#01		
CLERK01	0000000	
	0001-9999	
02CLK#02		Clerk no./clerk code
PETERS	0000001	Text/functional programmability
	1001-1003	Authorized GLU/PBLU code
03CLK#03		
CLERK03	0000000	
	0001-9999	
04CLK#04		
CLERK04	0000000	
	0001-9999	
05CLK#05		
CLERK05	0000000	
	0001-9999	
06CLK#06		
CLERK06	0000000	
	0001-9999	

- ⑥ Reading of programmed items for cashiers
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT	
THANK YOU	
26/12/88 9:02P 123#1100	
A CLERK01	
#150 *PGM2*	
01CSR.A	Cashier no.
MEYER	01. Text/drawer no.
02CSR.B	
CSR02	00.

- ⑦ Reading of programmed free texts
(Reading in the PGM2 mode)

YOUR RECEIPT

THANK YOU

26/12/88 9:09P 123#1108

A CLERK01

#284 *PGM2*

#01

HARD

#02

TEXT02

#03

TEXT03

#04

TEXT04

#05

TEXT05

#06

TEXT06

#07

TEXT07

#17

TEXT17

#18

TEXT18

#19

TEXT19

#20

TEXT20

- ⑧ Reading of programmed items for functions
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT

THANK YOU

26/12/88 9:03P 123#1101
A CLERK01

#130 *PGM2*

F001 *DEPT TL
F002 *DEPT(-)
F003 *HASH TL
F004 %1
ITEM -10.00%
100.00%

F005 %2
SETL 10.00%
100.00%

F008 (-)1
SETL LM. 16

F010 DIFFER
F011 TAXABLE1
F012 TAXABLE2
F013 TAXABLE3
F014 TAXABLE4
F015 TAXABLE5
F016 TAXABLE6
F017 VAT 1
0.0000
0.00

F018 VAT 2
0.0000
0.00

F019 VAT 3
0.0000
1.00

F020 VAT 4
0.0000
0.00

F021 VAT 5
0.0000
0.00

F022 VAT 6
0.0000
0.00

F023 NON TAX
F024 NET1
F025 NET2
F026 REFUND
F027 ~~u~~
F028 ~~u~~MODE
F029 MGR~~u~~
F030 HASH RF
F031 HASH ~~u~~
F032 VAT SFT
F033 TAX DELE
F034 UP CNT
F035 SLIP CNT
F036 NO SALE
F037 ***PBAL
F038 ***NBAL
F039 G.C.CNT
F040 ***RA1
LM. 18

F041 ***RA2
LM. 18

F042 ***PD
LM. 18

F043 DEPOSIT
LM. 18

F044 DEPOS(-)
LM. 18

To be continued on the next page.

F045 CASH
 000 LM. 18
 CH-LM. 18
 F046 CHECK1
 000 LM. 18
 CH-LM. 18
 F048 CREDIT1
 000 LM. 18
 CH-LM. 18
 F049 CREDIT2
 000 LM. 18
 CH-LM. 18
 F056 EXCHNG1
 0.0000
 F059 ***CID
 9999999.99
 F060 CASH IS
 F061 CA/CH ID
 F062 CHK/CG
 F063 GUEST
 F064 TRAN.OUT
 F065 TRAN.IN
 F066 COM.SAL1
 0.00
 F067 COM.SAL2
 0.00
 F068 COM.SAL3
 0.00
 F069 NON COM
 F070 ORDER TL
 F071 PAID TL
 F072 WK TIME
 F073 SER.CHRG
 0.00
 F074 TIME TTL
 F075 NET 1
 F076 NET 2

F077 NET 3
 F078 NET 4
 F079 NET 5
 F080 NET 6
 F081 SUBTOTAL
 F082 MDS SRTL
 F083 DIFF ST
 F084 ***TOTAL
 F085 CHANGE
 F086 DUE
 F087 ITEMS
 F088 START
 F089 TRANSFER
 F090 VOID
 F091 COPY
 F092 B.T.
 F093 G.C.RCPT
 F094 G.C.COPY
 F095 SLIP PR.
 F096 NEXT P.
 F097 AVE.
 F098 GROUP
 F099 GROUP TL
 F100 CCD
 F101 DIFFER
 F102 O-P
 F103 COM.AMT1
 F104 COM.AMT2
 F105 COM.AMT3
 F106 BILL BAL
 F107 FREE GLU
 F108 T.TABLE
 F109 T.GUEST
 F110 T.BILL
 F111 I.GUEST
 F112 I.BILL
 F113 AVE.ITEM

To be continued on the next page.

F114 *GT*
F115 *DPT*
F116 *GROUP*
F117 *PLU*
F118 *STOCK.*
F119 *TRANS.*
F120 *CID*
F121 *CLERK*
F122 *CASH.*
F123 *HOURLY*
F124 *DAILY*
F125 *GLU*
F126 *CHIEF*
F127 *SALES*
F128
F129
F130
F131
F132
F133
F134

- ⑨ Reading of programmed set PLUs
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT

THANK YOU

26/12/88 9:04P 123#1102
A CLERK01

#126 *PGM2*

P0011	P0012	P0013
	P0014	P0015
	P0016	P0017

Set PLU/linked PLU code (max. 6 PLUs)

- ⑩ Reading of programmed guest check numbers (GLU/PBLU codes)
(Reading in the PGM2 mode)

YOUR RECEIPT

THANK YOU

26/12/88 9:08P 123#1104

A CLERK01

#280 *PGM2*

GLU 1000-1005

1000

1001

1002

1003


1004

1005

- ⑪ Reading of miscellaneous preset — (1)
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT			
THANK YOU			
26/12/88 9:08P 123#1105			
A CLERK01			
#100 *PGM2*			
#205	10000	General report format	
#223	0 15 1	Time unit	
#227		PLU level	
L-NO. 1	P0001		
2	P0019		
3	P0037		
#236		Operating mode	
00000001000	IN REG		
00000000000	IN MGR		
#237		Bank note key	
K-NO. 1	10.00		
2	0.00		
3	0.00		
#270	00 00 0 1	Slip/validation print	
#271	0001	Optional feature	

- ⑫ Reading of miscellaneous presets — (2)
(Reading in the PGM1 and PGM2 modes)

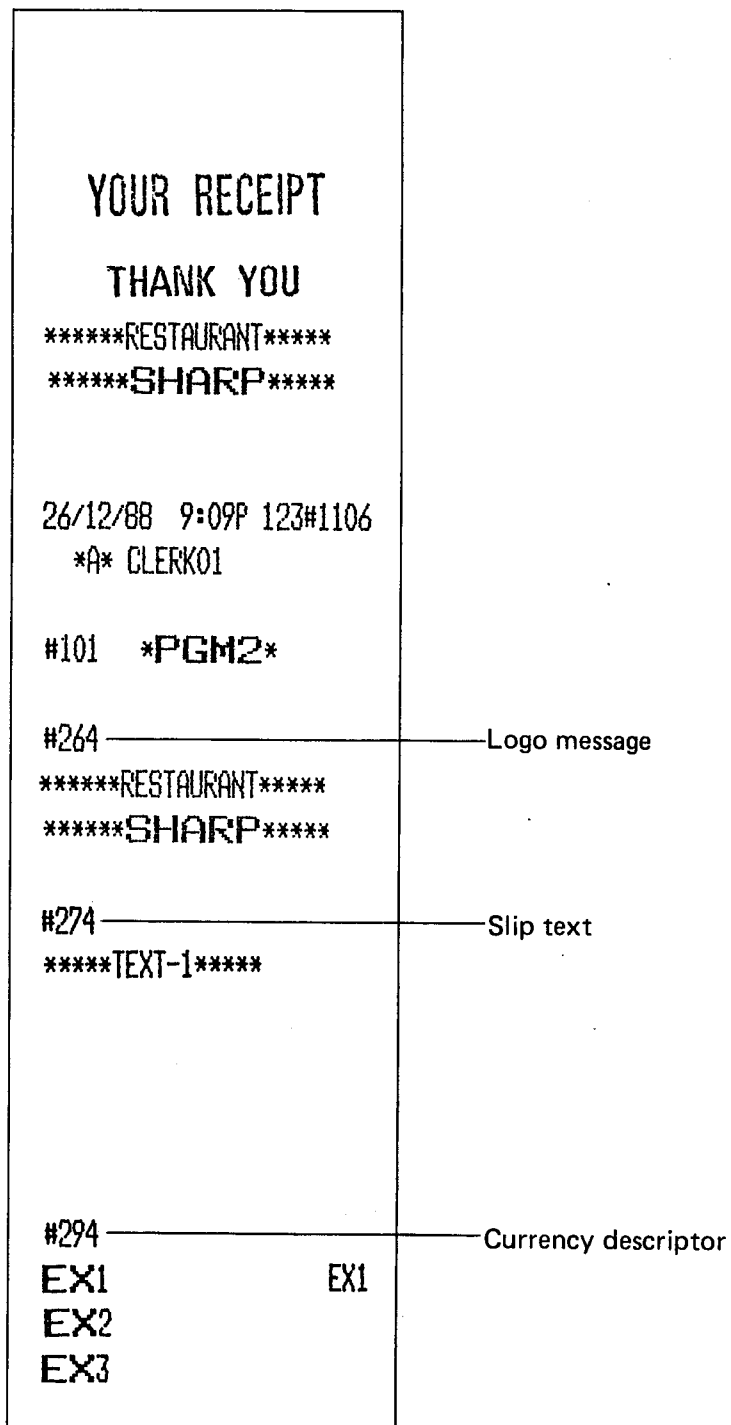

- ⑬ Reading of miscellaneous presets — (3)
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT	
THANK YOU	
26/12/88 9:09P 123#1107	
A CLERK01	
#102	*PGM2*
#290	1234 — Secret code (PGM1)
#291	0000 — Secret code (Z1)
#292	0000 — Secret code (Z2)
#295	#10 — Stacked report (max. 5 reports)
	#13
#296	
#297	
#298	
#299	

- ⑭ Reading of programmed error messages
(Reading in the PGM1 and PGM2 modes)

YOUR RECEIPT

THANK YOU

26/12/88 9:25P 123#1111

A CLERK01

#103 *PGM2*

#01	ENTRY ERROR
#02	MISOPERATE
#03	NO RECORD
#04	PAPER EMPTY
#05	SECRET CODE
#06	NOT FREE
#07	MEMORY FULL
#08	INSERT SLIP
#09	NO AUTHORITY
#10	RECORD LOCK
#11	STOCK EMPTY
#12	SLIP SET
#13	ENTRY ERR Z1
#14	CLOSE STORE
#15	*LOCK(Z)*
#16	BUSY
#17	INLINE ERROR
#18	NO RESPONSE
#19	POWER OFF
#20	MOTOR LOCK
#21	BUFFER FULL
#22	HARD ERROR
#23	OFF LINE
#24	WP ERROR
#25	OPEN STORE
#26	SIGN ON
#27	TIME PLU
#28	ERROR SAVED
#29	RETRY ?
#30	CHECK#

TYPE OF RECEIPTS

The following 6 types of receipts can be printed in the REG or VOID mode. Your machine can be programmed for one of them.

- Addition receipt type
- Addition + total receipt type
- Single/double receipt type
- Single/double + total receipt type
- Single/double + addition mode receipt type
- Addition + single receipt type

1. Addition receipt type and addition + total receipt type

- The addition receipt is of standard type. Several items can be printed on one receipt. If "Addition + total" type is selected, the addition receipt is printed first and then the total receipt is printed.

Addition receipt

YOUR RECEIPT	
THANK YOU	
27/12/88 9:47A 123#1112	
A CLERK01	
DPT.02	15.00
DPT.03	3.00
SUBTOTAL	18.00
CASH	18.00

Addition + total receipt

YOUR RECEIPT	
THANK YOU	
27/12/88 9:47A 123#1112	
A CLERK01	
DPT.02	15.00
DPT.03	3.00
SUBTOTAL	18.00
CASH	18.00


27/12/88 9:47A 123#1112	
A CLERK01	
CASH	18.00

Perforation

2. Single/double receipt type

One receipt is issued for each item.

- When your register is programmed for single/double receipt type, it prints single or double receipts — which receipt is printed depends upon the programming for departments in the PGM2 mode — with department or PLU/subdept. entries and automatically handles each sales transaction as a cash deal.

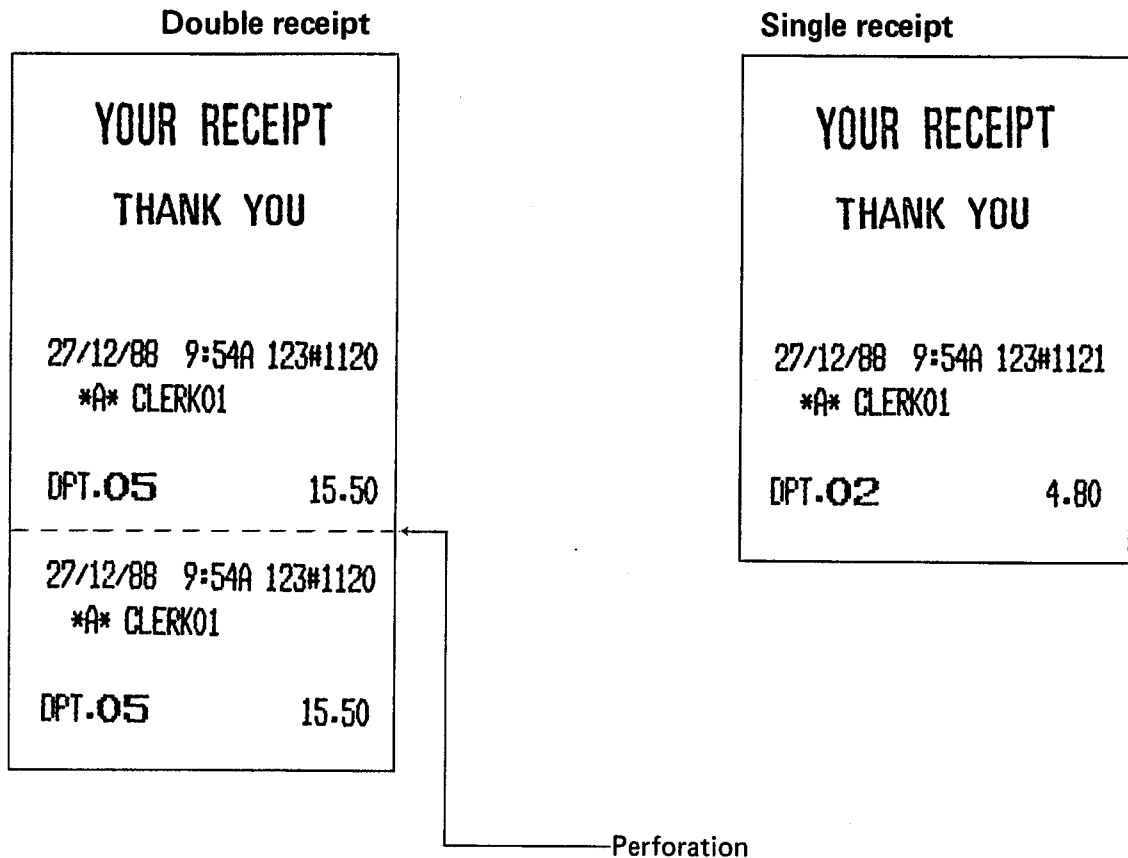

3. Single/double + total receipt type

One receipt is issued for each item.

- When your register is programmed for single/double + total receipt type, it can print a single or double receipt with each department or PLU/subdept. entry and then handle each sales transaction as a cash, credit or cheque deal.

Double receipt

YOUR RECEIPT	
THANK YOU	
27/12/88 9:58A 123#1124	
A CLERK01	
DPT.05	15.50

27/12/88 9:58A 123#1124	
A CLERK01	
DPT.05	15.50

Perforation

Single receipt

YOUR RECEIPT	
THANK YOU	
27/12/88 10:00A 123#1125	
A CLERK01	
DPT.02	4.80

Total receipt


YOUR RECEIPT	
THANK YOU	
27/12/88 10:00A 123#1125	
A CLERK01	
SUBTOTAL	4.80
	10.00%
%2	0.48
SUBTOTAL	5.28
CASH	10.00
CHANGE	4.72

4. Single/double + addition mode receipt type

This type is the same as "Single/double + total" type except that some part of receipt (such as PBAL, NBAL or total part) is not issued.


One receipt is issued for each item.

- When your register is programmed for single/double + addition type, it can print a single or double receipt with each department or PLU/subdept. entry and then handle each sales transaction as a cash, credit or cheque deal.

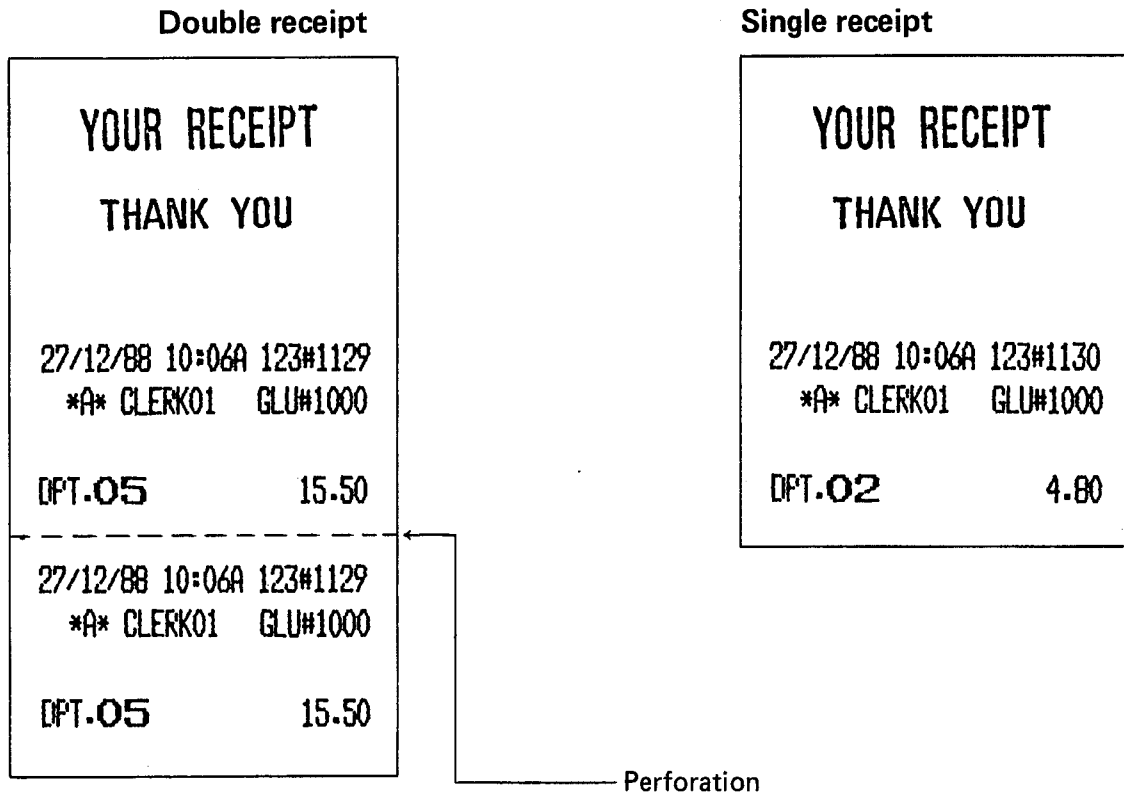

5. Addition + single receipt type

- When your register is programmed for addition + single receipt type, the addition receipt is printed first and then single receipts are printed.

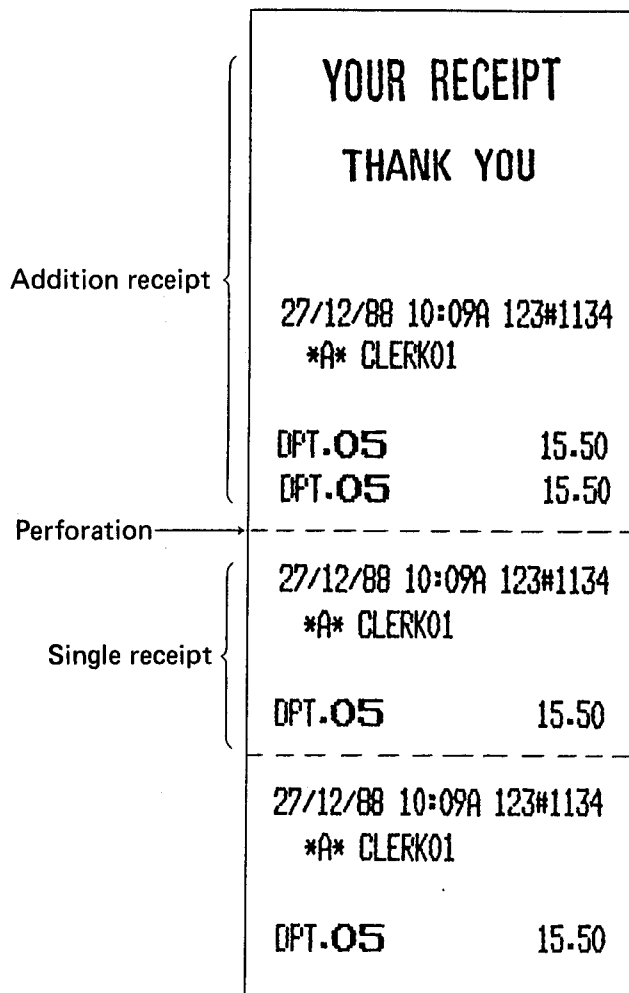

RECEIPT SHIFT

You can shift the printing mode of items for the receipt.

Any receipt type selected can be shifted as follows by pressing the **RCPT SHIFT** key before item entry.

But, "Addition + single" receipt type can not be shifted.

(Note: The receipt type can not be changed to any other type by pressing the **RCPT SHIFT** key.)

- Addition receipt type
 - Addition + total receipt type
 - Single/double receipt type
 - Single/double + total receipt type
 - Single/double + addition mode receipt type
- } → Separated receipt mode
(one receipt is issued for each item.)
- } → Addition receipt mode
(several items can be printed on one receipt.)

Cancellation of receipt shift

For the single/double receipt type:

The initial receipt type can be resumed by pressing the **RCPT SHIFT** key again.

For any receipt types other than the above, the initial receipt type is automatically resumed after an entry has been made by pressing a media key (**TL** , **CH1** or **CH2** , **CR1** thru **CR8**).

Example: When your register is programmed for addition receipt type;

Ordinary receipt mode

YOUR RECEIPT	
THANK YOU	
27/12/88 10:16A 123#1138	
A CLERK01	
DPT.03	15.00
DPT.02	14.00
SUBTOTAL	29.00
CASH	30.00
CHANGE	1.00



Separated receipt mode

YOUR RECEIPT	
THANK YOU	
27/12/88 10:16A 123#1138	
A CLERK01	
DPT.03	15.00
YOUR RECEIPT	
THANK YOU	
27/12/88 10:16A 123#1139	
A CLERK01	
DPT.02	14.00

Full cut

REGISTRATIONS

* Preparations for entries

- (1) Put the operator key in the mode switch and turn it to the REG position.
- (2) Put a clerk key in the cashier/clerk switch.
- (3) Check to see if your register has both the journal and receipt rolls. If your register lacks these rolls or has low rolls, install new paper rolls or replace the old rolls with new ones according to "INSTALLING AND REMOVING THE PAPER ROLL".

* Error warning

In the following examples, your register will go into an error state accompanied with a warning beep and the error message "MISOPERATE" or "ENTRY ERROR" on the display. Clear the error state by pressing the **CL** key and take a proper action.

- (1) When you enter an over 16-digit number (entry limit overflow):
 - Cancel the entry and re-enter a correct number.
- (2) When you make an error in key operation:
 - Clear the error and operate keys correctly.
- (3) When you make an entry beyond a programmed amount entry limit:
 - Check to see if the entered amount is correct. If it is correct, it can be rung up in the MGR mode. Contact your manager.
- (4) When an including-tax subtotal exceeds eight digits:
 - Clear the subtotal and press the **TL** , **CH** or **CR** key to finalize the transaction.

1. Clerk assignment

Clerks can be assigned on three systems: Clerk push-button key, clerk code entry, and real clerk key systems. For how to select these systems, consult your local dealer.


Clerk push-button key system

If you select this system, clerks can be assigned by pressing corresponding clerk push-button keys. When the clerk push-button key is pressed again, the clerk is signed off.

Clerk code entry system

If you select this system, any clerk cannot perform registrations without entering his or her clerk code in advance.

Procedure

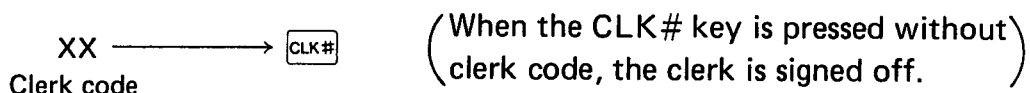

Real clerk key system

If you select this system, any clerk cannot be assigned without inserting a corresponding real clerk key. Any registration cannot be performed unless a real clerk key is inserted.

2. Cashier assignment

If you need cashier assignment, contact your local dealer. Cashier assignment can be accomplished by inserting a real cashier key.

Any registration cannot be performed unless a real cashier key is inserted.


3. Item entries

(1) Single item entries

- **Entries into departments**

Enter a unit price and press a department key. If you use a programmed unit price, press a department key only.

Procedure

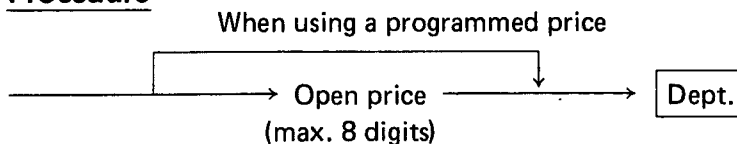

Open price: Less than a programmed upper limit

Key operation	Print
1 2 0 0 [1]	DPT.01 12.00
[2]	DPT.02 8.00
[TL]	SUBTOTAL 20.00
	CASH 20.00

- **PLU entries (indirect PLU entries)**

Enter a PLU number and press the **PLU/SUB** key.

Procedure

—————→ PLU code —————→ **PLU/SUB**

Key operation	Print						
2 PLU/SUB							
TL							
	<table border="1"> <tbody> <tr> <td>PLU-0002</td> <td>1.50</td> </tr> <tr> <td>SUBTOTAL</td> <td>1.50</td> </tr> <tr> <td>CASH</td> <td>1.50</td> </tr> </tbody> </table>	PLU-0002	1.50	SUBTOTAL	1.50	CASH	1.50
PLU-0002	1.50						
SUBTOTAL	1.50						
CASH	1.50						

- **Subdepartment (open PLU) entries**

Follow this sequence:

Procedure

————→ Open price —————→ **AMT** —————→ PLU code —————→ **PLU/SUB**
 (max. 8 digits)

Open price: Less than a programmed upper limit


Key operation	Print						
1 2 7 5 AMT							
2 0 PLU/SUB							
TL							
	<table border="1"> <tbody> <tr> <td>PLU-0020</td> <td>12.75</td> </tr> <tr> <td>SUBTOTAL</td> <td>12.75</td> </tr> <tr> <td>CASH</td> <td>12.75</td> </tr> </tbody> </table>	PLU-0020	12.75	SUBTOTAL	12.75	CASH	12.75
PLU-0020	12.75						
SUBTOTAL	12.75						
CASH	12.75						

- **Direct PLU (Menu) entries**

Follow this sequence:

Procedure

When using a programmed price

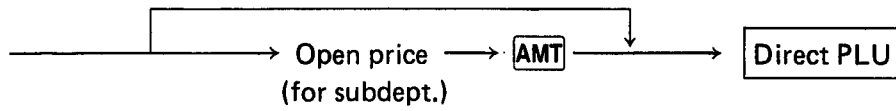

Open price: Less than a programmed upper limit

Key operation	Print
2	PLU-0002 1.50
TL	SUBTOTAL 1.50
	CASH 1.50

(2) Repeat entries

You can use this function for entering two or more of the same item.


Key operation		Print
Repeated department entry	2 0 0 <input type="text" value="3"/>	DPT.03 2.00
	<input type="text" value="3"/>	DPT.03 2.00
	<input type="text" value="3"/>	DPT.03 2.00
Repeated PLU entry (indirect PLU)	1 0 <input type="text" value="PLU/SUB"/>	PLU.0010 2.50
	<input type="text" value="PLU/SUB"/>	PLU.0010 2.50
	<input type="text" value="PLU/SUB"/>	PLU.0010 2.50
Repeated subdepartment entry	2 8 5 <input type="text" value="AMT"/>	PLU.0051 2.85
	5 1 <input type="text" value="PLU/SUB"/>	PLU.0051 2.85
	<input type="text" value="PLU/SUB"/>	PLU.0002 1.50
Repeated Direct PLU entry	<input type="text" value="2"/>	PLU.0002 1.50
	<input type="text" value="2"/>	PLU.0002 1.50
	<input type="text" value="2"/>	PLU.0002 1.50
	<input type="text" value="TL"/>	SUBTOTAL 23.70
		CASH 23.70

(3) Multiplication entries

Use this feature when you need to enter two or more of the same item.

This feature helps when you sell a large quantity of items or need to enter quantities that contain decimals.

Procedure

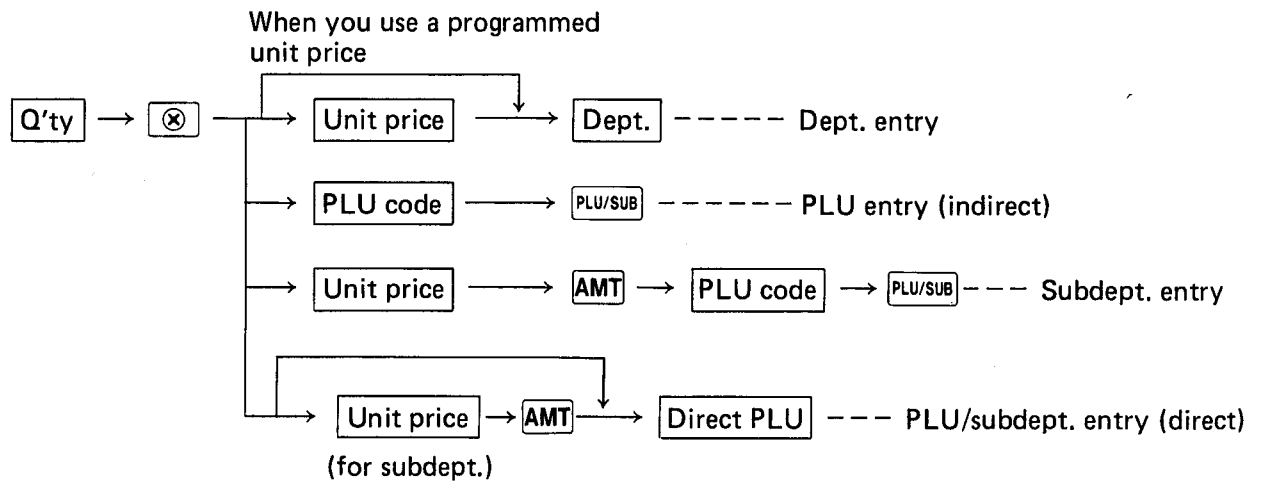

- Q'ty: up to six digits (4-digit integer + 2-digit decimal, or 3-digit integer + 3-digit decimal)
- Unit price: Less than a programmed upper limit (max. 999999)
- Q'ty x unit price: up to eight digits

Key operation		Print
Dept. entry {	5 <input type="button" value="⊗"/>	<div> 5X 1.65 DPT.03 8.25 15X 7.20 PLU.0003 108.00 25X 3.00 PLU.0020 75.00 5X 1.50 PLU.0002 7.50 SUBTOTAL 198.75 CASH 198.75 </div>
	1 6 5 <input type="button" value="3"/>	
PLU entry (indirect PLU) {	1 5 <input type="button" value="⊗"/>	
	3 <input type="button" value="PLU/SUB"/>	
Subdept. entry {	2 5 <input type="button" value="⊗"/>	
	3 0 0 <input type="button" value="AMT"/>	
	2 0 <input type="button" value="PLU/SUB"/>	
Direct PLU entry {	5 <input type="button" value="⊗"/>	
	<input type="button" value="2"/>	
	<input type="button" value="TL"/>	

(4) Single item cash sale (SICS) entries

- This function is useful when a sale is for only one item and is for cash; such as a pack of cigarettes. This function is applicable only to those departments that have been set for SICS or to their associated PLUs or Direct PLU.
- The transaction is finalized and the drawer opens as soon as you press the department key.

Key operation		Print	
	2800		
For finishing the transaction	→ 2	DPT.02	28.00
		SUBTOTAL	28.00
		CASH	28.00

Note: If a ring-up to a department or PLU/Direct PLU set for SICS follows the ones to departments or PLUs/Direct PLU not set for SICS, it does not finalize and results in a normal sale.

4. Display of subtotals

Your register provides these two types of subtotals:

(1) Merchandise subtotal

Press the **ST** key at any point during a transaction. Then the subtotal will appear in the display and the "ST" lamp will light up.

(2) Difference subtotal

Press the **DIFFER ST** key at any point during a transaction. The subtotal of entries that have been made so far (or that have been made after the last depression of that key) will be displayed and printed.

Key operation		Print	
5 0 0	1	DPT.01	5.00
1 0 0 0	2	DPT.02	10.00
1 5 0 0	3	DPT.03	15.00
	DIFFER ST	DIFF ST	30.00
2 0 0 0	1	(1)	
2 5 0 0	2	DPT.01	20.00
	DIFFER ST	DPT.02	25.00
	ST	DIFF ST	45.00
	TL	(2)	
		SUBTOTAL	75.00
		CASH	75.00

Note: Your machine can be programmed to perforate the receipt when the **DIFFER ST** key is pressed. If you need this programming, contact your local dealer.

5. Finalization of transaction

(1) Cash or cheque tendering

Press the **[ST]** key to get a subtotal, enter the amount tendered by your guest, then press the **[TL]** key if it is a cash tender or press the **[CH]** key if it is a cheque tender.

When the amount tendered is greater than the amount of the sale, your register will show the change due amount. Otherwise your register will show a deficit and the message "DUE".

• Cash tendering

Key operation	Print
?	
[ST]	SUBTOTAL 7.35
1000 [TL]	CASH 10.00
	CHANGE 2.65

• Cheque tendering

Key operation	Print
?	
[ST]	SUBTOTAL 7.35
1000 [CH1]	CHECK1 10.00
	CHANGE 2.65

(2) Mixed tendering (cheque + cash)

Key operation	Print
?	
[ST]	SUBTOTAL 14.56
1000 [CH1]	CHECK1 10.00
500 [TL]	CASH 5.00
	CHANGE 0.44

(3) Cash or cheque sale that does not need a tender amount entry

Enter items and press the **TL** key if it is a cash sale or press the **CH** key if it is a cheque sale. Your register will display the total sale amount.

Key operation	Print
3 0 0 1	DPT.01 3.00
2 PLU/SUB	PLU.0002 1.50
TL	SUBTOTAL 4.50
	CASH 4.50
	In the case of cheque sale
	CHECK1 4.50

(4) Credit sale

Enter items and press the credit key

Key operation	Print
2 5 0 0 1	DPT.01 25.00
3 2 5 0 2	DPT.02 32.50
CR1	SUBTOTAL 57.50
	CREDIT1 57.50

(5) Mixed-tender sale (cash or cheque tendering + credit sale)

Key operation	Print
?	
ST	SUBTOTAL 49.50
9 5 0 TL	CASH 9.50
CR1	CREDIT1 40.00

Note: For cheque tendering, press the **CH** key instead of the **TL** key.

(6) Tender operation with bank note keys


Amount tendered entry can be made more simply by pressing BANK NOTE keys. The three BANK NOTE keys are available. If you need these keys, contact your local dealer.

You can program a denomination for each BANK NOTE key.

- **Tender operation**

When a BANK NOTE key is pressed, the programmed denomination will appear in the display just like in a numeric entry.

Procedure

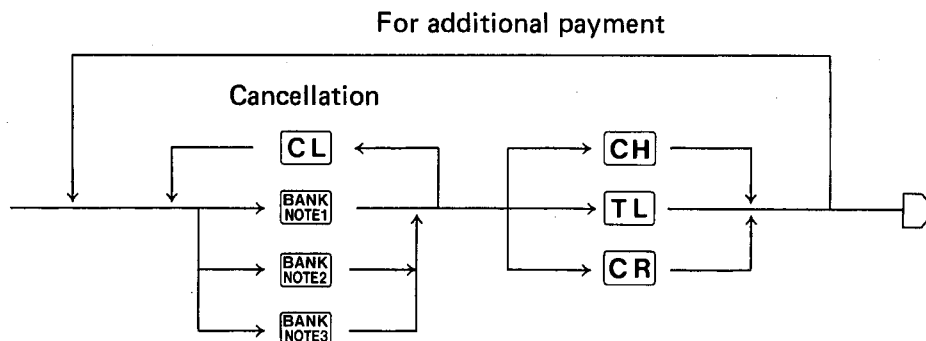


Key operation	Display
$\frac{1}{2}$	
ST	4.80 ST
BANK NOTE1	10.00
TL	5.20 →


6. Currency exchange

The register allows payment registrations in a maximum of three kinds of foreign currency.

Procedure

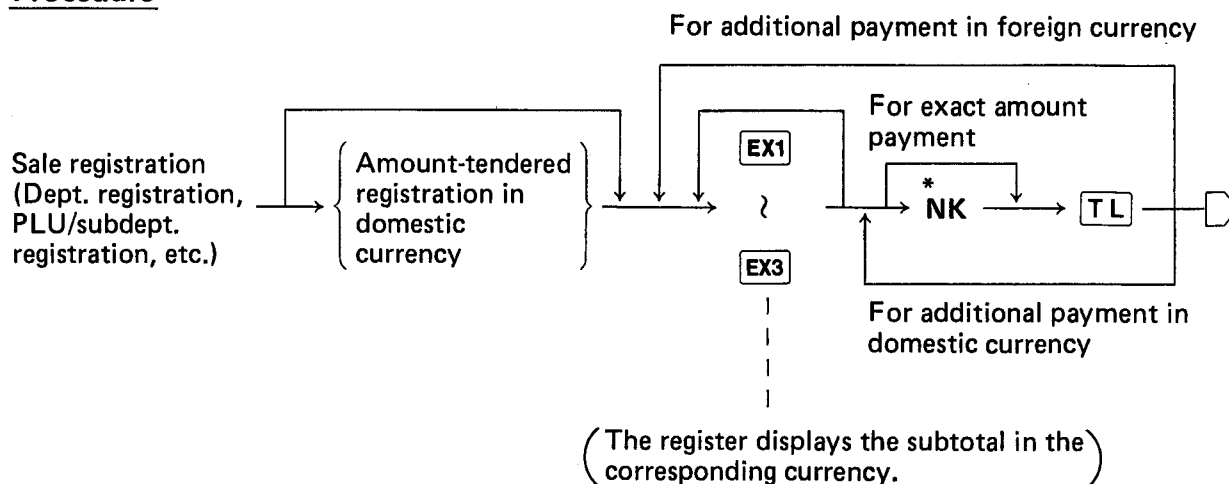

*NK: Enter an amount tendered in the corresponding currency. (max. 8 digits)

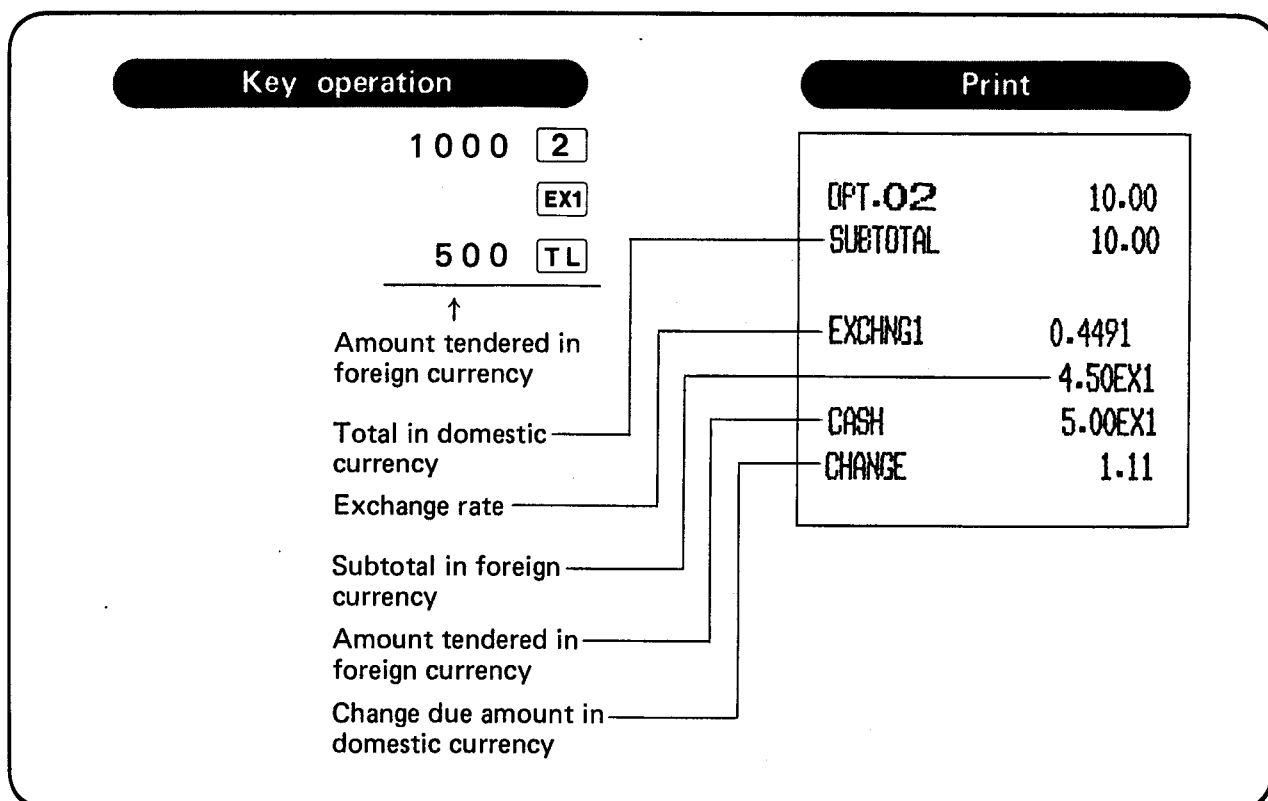


7. Computation of VAT/TAX

The machine may be programmed for the following four tax systems by your dealer.

(1) Manual VAT 1 system

The machine performs the VAT calculation for the then subtotal.

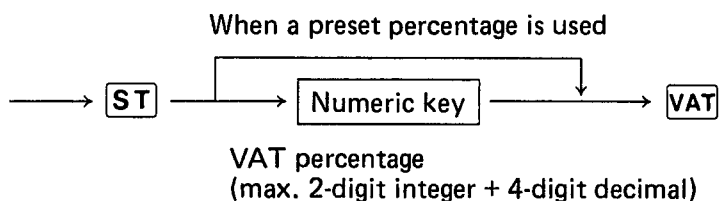

(2) Manual VAT 1 – 6 system



The VAT 1 – 6 system provides the VAT calculation for taxable 1 – 6 subtotals, which is performed at the preset percentages when the VAT key is pressed.

(3) Auto VAT 1 – 6 system

When a transaction has been finalized (or when the first amount tendering is done), the machine calculates VATs for taxable 1 – 6 subtotals, using the corresponding preset percentages.

(4) Auto TAX 1 – 6 system

When a transaction has been finalized (or when the first amount tendering is done), the machine calculates taxes for taxable 1 – 6 subtotals, using the corresponding preset percentages and adds the calculated taxes to the subtotals.

Key operation		Print
(When the manual VAT 1–6 system is selected.)	5 5 0 [8]	DPT.08 5.50
	[ST]	SUBTOTAL 5.50
	[VAT]	TAXABLE1 5.50
	[TL]	VAT 1 1.83
		NET 1 3.67
		CASH 5.50

8. VAT shift entries

This feature is intended to shift the tax status of a particular department or PLU programmed for taxable 1 or taxable 1 and taxable 3 when such a department or PLU is entered.

1. When the VAT shift entry is made for a particular department or PLU programmed for taxable 1, their tax status shifts to taxable 2.
2. When this entry is made for a particular department or PLU programmed for taxable 1 and taxable 3, the tax status "taxable 1" remains unchanged, but the other, "taxable 3", shifts to tax delete.

Procedure

Press the **VAT SHIFT** key to activate the VAT shift entry prior to entering department(s) or PLU(s) concerned.

Key operation	Print
VAT SHIFT	
5 5 0 8	DPT.08 5.50
ST	SUBTOTAL 5.50
VAT	TAXABLE2 5.50
TL	VAT 2 0.26
	NET 2 5.24
	CASH 5.50

9. Percent calculations (premium or discount)

- Your register provides the percent calculation for the subtotal or each item entry.
- Percentage: 0.01 to 100.00% (Less than a programmed upper limit)

(1) Percent calculation for item entries.

Key operation	Print
8 0 0 [1]	DPT.01 8.00
[%1]	-10.00%
7 1 5 [2]	%1 -0.80
7 [.] 5 [%1]	DPT.02 7.15
[TL]	-7.5%
	%1 -0.54
	SUBTOTAL 13.81
	CASH 13.81

(2) Percent calculation for the subtotal

Key operation	Print
4 [X]	4X 1.40
1 4 0 [1]	DPT.01 5.60
2 2 0 [2]	DPT.02 2.20
[2]	DPT.02 2.20
[ST]	SUBTOTAL 10.00
[%2]	10.00%
[TL]	%2 1.00
	SUBTOTAL 11.00
	CASH 11.00

10. Deduction

Your register allows you to deduct a certain amount less than a programmed upper limit after the entry of an item or the computation of a subtotal.

(1) Deduction for item entries

Key operation	Print
8 5 0 [2]	DPT.02 8.50
5 0 [⊖1]	(-)1 -0.50
[TL]	SUBTOTAL 8.00
	CASH 8.00

(2) Deduction for the subtotal

Key operation	Print
7 1 0 [3]	DPT.03 7.10
5 0 0 [2]	DPT.02 5.00
[ST]	(-)2 -0.25
2 5 [⊖2]	SUBTOTAL 11.85
[TL]	CASH 11.85

11. Refund entries


- For refund entry, press the **RF** key first and then the department, PLU and direct PLU keys.
- Repeated or multiplied refund entries are also possible.

Key operation	Print
2 5 0 RF 1	DPT.01 RF -2.50
7 ⊗	-7X 7.20
RF 3	PLU.0003 RF -50.40
TL	SUBTOTAL -52.90
	CHANGE 52.90

12. Half-pint entries

- The half-pint function enables entry of half a unit price. For details, contact your dealer.
- Half-pint entries can be made for departments and PLUs.
- For entries, press the **HALF PINT** key first and then the department, PLU and direct PLU keys.

Procedure

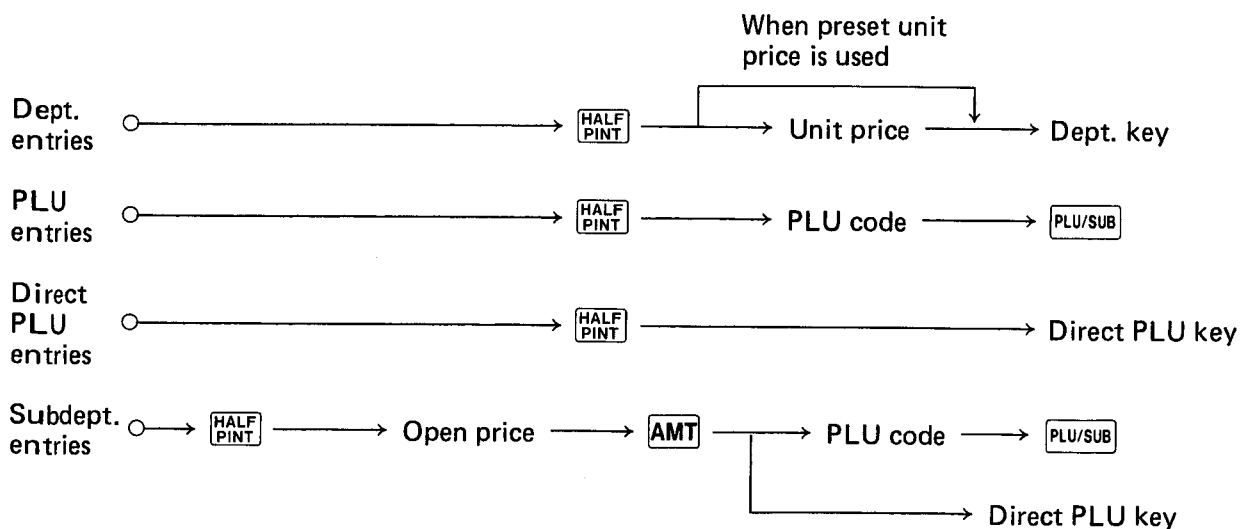

13. No sale (exchange)

Simply press the **NS** key without any entry. The drawer will open and the machine will print the "NO SALE" on both the journal and the receipt.

#0000000000045678
NO SALE

14. Set PLU entries

Operation is the same as for normal PLU's.

When a set PLU is entered, the linked PLU's label is printed automatically.

Key operation	Print
11	PLU.0011 110.00
TL	PLU.0012
	PLU.0013
	PLU.0014
	PLU.0015
	PLU.0016
	PLU.0017
	SUBTOTAL 110.00
	CASH 110.00


15. With/Without function

Only one menu (linked PLU) of the set PLU can be modified (canceled or exchanged for another) temporarily by using **WITH OUT** and **WITH** keys.

Without: Cancel a linked PLU.

Without/with: Exchange a linked PLU for another.

Procedure

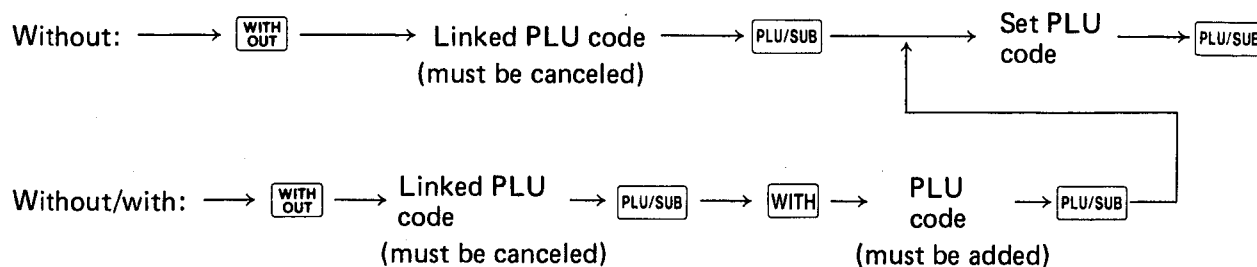

Key operation

WITH OUT 1 7 **PLU/SUB**
WITH 1 8 **PLU/SUB**
1 1 **PLU/SUB**
TL

Print

PLU.0011	110.00
PLU.0012	
PLU.0013	
PLU.0014	
PLU.0015	
PLU.0016	
PLU.0018	
SUBTOTAL	110.00
CASH	110.00

16. PLU level shift (for direct PLU)

The shift can double or triple the number of PLUs on your register without adding additional direct PLU keys.

You can use direct PLUs in three levels by utilizing shift keys **L1** , **L2** , and **L3** .

These keys have the following functions.

L1 : Shifts the PLU level from level 2 or 3 to level 1 (normal level).

L2 : Shifts the PLU level from level 1 or 3 to level 2.

L3 : Shifts the PLU level from level 1 or 2 to level 3.

You must program your register in the PGM2 mode to select one of the two PLU level shift modes — automatic return mode* and lock shift mode** — and decide whether to allow PLU level shift in the REG and/or MGR modes.


* The automatic return mode automatically shifts the PLU level back to level 1 after a direct PLU key is pressed.

** The lock shift mode holds the current PLU level until depression of a PLU level shift key.

• Automatic return mode

If you shift the PLU level in the automatic return mode, press a desired PLU level shift key before numeric entry.


Key entry sequence

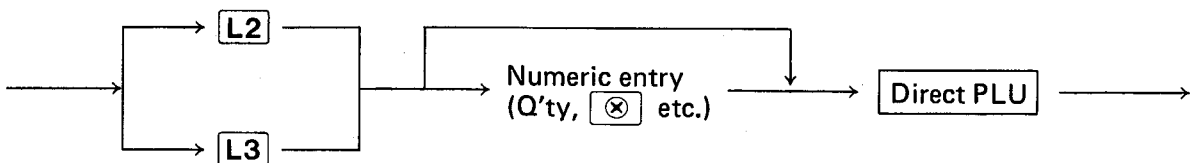

• Lock shift mode

If you shift the PLU level in the lock shift mode, press a desired PLU level shift key before numeric entry.

Key entry sequence

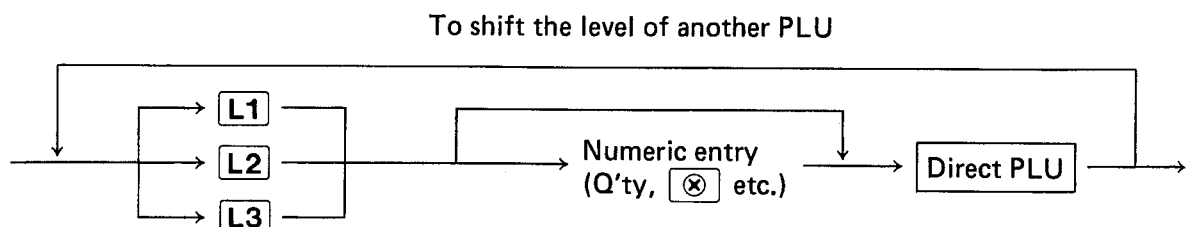

Note: If you select the automatic return mode, it is not necessary to use the **L1** key on the keyboard, but if you select the lock shift mode, it is necessary to use the key.

- When your register has been programmed for the automatic return mode:

Key operation		Print
	<input type="text" value="1"/>	
<input type="text" value="L2"/>	<input type="text" value="1"/>	PLU.0001 24.00
<input type="text" value="L3"/>	<input type="text" value="1"/>	PLU.0019 3.60
	<input type="text" value="TL"/>	PLU.0037 6.50
		SUBTOTAL 34.10
		CASH 34.10

- When your register has been programmed for the lock shift mode:

Key operation		Print
<input type="text" value="L1"/>	<input type="text" value="1"/>	PLU.0001 24.00
<input type="text" value="L2"/>	<input type="text" value="1"/>	PLU.0019 3.60
<input type="text" value="L3"/>	<input type="text" value="1"/>	PLU.0037 6.50
	<input type="text" value="TL"/>	SUBTOTAL 34.10
		CASH 34.10

17. Unit price shift operation for PLU

Two different price levels can be programmed for each PLU.

The price levels can be changed from one to the other for PLU registrations.

There are two ways available for price level selection:


(1) Price level selection by clerk price level programming

Either of price levels 1 and 2 can be assigned to each clerk by programming job #240.

(2) Price level selection by the PRICE SHIFT key

The price level can be changed by pressing the PRICE SHIFT key at the time of a PLU registration.

Procedure

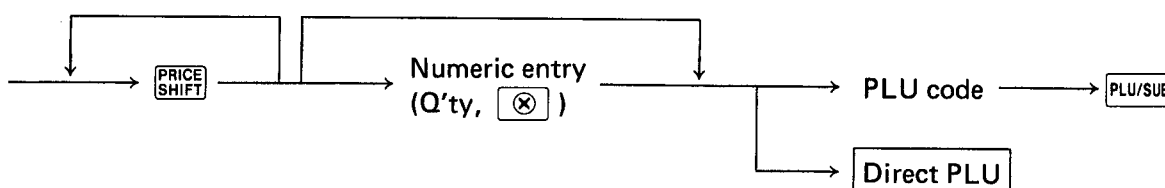

You must program your register in the PGM2 mode to select one of the two price level shift modes — automatic return mode* and lock shift mode** — and decide whether to allow price level shift in the REG and/or MGR modes.

* The automatic return mode automatically shifts the price level back to level 1 after a PLU entry.

** The lock shift mode holds the current price level until depression of the PRICE SHIFT key.

- When your register has been programmed for the automatic return mode:

Key operation		Print
PRICE SHIFT	1	PLU/SUB
	1	PLU/SUB
		TL
		PLU.0001 20.00
		PLU.0001 24.00
		SUBTOTAL 44.00
		CASH 44.00

- When your register has been programmed for the lock shift mode:

Key operation		Print
PRICE SHIFT	1	PLU/SUB
	1	PLU/SUB
PRICE SHIFT	1	PLU/SUB
		TL
		PLU.0001 20.00
		PLU.0001 20.00
		PLU.0001 24.00
		SUBTOTAL 64.00
		CASH 64.00


18. Time PLU entries

Your register can automatically count the charge for time intervals (such as parking, sports club, billiards, --- etc.) by making a time PLU entry.

Only when you have opened GLU (guest look-up) file, a time PLU entry can be made.


- Start of time sale

Procedure

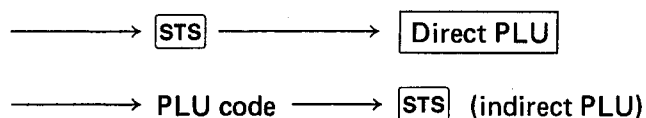

- End of time sale

Procedure

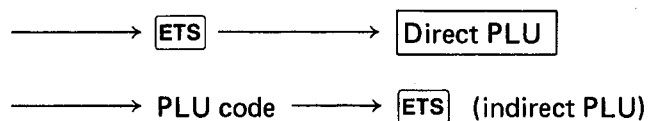

Key operation	Print
1000	26/12/88 1:00P 123#1342
GLU	*A* CLERK01 GLU#1000
STS	***PEAL 0.00
6	START 1:00PM
NBAL	PLU.0006 0.05
	***NBAL 0.00

Key operation	Print
1000	26/12/88 1:15P 123#1344
GLU	*A* CLERK01 GLU#1000
ETS	***PEAL 0.00
6	1:00PM - 1:15PM
NBAL	15MIN 0.05
	PLU.0006 0.75
	***NEAL 0.75

19. Printing of non-add code numbers

Enter a non-add code number such as a guest code number and credit card number within a maximum of 16 digits and press the **#** key. The numerical entry can be made at any point during the entry of a sale. Your register will print it at once.

Key operation	Print
1 2 3 0 #	#00000000000001230
1 5 0 0 1	DPT.01 15.00
TL	SUBTOTAL 15.00
	CASH 15.00

20. Guest check copy

You can use this function when you want to take a copy of guest check. Press the **GC COPY** key and make a desired entry.


Note: The guest check copy has nothing to do with the memory.

Key operation	Print
GC COPY	*G.C.COPY*
2 5 0 1	DPT.01 2.50
4 5 0 2	DPT.02 4.50
2	DPT.02 4.50
3 3 0 3	DPT.03 3.30
TL	SUBTOTAL 14.80
	CASH 14.80

21. Free text printing

- Free text programmed in the PGM mode can be printed out by entering the corresponding text code and pressing the **TEXT #** key or by pressing a corresponding direct text key.
- The text has nothing to do with the memory.

Procedure

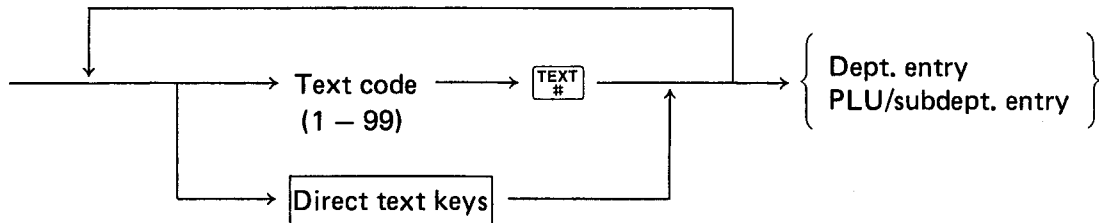


Key operation	Print
TEXT 1	
1000 1	DPT.01 10.00
TL	TEXT01
	SUBTOTAL 10.00
	CASH 10.00

Note: Your register can print max. 4 texts on the receipt for each item entry.

22. Received on account entries

Procedure

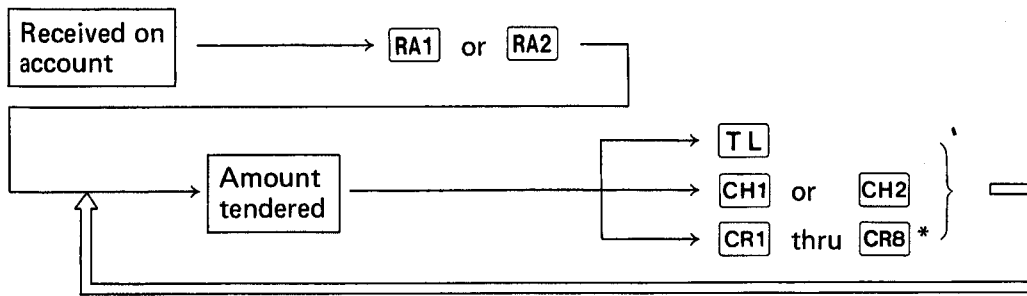


When split or mixed tendering is made.

- * Of the **CR1** through **CR8** keys, you may use only the one that is programmed to be capable of entering amounts tendered.

Key operation	Print
1 2 3 4 5 #	#00000000000012345
4 8 0 0 RA1	***RA1 48.00
4 0 0 0 CH1	CHECK1 40.00
8 0 0 TL	CASH 8.00


Note: You may choose the direct cash RA procedure instead of the above procedure. Please consult your dealer to change the procedure.

Revised procedure

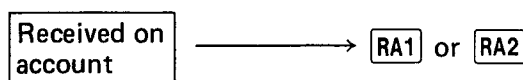

23. Paid out entries

Procedure

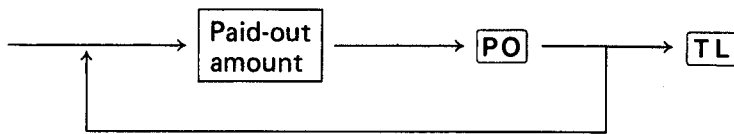

Key operation	Print
6 7 8 9 [#]	#000000000000006789
3 0 0 0 [PO]	***PO 30.00
[TL]	CASH 30.00

24. Transfer a cash deal into a cheque or credit deal

You can transfer a cash deal into a cheque or credit deal.

Enter an amount, then press the [CH] or [CR] key.

Key operation	Print
2 0 0 0 [CH]	TRANSFER
	CHECK1 20.00

25. Guest check entries (PBLU/GLU)

Two different guest check entry systems are available. It depends on how your register has been programmed which of these is used.

These are the previous balance lookup (PBLU) system and the guest lookup (GLU) system. Consult your local dealer for their selection.

PBLU system: If this system is selected, the previous balance is automatically loaded by entering a guest check code (= a PBLU code) when reordering occurs.

The details of the order are not stored in the file.

GLU system: If this system is selected, the balance due and the details of the order are stored in the guest check file.


This information is automatically loaded by entering a guest check code (= a GLU code) when reordering occurs.

(1) PBLU system

- **New guest**

For a new guest, open a new guest check and assign a PBLU code.

Procedure

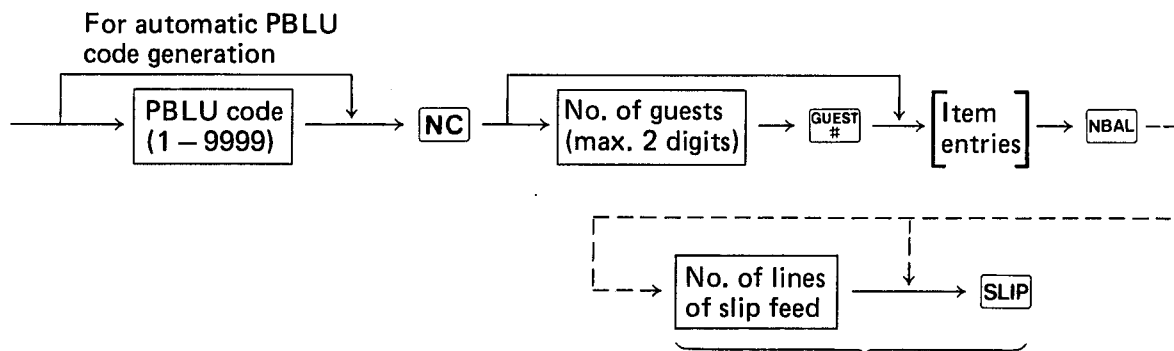

Only when the buffered slip system is selected.

Note 1: The PBLU code is the number that will be used whenever the guest check must be accessed for reordering or final payment.


Note 2: Your register can be set up to generate the PBLU code in a sequential fashion. Or, the PBLU code can be entered manually.

Key operation	Print
1 0 0 0 <input type="button" value="NC"/>	<div> 26/12/88 1:51P 123#1377 *A* CLERK01 PEL#1000 ***PEAL 0.00 DPT.02 8.00 DPT.03 7.00 ***NEAL 15.00 </div>
8 0 0 <input type="button" value="2"/>	
7 0 0 <input type="button" value="3"/>	
<input type="button" value="NBAL"/>	

• Additional ordering

For an existing guest, enter the PBLU code first for automatic PB lookup. (Your register may be programmed to require that a check digit be added to the PBLU code.)

Procedure

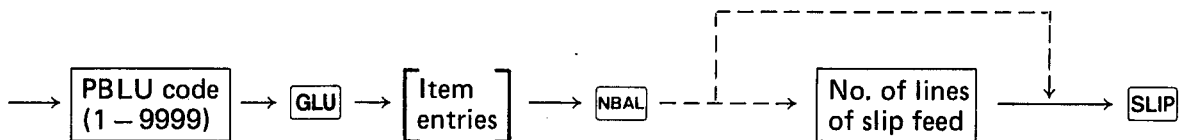


Key operation	Print
1 0 0 0 <input type="button" value="GLU"/>	<div> 26/12/88 1:52P 123#1378 *A* CLERK01 PEL#1000 ***PEAL 15.00 DPT.01 1.00 DPT.01 1.00 ***NEAL 17.00 </div>
1 0 0 <input type="button" value="1"/>	
<input type="button" value="1"/>	
<input type="button" value="NBAL"/>	

- **Settlement**

Use the following procedure.

Procedure

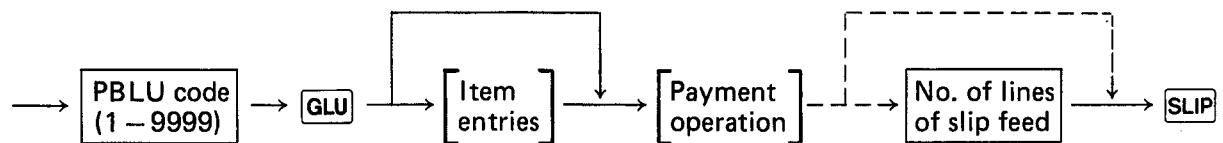

Key operation

1 0 0 0 [GLU]

1 0 0 0 [CH1]

7 0 0 [TL]

Print

26/12/88 1:52P 123#1379

A CLERK01 PBL#1000

***PBAL 17.00

SUBTOTAL 17.00


CHECK1 10.00

CASH 7.00

(2) GLU system

- New guest

For a new guest, open a new guest check and assign a GLU code.

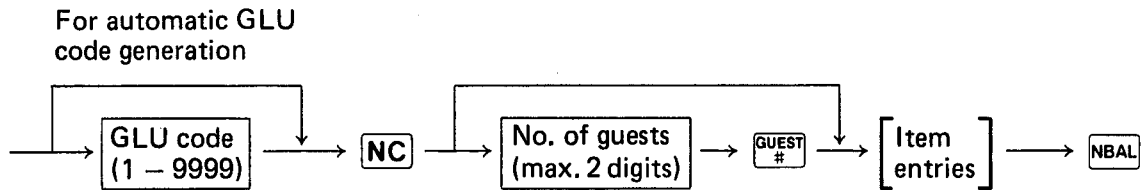

Note 1: The GLU code is the number that will be used whenever the guest check must be accessed for reordering or final payment.


Note 2: Your register can be set up to generate the GLU code in a sequential fashion. Or, the GLU code can be entered manually.

Key operation	Print
1 0 0 0 <input type="button" value="NC"/>	26/12/88 4:43P 123#1424
8 0 0 <input type="button" value="2"/>	*A* CLERK01 GLU#1000
7 0 0 <input type="button" value="3"/>	***PBAL 0.00
<input type="button" value="NBAL"/>	DPT.02 8.00
	DPT.03 7.00
	***NBAL 15.00

- **Additional ordering**

For an existing guest, enter the GLU code first for automatic guest lookup. (Your register may be programmed to require that a check digit be added to the GLU code.)

Procedure

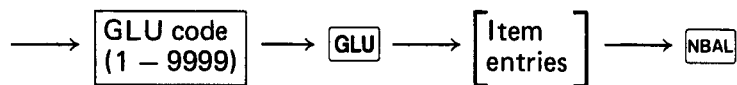


Key operation	Print
1 0 0 0 [GLU]	26/12/88 4:43P 123#1425
1 0 0 [1]	*A* CLERK01 GLU#1000
[1]	
[NBAL]	
	***PEAL 15.00
	DPT.O1 1.00
	DPT.O1 1.00
	***NBAL 17.00

- **Settlement**

Use the following procedure.

Procedure

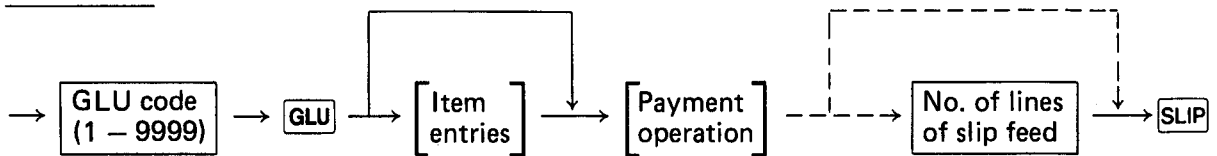

Key operation	Print
1 0 0 0 GLU	<div style="font-family: monospace; font-size: 0.9em;"> 26/12/88 4:43P 123#1426 *A* CLERK01 GLU#1000 ***FBAL 17.00 SUBTOTAL 17.00 CHECK1 10.00 CASH 7.00 </div>
1 0 0 0 CH1	
7 0 0 TL	

(3) Error messages

If the PBLU/GLU code is incorrectly entered, an error occurs and the machine displays the following message.

Text	Error status
NO RECORD	The PBLU/GLU code is not programmed yet.
NOT FREE	The PBLU/GLU code is in use.
NO AUTHORITY	The clerk has entered a PBLU/GLU code for which he or she is not authorized.
MEMORY FULL	The guest check file is filled up.

26. Service charge

When the payment operation is made for item registrations, the service charge amount is calculated and printed.

You can program a percent rate for calculating the service charge in the PGM1 or PGM2 modes.

If the percent rate is programmed as 0%, the machine does not print any service charge.

Key operation	Print
1500 <input type="button" value="2"/>	DPT.02 15.00
300 <input type="button" value="3"/>	DPT.03 3.00
<input type="button" value="ST"/>	SUBTOTAL 18.00
<input type="button" value="TL"/>	SER-CHRG 1.62
	CASH 19.62


27. Deposit entries

Deposit refers to a prepayment on a guest account. It can be received in cash or by check.

You can make the deposit entry only when entering a guest check. It cannot be done during processing of a tendered amount.

A received deposit can be refunded by pressing the **DEPO (-)** key. You cannot attempt to refund an amount larger than the deposit balance.

Procedure

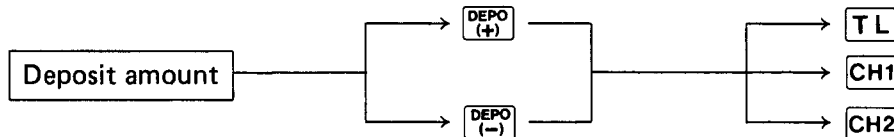

Key operation	Print
1 0 0 0 GLU	26/12/88 5:00P 123#1440
5 0 0 0 DEPO (+)	*A* CLERK01 GLU#1000
TL	***PEAL 0.00
NBAL	CASH
	DEPOSIT 50.00
	***NEAL -50.00

Key operation	Print
1 0 0 0 GLU	26/12/88 5:00P 123#1441
5 0 0 0 DEPO (-)	*A* CLERK01 GLU#1000
TL	***PEAL -50.00
NBAL	CASH
	DEPOS(-) -50.00
	***NEAL 0.00


28. Transferring guest checks out/in

(1) Transferring guest checks out

At the end of a shift or whenever a clerk is relieved, one or more open guest checks can be transferred from the clerk to the open check file until responsibility for the check(s) is assigned to another clerk.

To do this:

Procedure

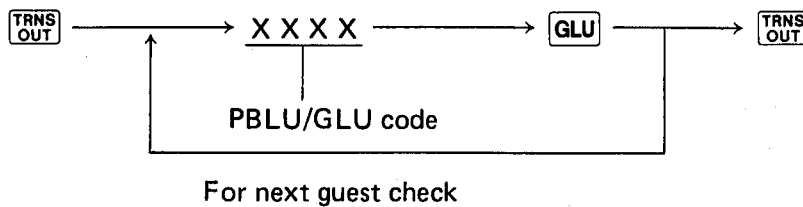


Key operation	Print
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 0 0 0</div> <div style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">TRANS OUT</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">GLU</div> <div style="border: 1px solid black; padding: 2px;">TRANS OUT</div> </div> </div>	<div style="border: 1px solid black; padding: 10px; margin: 0 auto; width: 80%;"> <p>26/12/88 5:05P 123#1450</p> <p>*A* CLERK01</p> <p>*TRAN.OUT*</p> <div style="display: flex; justify-content: space-between;"> TRAN.OUT <div style="text-align: right;"> <p>#1000</p> <p>1.00</p> </div> </div> </div>

(2) Transferring guest checks in

When a second clerk is assigned responsibility for a guest check that has been transferred out, use this procedure:

Procedure

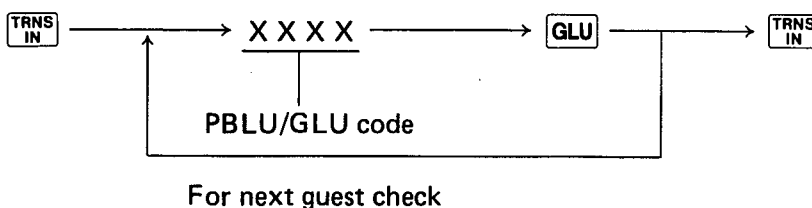


Key operation	Print
<div style="display: flex; justify-content: space-around; align-items: center;"> <div>1000</div> <div style="border: 1px solid black; padding: 2px 5px;">TRANS IN</div> <div style="border: 1px solid black; padding: 2px 5px;">GLU</div> <div style="border: 1px solid black; padding: 2px 5px;">TRANS IN</div> </div>	<div style="border: 1px solid black; padding: 10px;"> <div style="font-family: monospace; font-size: 1.2em;"> 26/12/88 5:05P 123#1451 *A* CLERK01 *TRAN.IN * #1000 TRAN.IN 1.00 </div> </div>

29. Bill totalizing

- The bill totalizing function is used to totalize multiple bills when, for example, a particular guest pays not only his or her bill but also the bills of other guests.

Procedure

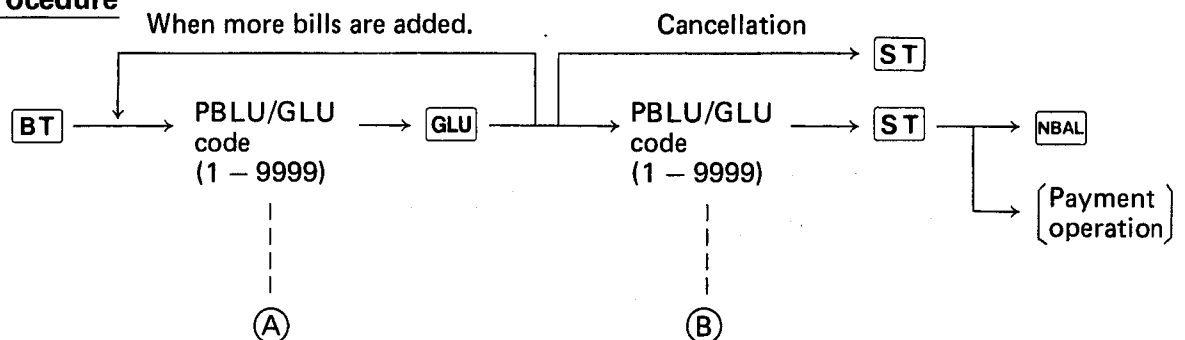

Note 1: All (A) bills are added to (B) bill.

Note 2: A maximum of 5 bills are available for (A).

Note 3: The PBLU/GLU code of (A) must be in use.


If the guest check(s) of (A) or (B) has already been handled by another clerk, the guest check(s) must have been made "Transferring out".

Note 4: This function makes it possible to change the PBLU/GLU code of the bill. It requires that:

- The current code is entered for (A) and
- A new code is entered for (B).

Key operation	Print
	26/12/88 5:07P 123#1452
	A CLERK01 GLU#1000
	 B.T.
	 #1001
1001	***PEAL 2.00
1002	#1002
	***PEAL 3.00
1000	#1000
	***PEAL 1.00
	***NEAL 6.00


30. Guest check receipt (only for the GLU system)

The details of the guest check can be printed on the receipt by pressing  key. This function is used for two purposes;

- Temporary inspection of the guest check
- Using the R/J printer instead of the slip printer


Procedure

(1) When the register is in the "out of transaction" state.

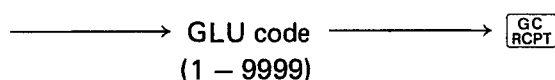

- The register prints out the details temporarily.

(2) When the transaction is finalized by a payment operation.

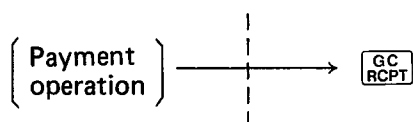

immediately after finalization

- When this operation is made, the register exits the compulsory slip printing mode, and the details of the guest check is cleared.

Note: The message text "G. C. RCPT" is printed on the guest check receipt.

Key operation

1 0 0 0

1 0 0

1 0 0 0

Print

26/12/88 5:17P 123#1473

A CLERK01 GLU#1000

G.C.RCPT

***PBAL 0.00

DPT.02 8.00

DPT.03 7.00

2X 1.00

DPT.01 2.00

***NEAL 17.00

Key operation

1 0 0 0

1 0 0 0

7 0 0

Print

26/12/88 5:18P 123#1477

A CLERK01 GLU#1000

G.C.RCPT

***PBAL 0.00

DPT.02 8.00

DPT.03 7.00

2X 1.00

DPT.01 2.00


SUBTOTAL 17.00

CHECK1 10.00


 
 
 
 
 
 
 
 
 
 
CASH 7.00

CORRECTION

1. Correction of the last entry (direct void)

If you make any incorrect department, PLU/subdepartment, percentage, deduction, refund, or received on account entry by mistake, you can void this incorrect entry by pressing the  key immediately after the incorrect entry.

Key operation

1 2 5 0 

 2 

 6 0 0 


 3 2 8 
 2 8 



Print

DPT.01		12.50
DPT.01	"	-12.50
PLU.0002		1.50
PLU.0002	"	-1.50
DPT.03		6.00
		-10.00%
%1		-0.60
%1	"	0.60
DPT.04		3.28
(-)1		-0.28
(-)1	"	0.28
SUBTOTAL		9.28
CASH		9.28


2. Correction of the next-to-last or earlier entries (indirect void)

You can void any incorrect department, PLU/subdepartment, or refund entry made during a transaction by specifying it if you find it before finalizing the transaction (before making an amount tendered entry). This void function is applicable to plus department and PLU/subdepartment entries only, however.

Key operation	Print
1310 [1]	DPT.01 13.10
1 [PLU/SUB]	PLU.0001 24.00
[2]	PLU.0002 1.50
1 [S] [PLU/SUB]	PLU.0001 0 -24.00
1310 [S] [1]	DPT.01 0 -13.10
[S] [2]	PLU.0002 0 -1.50
[TL]	SUBTOTAL 0.00
	CASH 0.00

CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)

When you need to void incorrect entries that are found after finalizing a transaction or cannot be corrected by direct or indirect void, follow this procedure in the VOID mode.

- (1) Press the  key to put your register in the VOID mode.
- (2) Repeat the entries that are recorded on an incorrect receipt.
This will result in all data for the incorrect transaction being removed from the machine's memory and the addition of the voided amounts to the VOID-mode totalizer.

Incorrect receipt

26/12/88 5:29P 123#1485	
A CLERK01	
DPT.01	8.55
DPT.02	12.85
SUBTOTAL	21.40
CASH	21.40



Cancellation receipt

26/12/88 5:29P 123#1486	
A CLERK01	
VOID	
DPT.01	8.55
DPT.02	12.85
SUBTOTAL	21.40
CASH	21.40

Note: Your machine leaves the VOID mode whenever a transaction is cancelled (i.e. finalized in the VOID mode). To void additional transactions repeat steps (1) and (2) above.

COPY RECEIPT PRINTING

If your guest wants receipt after you have finalized a transaction with the receipt ON-OFF switch at the OFF position (no receipting), press the **RCPT** key. This will make a copy receipt with the total printed.

Your register can print copy receipts regardless of the position of the receipt ON-OFF switch.

Consult your local dealer.

Key operation	Print on the receipt	Print on the journal
8 5 0 2	<div> 26/12/88 5:32P 123#1490 *A* CLERK01 CASH 13.00 </div>	<div> 26/12/88 5:32P 123#1490 *A* CLERK01 DPT.02 8.50 3X 1.50 DPT.01 4.50 SUBTOTAL 13.00 CASH 13.00 </div>
3 ⊗		
1 5 0 1		
TL		
For receipting → RCPT		
	<div> 26/12/88 5:32P 123#1490 *A* CLERK01 *COPY* CASH 13.00 </div>	

When the receipt ON-OFF switch is in the ON position, the "***COPY***" symbol will be printed on the receipt.

TRANSACTION FINALIZING (BY REMOVING THE CLERK KEY)

This function enables a transaction to be automatically finalized by removing the inserted clerk key when the real clerk key system has been selected.

Those transactions that have started with the entry of PBLU/GLU are automatically finalized when the "NBAL" key is pressed, and other transactions are handled as if the cash key had been pressed.

For the details of this function, consult your local dealer.

OVERLAPPED CLERK ENTRY

This function allows to switch from one clerk to another clerk and to interrupt the first clerk's entry. So the second clerk can do his entry in this mode. Interrupt handling is possible only in the overlapped clerk entry. For actual use of this function, contact your dealer.

Example:

Clerk A: Entry started

Clerk B: Clerk change (A to B), interrupt initiated

Clerk B: Transaction finished

Clerk A: Clerk change (B to A), entry restarted

Note: The overlapped clerk entry is not effective while the tendering sale is going on.


Key operation		Comments
(1) Entry is started.	(<input type="text" value="A"/>)	Clerk A is specified.
	1 0 0 <input type="text" value="1"/>	
	3 6 0 <input type="text" value="3"/>	
	<input type="text" value="3"/>	
(2) Entry is interrupted.	(<input type="text" value="B"/>)	Clerk B is specified.
	3 <input type="text" value="⊗"/>	
	1 5 0 <input type="text" value="2"/>	
	<input type="text" value="TL"/>	
(3) Entry is restarted.	(<input type="text" value="A"/>)	Clerk A is specified.
	1 0 0 <input type="text" value="1"/>	
	3 0 0 <input type="text" value="3"/>	
	<input type="text" value="TL"/>	

VALIDATION PRINTING FUNCTION

The machine can issue simplified receipt slips.

1. Validation slip setting and printing


- (1) Insert the slip, with its printed face down, into the slip guide.
Make sure the slip is pushed in enough deep and fully to the right. Otherwise, it may result in poor printing.
- (2) Now press the **VP** key. The validation printing will start.

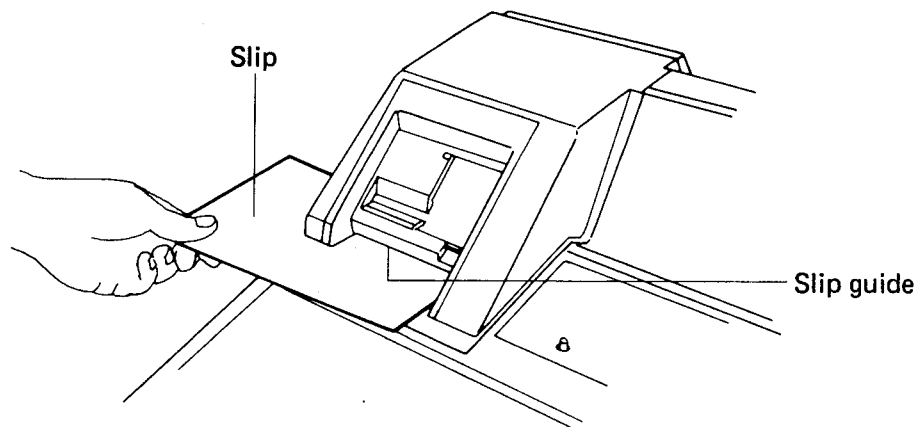


2. The validation printing can occur just after the following registrations

2-1. Validation printing of item entries


(1) Department entry

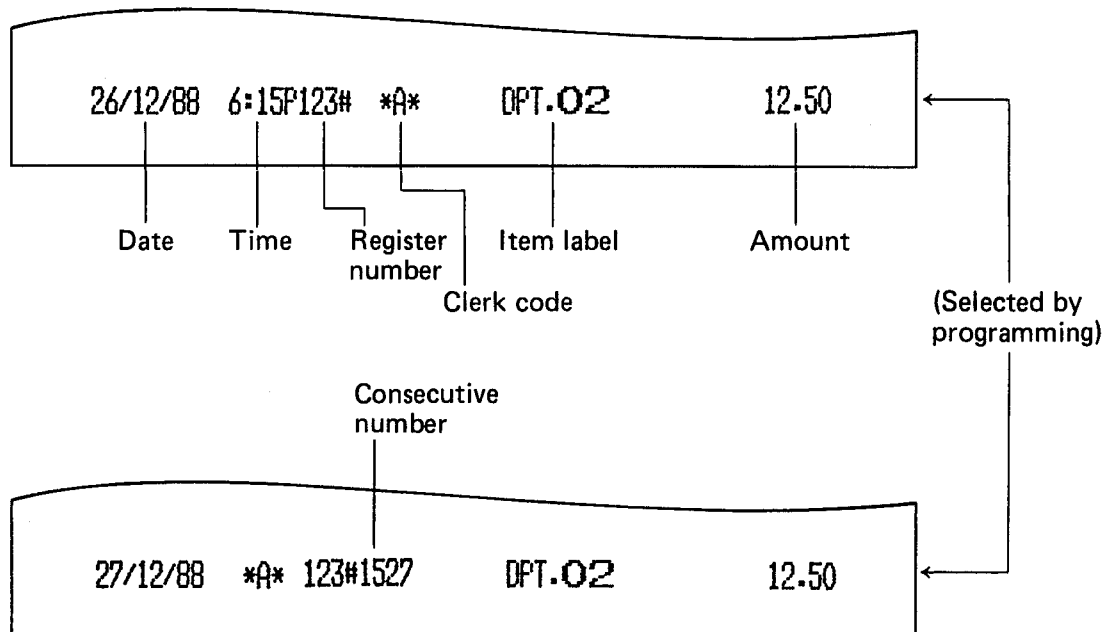

(2) Refund entry

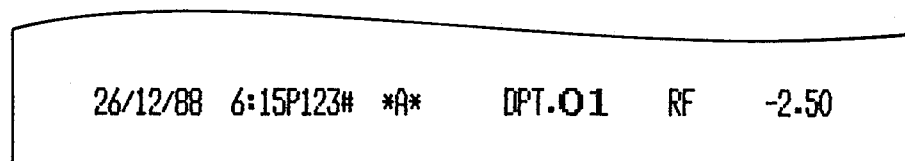


(3) Direct or indirect void

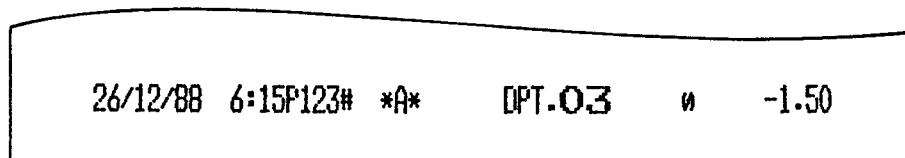

Note: Other item entries can also be printed. For details, consult your local dealer.

2-2. Validation printing after the finalization of a transaction

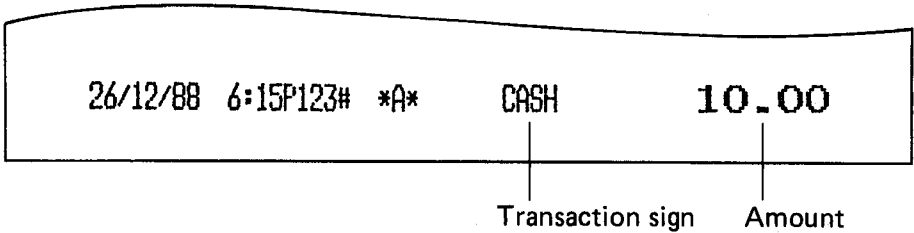


Transaction signs
(programmable)

- (1) After completion of cash sale entry
 - When a change calculation occurs * * * TOTAL
 - When no change calculation occurs CASH
- (2) After completion of check sale entry
 - When a change calculation occurs * * * TOTAL
 - When no change calculation occurs CHECK1 or CHECK2
- (3) After completion of credit sale entry
 - At only credit sale CREDIT1 thru CREDIT8
 - At mixed tendering (check sale + cash sale) * * * TOTAL
- (4) After completion of PO entry * * * PO
- (5) After completion of RA entry * * * RA1 or * * * RA2

3. Validation slip specification

Make validation slips according to the following specification.
The use of any slips other than specified causes the printer to malfunction.

- (1) Type of slip
Normal paper, pressure-sensitive paper, or carbon paper
- (2) Dimensions of slip
Size: 130 mm or wider, 70 mm or longer
Thickness: 0.07 – 0.15 mm

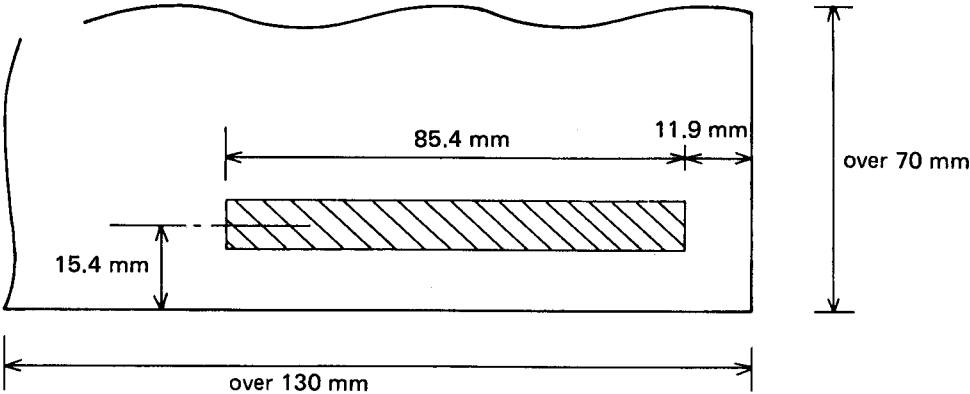

MANAGER MODE

The manager mode is used when management decisions must be made concerning register entry, for example, for overriding limitations and for other various non-programming management tasks.

You can also do all normal cash register operations in this mode.

To enter the manager mode, insert the manager key into the mode switch and turn it to the MGR position. A cashier/clerk key must also be inserted into the cashier/clerk switch.

PRINTING OF THE EMPLOYEE ARRIVAL AND DEPARTURE TIMES

The register allows the operator to print the employee arrival and departure times, using the validation printing function.

- (1) Turn the mode switch to the "OP X/Z" position.
- (2) Put a card into the paper chute and perform the following key operation.
 - 1) Arrival time (printed on the receipt)
Numeric key 1 → **VP**
 - 2) Departure time (printed on the journal)
Numeric key 2 → **VP**

Sample printout


27/12/88	*A*	8:40AM	5:10PM	8:30
	Clerk code	Arrival time	Departure time	Working time

TIME DISPLAY AND AUTOMATIC UPDATING OF THE DATE

- **Time display**

When you need a time display, turn the mode switch to the OP X/Z position after the preceding transaction or operation is finalized.

Sample display of 10:25

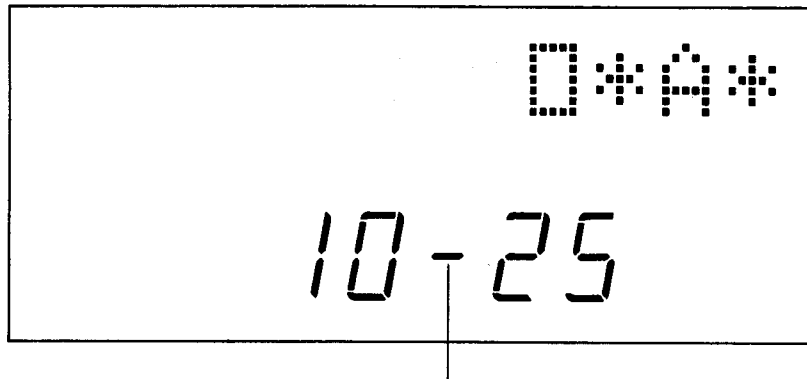

This bar flashes every 0.5 second.

- **Automatic updating of the date**

Once the internal clock unit is started at the correct time, it continues to run as long as the built-in battery is charged, and updates the date (day, month, year) properly.

READING (X) AND RESETTING (Z) OF SALES TOTALS

- Use the reading function (X) when you need to take a reading of sales information entered since the last resetting. You can take this reading any number of times. It does not affect the register's memory.
- Use the resetting function (Z) when you need to clear the register's memory. Resetting prints all sales information and clears the entire memory except for the GT1 thru GT3, reset count, and consecutive number.
- X and Z reports are printed on both the receipt and journal. To print the reports on a slip, it is necessary to press the **SLIP** key in place of the **TL** key.

Summary of reading (X) and resetting (Z) reports and the key operations to obtain the reports

- X1 and Z1 reports: Daily sales reports
- X2 and Z2 reports: Periodic (monthly) consolidation reports
- In the OP X/Z mode: Y = 0 (0 is not required.)
- In the X1/Z1 mode: Y = 1
- In the X2/Z2 mode: Y = 2

Item	Mode switch position	Job code	Key operation
General report (Full item report)	X1/Z1 or X2/Z2	Y00	
Full clerk report	X1/Z1 or X2/Z2	Y40	
Individual clerk report	X1/Z1	Y41	
	OP X/Z		
Full cashier report	X1/Z1 or X2/Z2	Y50	

Item	Mode switch position	Job code	Key operation
Individual cashier report	X1/Z1	Y51	
	OP X/Z		
Full department report	X1/Z1 or X2/Z2	Y10	
Manual group report of dept.	X1/Z1 or X2/Z2	Y11	
Individual group report of dept.	X1/Z1	Y12	
Group total report	X1/Z1 or X2/Z2	Y13	
Commission sales report	X1/Z1 or X2/Z2	Y31	
Transaction report	X1/Z1 or X2/Z2	Y30	
PLU report by designated range	X1/Z1 or X2/Z2	Y20	
PLU report by assigned dept.	X1/Z1 or X2/Z2	Y21	
PLU report by individual group	X1/Z1	Y22	
Full group PLU report	X1/Z1 or X2/Z2	Y23	

Item	Mode switch position	Job code	Key operation
PLU stock report	X1/Z1	Y24	<pre> graph LR Y24 --> X1[⊗] X1 --> StartPLU[Start PLU code] StartPLU --> X2[⊗] X2 --> EndPLU[End PLU code] EndPLU --> TL[TL] </pre>
PLU minimum stock report	X1/Z1	Y14	<pre> graph LR Y14 --> X1[⊗] X1 --> StartPLU[Start PLU code] StartPLU --> X2[⊗] X2 --> EndPLU[End PLU code] EndPLU --> TL[TL] </pre>
Cash in drawer report for individual clerk or cashier	X1/Z1	Y33	<pre> graph LR Y33 --> X1[⊗] X1 --> ClerkCode[Clerk/Cashier code] ClerkCode --> TL[TL] </pre>
Cash in drawer report for full clerk/cashier	X1/Z1	Y34	<pre> graph LR Y34 --> X1[⊗] X1 --> TL[TL] </pre>
Chief report	X1/Z1	Y32	<pre> graph LR Y32 --> X1[⊗] X1 --> TL[TL] </pre>
Hourly report	X1/Z1	Y60	<pre> graph LR Y60 --> X1[⊗] X1 --> X2[⊗] X2 --> TL[TL] </pre>
			<pre> graph LR Y60 --> X1[⊗] X1 --> StartTime[Start* time] StartTime --> X2[⊗] X2 --> EndTime[End* time] EndTime --> TL[TL] </pre> <p>Reading: Y60 → [X] → Start* time → [X] → End* time → TL (For individual time interval) For 0 entry</p> <p>* Enter the time on the military time (24-hour) system.</p>
GLU/PBLU report	X1/Z1	Y80	<pre> graph LR Y80 --> Dot[.] Dot --> X1[⊗] X1 --> TL[TL] </pre>
			<pre> graph LR Y80 --> X1[⊗] X1 --> StartGLU[Start GLU/PBLU code] StartGLU --> EndGLU[End GLU/PBLU code] EndGLU --> TL[TL] </pre> <p>Reading: Y80 → [X] → Start GLU/PBLU code → End GLU/PBLU code → TL</p>

Item	Mode switch position	Job code	Key operation
GLU/PBLU report by Clerk	X1/Z1 or OP X/Z	Y81	<p>Y81 → [X] → Clerk code → [TL] To take a reading report in the OP X/Z mode.</p>
GT report	X2/Z2	Y01	<p>Y01 → [X] → [TL]</p>
Daily net report	X2/Z2	Y70	<p>Y70 → [X] → [TL]</p> <p>Performing job #200 will clear the daily net totals.</p>
Stacked report 1 } Stacked report 5	X1/Z1 or X2/Z2	Y90 } Y94	<p>Y90 } Y94 } → [•] → [X] → [TL] Reading Resetting</p>

— SAMPLE REPORTS —

1. General report (Full item report)

- Sample X1 report

YOUR RECEIPT
THANK YOU

27/12/88 12:07P 123#2143
A CLERK01

#100 *X1* ————— Job no./mode

DPT

D02	2510
DPT.02	2246.12
	23.50%

D05	6400
DPT.05	3460.51
	100.00%
GROUP 06	18.11%
	3460.51
*DEPT TL	18270
	19107.55
	100.00%
*DEPT(-)	00
	0.00
*HASH TL	00
	0.00

- Sample Z1 report

YOUR RECEIPT
THANK YOU

27/12/88 12:10P 123#2146
A CLERK01

#100 *Z1*

Z1 0001 ————— Reset counter

GT1	00000019114.71
GT2	00000019451.83
GT3	-00000000337.12
BALANCE	00000001143.50

↓
The subsequent printout occurs
in the same format as in the
sample X1 report.

To be continued on the next page.

TRANS.

%2	30	8.15
(-)1	20	-2.10
NET1		19113.60

TAXABLE1		16406.67
VAT 1		781.27
TAXABLE2		164.75
VAT 2		4.80
NON TAX		3108.00
VAT SFT		104.00
SER.CHRG		944.52
NET2		20058.12

%1	60	-3.10
REFUND	70	31.15
u	50	17.20
MODE	10	104.48
MGRW	80	99.50
VP CNT	230	
SLIP CNT	420	
NO SALE	190	
***PBAL	520	
***NBAL	600	
G.C.CNT	30	
GUEST	3670	
TIME TTL	70	72.00

ORDER TL		20058.12
PAID TL		19834.82
O-P		223.30
TRAN.IN	20	2.00
TRAN.OUT	30	102.00
BILL BAL	10	100.00

***RA1	110	163.70
***RA2	60	10.25
***FO	130	112.80
DEPOSIT	10	120.00
DEPOS(-)	10	-120.00
CHECK1	60	361.86
CREDIT1	30	502.58
CREDIT2	10	11.55
EXCHNG1	10	50.00
CASH	620	19015.53
***CID		18908.66
CA/CH ID		19270.52
CHK/CG		56.70

To be continued.

2. Clerk report

(1) Individual clerk report

- Sample X1 report

```
YOUR RECEIPT  
THANK YOU  
  
28/12/88 2:50P 123#3170  
*A* CLERK01  
  
#141 *X1*  
*CLERK *  
  
OICLK# CLERK01 *A*  
ORDER TL 19538.47  
COM.SAL3 1Q 3000.00  
COM.AMT3 210.00  
NON COM 20Q 15615.75  
  
PAID TL 19315.17  
O-P 223.30  
REFUND 7Q 31.15  
S 5Q 17.20  
MODE 1Q 104.48  
***PBAL 52Q  
***NBAL 60Q  
G.C.CNT 3Q  
GUEST 361Q  
TIME TTL 7Q 72.00  
SER.CHRG 919.77
```

To be continued.

- Sample OPX report

```
YOUR RECEIPT  
THANK YOU  
  
28/12/88 3:33P 123#3175  
*A* CLERK01  
  
#041 *OPX*  
*CLERK *
```

↓
The subsequent printout occurs
in the same format as in the
sample X1 report.

```
DEPOS1.  
DEPOS(-)  
CHECK1 5Q  
CREDIT1 2Q .58  
CREDIT2 1Q 11.55  
EXCHNG1 1Q 50.00  
CASH 58Q 19010.38  
***CID 18909.01  
CA/CH ID 19170.87  
CHK/CG 51.20  
  
1000#  
  
FREE GLU  
1001#
```


(2) Full clerk report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:05A 123#2086
A CLERK01

#140 *X1*
*CLERK *

↓
The subsequent printout occurs in the same format as in the sample report shown in (1); and sales data for clerks print in this sequence.

3. Full department report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:13A 123#2092

A CLERK01

#110 *X1*

DPT

D02 2430

DPT.02 2146.12

22.69%

D05 6400

DPT.05 3460.51

100.00%

GROUP 06 18.21%

3460.51

*DEPT TL 18190

19007.55

100.00%

*DEPT(-) 00

0.00

*HASH TL 00

0.00

4. Manual group report of dept.

- Sample X1 report

YOUR RECEIPT	
THANK YOU	
27/12/88 11:16A 123#2098	
A CLERK01	
#111	*X1*
DPT	
D01	6920
DPT.01	6089.12
	48.72%
D03	1520
DPT.03	2948.25
	23.59%
D05	6400
DPT.05	3460.51
	27.69%
*DEPT TL	14840
	12497.88
	100.00%
*DEPT(-)	00
	0.00
*HASH TL	00
	0.00
GROUP TL	65.75%
	12497.88
***TOTAL	100.00%
	19007.55

5. Individual group report of dept.

YOUR RECEIPT	
THANK YOU	
27/12/88 11:18A 123#2101	
A CLERK01	
#112	*X1*
*GROUP *	
DO1	6920
DPT.01	6089.12
GROUP 03	_____
	6089.12

Group no.

6. Group total report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:19A 123#2102

A CLERK01

#113 *X1*

*GROUP *

GROUP 01 49.76%
9457.92

GROUP 03 32.04%
6089.12

GROUP 06 18.21%
3460.51

*DEPT TL 18190
19007.55
100.00%

*DEPT(-) 00
0.00

*HASH TL 00
0.00

7. Commission sales report

- Sample X1 report

YOUR RECEIPT		
THANK YOU		
28/12/88 3:33P 123#3173		
A CLERK01		
#131	*X1*	
*SALES *		
COM.SAL3	10	3000.00
COM.AMT3		210.00
NON COM	260	16110.65
NET1		19113.60

8. Transaction report

• Sample X1 report

YOUR RECEIPT

THANK YOU

28/12/88 3:47P 123#3177

A CLERK01

#130 *X1*

TRANS.

*DEPT TL 36350
19107.55

%2 30 8.15

(-)1 20 -2.10

NET1 19113.60

TAXABLE1 16406.67

VAT 1 781.27

TAXABLE2 164.75

VAT 2 4.80

NON TAX 3108.00

VAT SFT 104.00

SER-CHRG 944.52

NET2 20058.12

%1 60 -3.10

To be continued.

REFUND 70 31.15

50 17.20

MODE 10 104.48

MGRW 80 99.50

VP CNT 230

SLIP CNT 420

NO SALE 190

***PEAL 520

***NBAL 600

G.C.CNT 30

GUEST 3670

TIME TTL 70 72.00

ORDER TL 20058.12

PAID TL 19834.82

O-P 223.30

TRAN.IN 20 2.00

TRAN.OUT 30 102.00

BILL BAL 10 100.00

***RA1 110 163.70

***RA2 60 10.25

***FO 130 112.80

DEPOSIT 10 120.00

DEPOS(-) 10 -120.00

CHECK1 60 361.86

CREDIT1 30 502.58

CREDIT2 10 11.55

EXCHNG1 10 50.00

CASH 620 19015.53

9. PLU report by designated range

- Sample X1 report

YOUR RECEIPT	
THANK YOU	
26/12/88 4:24P 123#2183	
A CLERK01	
#120 *X1*	
PLU	
0001-0100	Range
P0001	980
PLU.0001	2156.00
P0002	290
PLU.0002	42.00
P0003	170
PLU.0003	115.20
P0006	600
	12.50%
PLU.0006	2.25
P0010	60
PLU.0010	15.00
Time PLU	
P0051 40	
PLU.0051 11.40	
***TOTAL 3200	
3954.60	

10. PLU report by assigned dept.

- Sample X1 report

YOUR RECEIPT	
THANK YOU	
27/12/88 11:25A 123#2112	
A CLERK01	
#121	*X1*
PLU	
D02	DPT.02
Dept. no.	
P0020	530
PLU.0020	188.25
***TOTAL	530
	188.25

11. PLU report by individual group

YOUR RECEIPT

THANK YOU

27/12/88 11:26A 123#2116

A CLERK01

#122 *X1*

PLU

P0003	170
PLU.0003	115.20
P0006	600
	12.50%
PLU.0006	2.25
P0020	530
PLU.0020	188.25
P0037	80
PLU.0037	32.50
P0051	40
PLU.0051	11.40
GROUP 01	1420
	349.60

12. Full group PLU report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:27A 123#2117
A CLERK01

#123 *X1*
PLU

P0003	170
PLU.0003	115.20
P0006	600
	12.50%
PLU.0006	2.25
P0020	530
PLU.0020	188.25
P0037	80
PLU.0037	32.50
P0051	40
PLU.0051	11.40
GROUP 01	1420
	349.60

P0001	980
PLU.0001	2156.00
P0019	270
PLU.0019	72.00
GROUP 06	1250
	2228.00

13. PLU stock report

YOUR RECEIPT

THANK YOU

28/12/88 12:30P 123#2147

A CLERK01

#124 *X1*

STOCK.

0020-9999

Range

P0020

PLU.0020 11S

P0021

PLU.0021 7S

P0022

PLU.0022 23S

P0023

PLU.0023 8S

P0024

PLU.0024 17S

P0025

PLU.0025 12S

P0026

PLU.0026 -3S

P0098

PLU.0098 0S

P0099

PLU.0099 0S

P0100

PLU.0100 0S

14. PLU minimum stock report

YOUR RECEIPT

THANK YOU

28/12/88 12:49P 123#2159

A CLERK01

#114 *X1*

STOCK.

0020-9999

Range

P0020	15M
PLU.0020	11S
P0021	10M
PLU.0021	7S
P0022	30M
PLU.0022	23S
P0023	20M
PLU.0023	8S
P0024	20M
PLU.0024	17S
P0025	30M
PLU.0025	12S
P0026	35M
PLU.0026	-3S

P0098	0M
PLU.0098	0S
P0099	0M
PLU.0099	0S
P0100	0M
PLU.0100	0S

15. Cash in drawer report for individual clerk

YOUR RECEIPT

THANK YOU

28/12/88 5:09P 123#3180

A CLERK01

#133 *X1*

CID

01CLK# CLERK01 *A*

***CID 18909.01

CA/CH ID 19170.87

CHK/CG 51.20

16. Full clerk cash in drawer report

YOUR RECEIPT
THANK YOU

28/12/88 5:10P 123#3181
A CLERK01

#134 *X1*
CID

01CLK# CLERK01	*A*
***CID	18909.01
CA/CH ID	19170.87
CHK/CG	51.20

02CLK# CLERK02	*E*
***CID	-0.35
CA/CH ID	99.65
CHK/CG	5.50

***TOTAL	
***CID	18908.66
CA/CH ID	19270.52
CHK/CG	56.70

17. Chief report

YOUR RECEIPT

THANK YOU

27/12/88 11:41A 123#2127

A CLERK01

#132 *X1*

*CHIEF *

T.TABLE 3169.66

19017.95 / 6

T.GUEST 61.55

19017.95 / 309

T.BILL 333.65

19017.95 / 57

I.GUEST 60

1819 / 309

I.BILL 320

1819 / 57

AVE.ITEM 10.45

19007.55 / 1819

18. Hourly report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:44A 123#2130

A CLERK01

#160 *X1*

HOURLY

10:00AM	620
	9701.66
AVE.	156.48
10:30AM	90
	2974.40
AVE.	330.49
11:00AM	10
	300.00
AVE.	300.00
11:30AM	10
	24.00
AVE.	24.00
12:00PM	00
	0.00
AVE.	0.00
12:30PM	130
	171.45
AVE.	13.19
1:00PM	130
	61.50
AVE.	4.73

19. GLU/PBLU report

- Sample X1 report

YOUR RECEIPT

THANK YOU

27/12/88 11:46A 123#2132

A CLERK01

#180 *X1*

GLU

1000# *A*

***PEAL 1043.50

DEPOSIT 0.00

DEPOS(-) 0.00

***TOTAL

***PEAL 1043.50

DEPOSIT 0.00

DEPOS(-) 0.00

20. GLU/PBLU report by clerk

- Sample X1 report

YOUR RECEIPT		
THANK YOU		
27/12/88 11:47A 123#2135		
A CLERK01		
#181	*X1*	
GLU		
01CLK# CLERK01		*A*
1000#		
***PBAL	1043.50	
DEPOSIT	0.00	
DEPOS(-)	0.00	
***TOTAL		
***PBAL	1043.50	
DEPOSIT	0.00	
DEPOS(-)	0.00	

21. GT report

YOUR RECEIPT

THANK YOU

28/12/88 1:01P 123#2161

A CLERK01

#201 *X2*

GT

GT1 00000120563.12

GT2 00000122474.38

GT3 -00000001911.26

BALANCE 00000001243.50

22. Daily net report

YOUR RECEIPT

THANK YOU

31/12/88 12:24P 123#2170

A CLERK01

#270 *X2*

*DAYLY *

27/12 3090

19117.95

28/12 20

5742.72

29/12 10

12655.82

30/12 10

83234.40

31/12 10

86332.47

***TOTAL 3140

207083.36

23. Cashier report

(1) Individual cashier report

- Sample X1 report

YOUR RECEIPT		
THANK YOU		
28/12/88 9:12P 123#3263		
A-01 CLERK01		
#151 *X1*		
*CASH. *		
01CSR# CSR01 *A*		
PAID TL		1319.56
REFUND	20	1.50
u	20	7.00
MODE	10	10.61
GUEST	1150	
DEPOSIT 10 120.00		
DEPOS(-)	10	-120.00
CHECK1	70	210.00
CREDIT1	20	58.38
CREDIT2	20	11.35
EXCHNG1	10	50.00
CASH	260	1068.43
***CID 1335.51		
CA/CH ID		1545.51
CHK/CG		28.60

- Sample OPX report

YOUR RECEIPT		
THANK YOU		
28/12/88 9:14P 123#3265		
A-01 CLERK01		
#051 *OPX*		
*CASH. *		

↓
The subsequent printout occurs
in the same format as in the
sample X1 report.

(2) Full cashier report

- Sample X1 report

YOUR RECEIPT

THANK YOU

28/12/88 9:22P 123#3277
B-01 CLERK01

#150 *X1*
*CASH. *

01CSR# CSRO1 *A*
PAID TL 1319.56
REFUND 20 1.50
" 20 7.00
MODE 10 10.61
GUEST 1150

DEPOSIT 10 120.00
DEPOS(-) 10 -120.00
CHECK1 70 210.00
CREDIT1 20 58.38
CREDIT2 20 11.35
EXCHNG1 10 50.00
CASH 260 1068.43

***CID 1335.51
CA/CH ID 1545.51
CHK/CG 28.60

To be continued.

02CSR# CSRO2 *E*
PAID TL 392.18
GUEST 50

CHECK1 10 100.00
CREDIT1 30 6.83
CREDIT2 10 5.25
CASH 10 330.10

***CID 280.10
CA/CH ID 380.10
CHK/CG 50.00

***TOTAL
PAID TL 1711.74
REFUND 20 1.50
" 20 7.00
MODE 10 10.61
GUEST 1200

DEPOSIT 10 120.00
DEPOS(-) 10 -120.00
CHECK1 80 310.00
CREDIT1 50 65.21
CREDIT2 30 16.60
EXCHNG1 10 50.00
CASH 270 1398.53

***CID 1615.61
CA/CH ID 1925.61
CHK/CG 78.60

24. Cash in drawer report for individual cashier

YOUR RECEIPT	
THANK YOU	
28/12/88 9:15P 123#3267	
A-01 CLERK01	
#133	*X1*
CID	
01CSR# CSRO1	*A*
***CID	1335.51
CA/CH ID	1545.51
CHK/CG	28.60

25. Full cashier cash in drawer report

YOUR RECEIPT

THANK YOU

28/12/88 9:52P 123#3293
A-01 CLERK01

#134 *X1*
CID

01CSR# CSRO1	*A*
***CID	1637.15
CA/CH ID	1947.75
CHK/CG	42.85

02CSR# CSRO2	*B*
***CID	1601.65
CA/CH ID	2029.65
CHK/CG	104.60

***TOTAL	
***CID	3238.80
CA/CH ID	3977.40
CHK/CG	147.45

COMPULSORY CASH/CHEQUE DECLARATION

1. If your machine has been programmed for compulsory cash/cheque declaration, you must declare cash/cheque in drawer in advance according to the type of the declaration when you take cashier/clerk Z reports.

Use the procedure shown in 3 below for this declaration.

2. Types of compulsory cash/cheque declaration


(1) Compulsive when individual cashier/clerk resetting is taken

(2) Compulsive when full cashier/clerk resetting is taken

Note: Compulsory cash/cheque declaration is available in the above two types. You can choose either of these. Consult your local dealer for details.


3. Key operation

• Individual cashier/clerk Z report

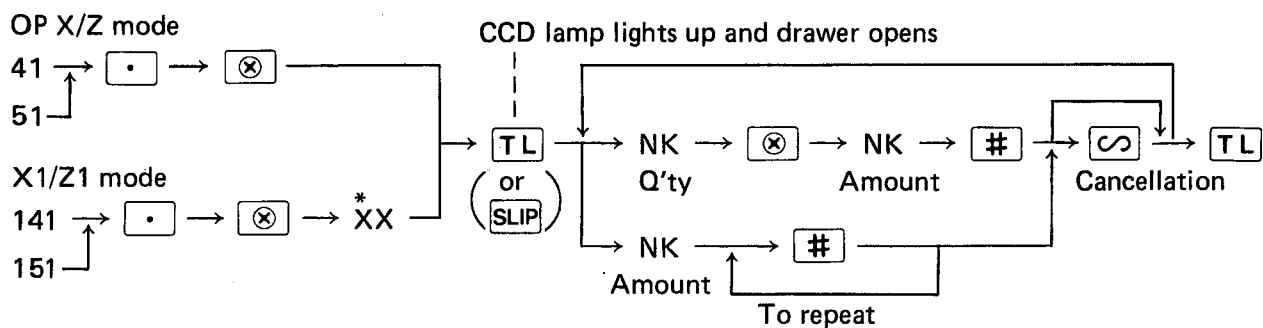

*XX: Cashier/clerk code

• Full cashier/clerk Z report

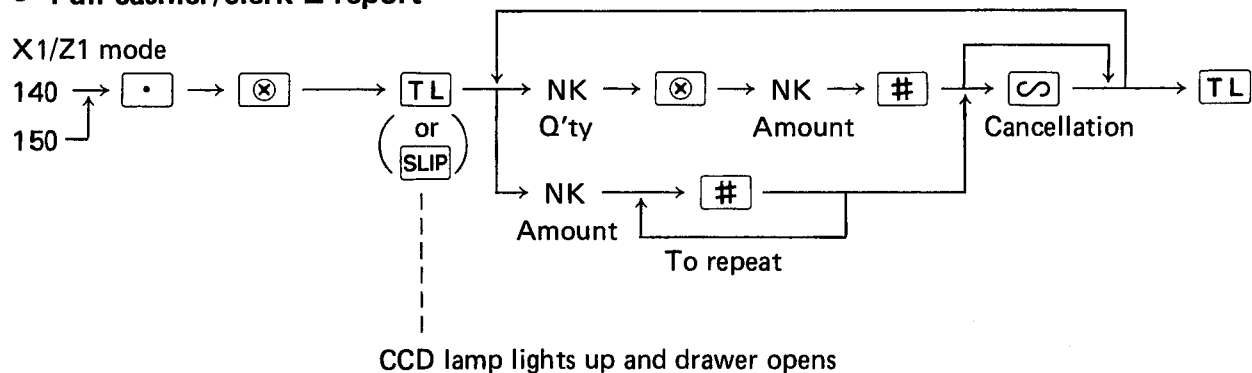

YOUR RECEIPT

THANK YOU

28/12/88 10:48P 123#3303

B CLERK02

#141 *Z1*

CCD

50 x 10.00

500.00

9 x 1.00

9.00

0.10

Amount

*CLERK *

02CLK# CLERK02 *E*

ORDER TL 509.10

NON COM 40 509.10

PAID TL 509.10

5 10 1.50

GUEST 50

CHECK1 20 6.00

CASH 30 505.60

***CID 503.10

CASH IS 509.10

DIFFER -6.00

CA/CH ID 509.10

CHK/CG 2.50

Cash in drawer to be obtained

Total of entered (declared) cash in drawer

Difference

IN CASE OF POWER FAILURE

When power is lost, the machine retains its memory contents and all information on sales entries.

1. When power failure is encountered in register IDL state or during an entry, the machine returns to the normal state of operation after power recovery.
2. When power failure is encountered during a printing cycle the register prints "=====" and then carries out the correct printing procedure. (See the sample print.)

YOUR RECEIPT	
THANK YOU	
27/12/88 10:05A 123#1011	
A CLERK01	
DPT.01	3.25
DPT.02 =====	
DPT.02	12.50
SUBTOTAL	15.75
CASH	15.75

Power failure
symbol

Print after power
recovery

IN CASE OF PRINTER'S MOTOR LOCKING

If the printer's motor happens to lock, the printing stalls and intermittent bleeping starts. You must, first of all, the power switch off, cut the power supply, and repair the paper jumbling. And then, when switched on, the following format appears in the display.

" MOTOR LOCK "


Feed the roll paper to the proper position and depress the **CL** key. The register carries out the power failure symbol and continues printing.

PAPER ROLL NEAR-END SENSING FUNCTION (ONLY FOR JOURNAL PAPER)

When the journal paper roll comes near the end or is not loaded, the machine senses this condition and sounds an alarm, displaying the error message "PAPER EMPTY". At this time, clear the alarm with the **CL** key and replace the paper roll as soon as possible.

The following entry can be made after clearing the alarm. However, since this function works each time one transaction is completed, the alarm sound will be emitted again as the following transaction is completed unless the paper roll is replaced.



- The sensing position depends upon the size of the paper tube. Therefore, it is advisable to use paper rolls — whose paper tube is 18 mm in O.D. and 12 mm in I.D. — specified by SHARP.
- If the sensing occurs too early or late, contact your dealer.

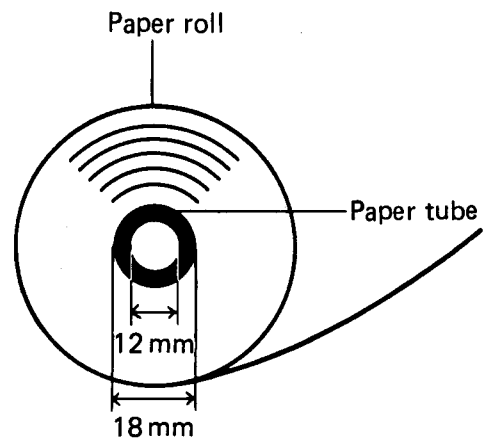



INSTALLING AND REMOVING THE PAPER ROLL

Install the paper roll in the printer. Be careful then to set the roll and fold the paper end correctly.

(How to set the paper roll)

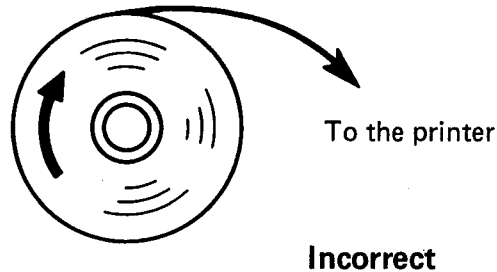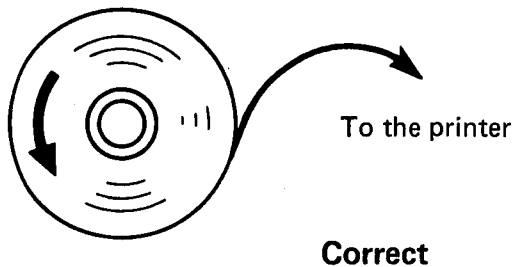


(How to fold the paper end)

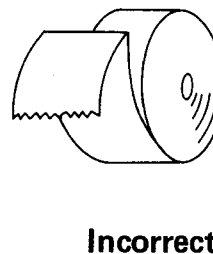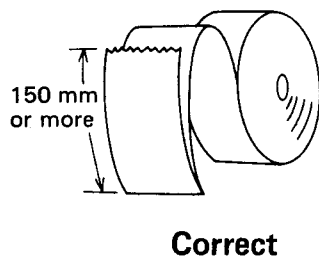

1. Installing the paper roll


• Installing the receipt paper roll

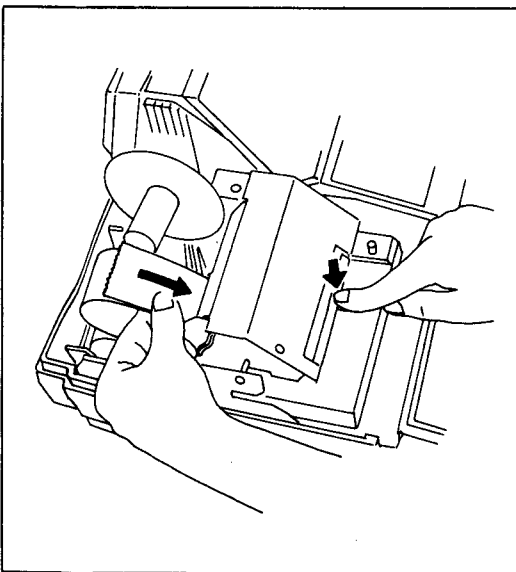

- (1) Remove the printer cover.
Set the paper roll correctly as illustrated above and drop it into the printer.
- (2) Press the paper roll release lever down and insert the folded paper end into the paper chute of the printer. Pull the paper end that has come out of the printer, holding down the lever.
- (3) Advance the paper by a required length by pressing the receipt paper feed key.

Note: Make sure the ink ribbon cassette has been mounted on the printer when installing the receipt paper roll.

- **Installing the journal paper roll**

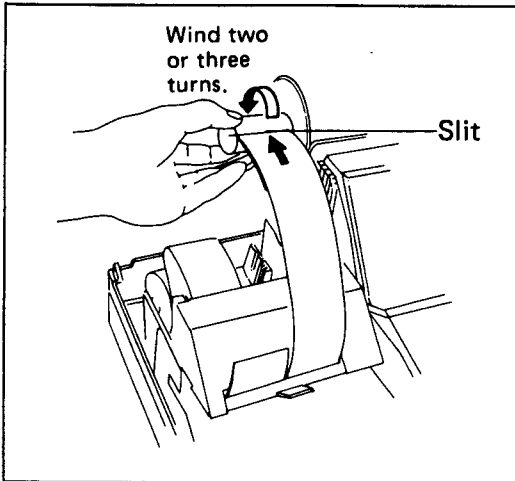


Set the journal paper roll in the same manner as the receipt paper roll. Insert the paper end that has come out of the printer, into the slit in the paper take-up spool, wind it two or three turns around the spool shaft, and set the spool on the bearing.

2. Removing the paper roll

When a red dye appears on the paper roll, it is time to replace the existing paper roll. Replace the paper roll with a new one.

- **Removing the receipt paper roll**

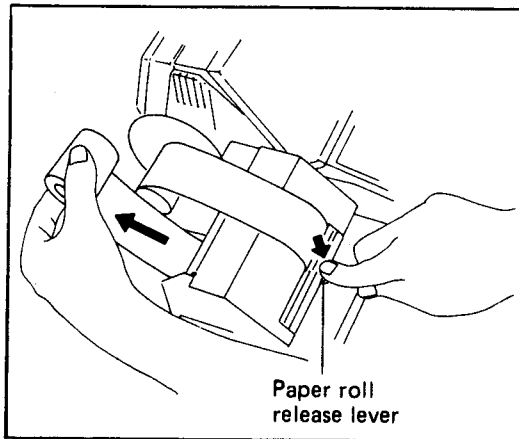


(1) Remove the printer cover.


(2) Press and hold the paper roll release lever down and draw out the existing paper roll from the paper roll location.

Note: Be sure to pull the roll in the direction of the arrow.

- **Removing the journal paper roll**

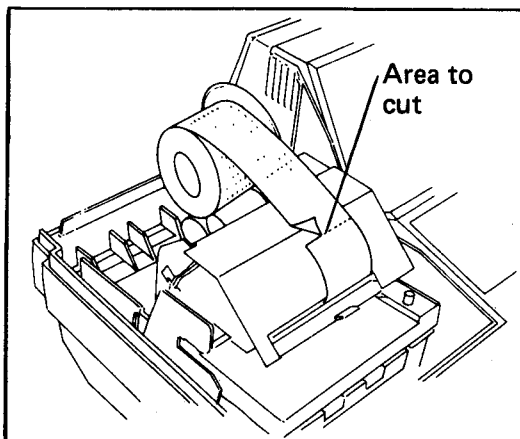


(1) Press the journal paper feed key to advance the paper by several lines and then cut it.

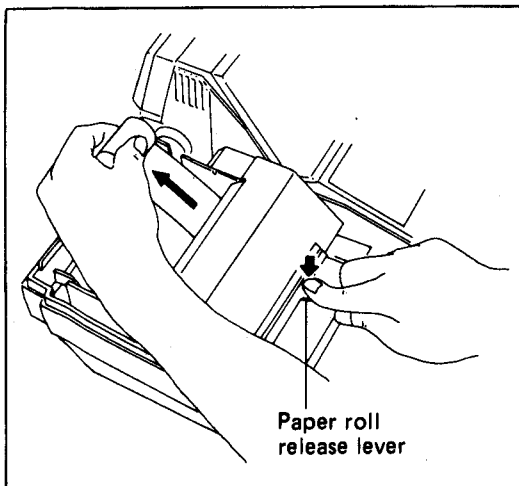

(2) Press and hold the paper roll release lever down and remove the existing paper roll from the paper roll location.

Note: Be sure to pull the roll in the direction of the arrow.

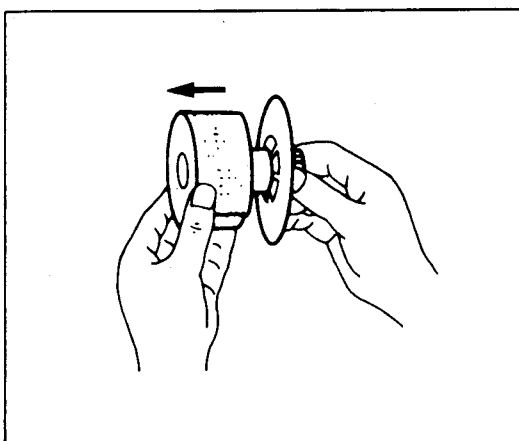

(3) Remove the paper roll from the take-up spool.

Request


Be sure to use paper rolls specified by SHARP.

The use of any other paper rolls than specified could cause paper jamming, resulting in register malfunction.


Paper specification

Paper width:	44.5 ± 0.5 mm
Max. outside diameter:	83 mm
Weight:	52.3 — 64.0 g/cm ² (45 — 55 kg/1000 sheets/788 x 1091 mm ²)
Quality:	bond paper
Paper tube:	18 mm


INSTALLING THE INK RIBBON CASSETTE

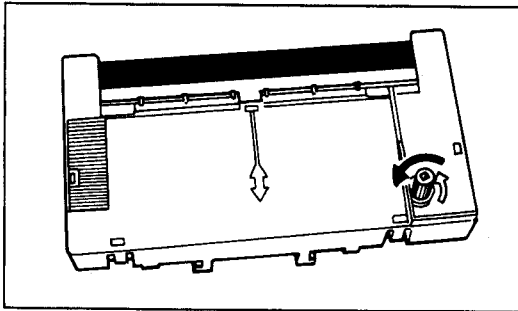

- (1) Remove the printer cover.
- (2) Rotate the knob on the ink ribbon cassette in the direction of the arrow to stretch the ribbon tight.

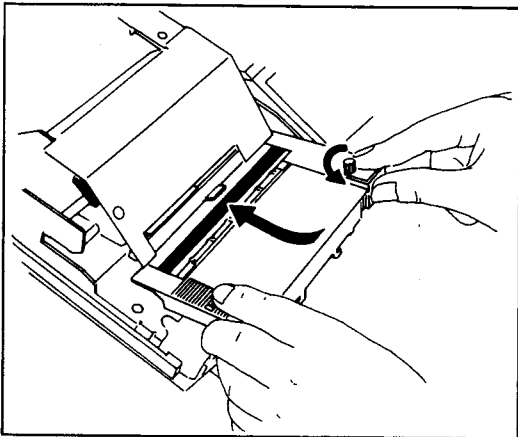

- (3) Place the ribbon at the front of the ink ribbon cassette under the paper roll release lever and set the entire cassette in the printer.
- (4) Rotate the knob two or three turns in the direction of the arrow to make sure it rotates smoothly. Also, make sure the ribbon is not folded.

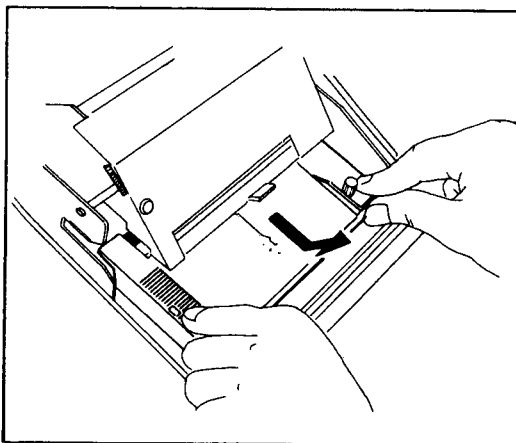


- (5) To remove the cassette, pull it slightly and then lift it up.


Request: Be sure to use ink ribbon cassettes specified by SHARP. The use of any cassettes other than specified could cause troubles in the printer.

INK REFILL

If the logo becomes too light, refill it with the supplied logo ink following the procedure given below.

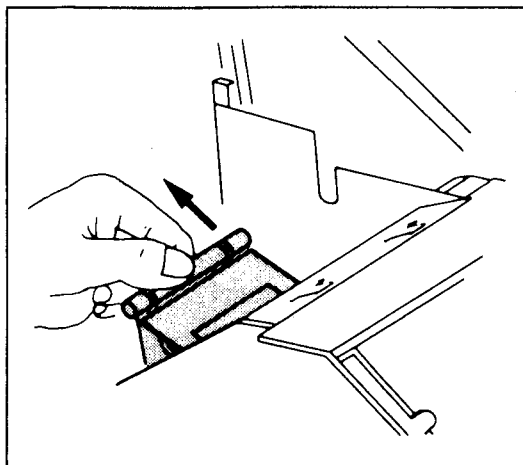

- (1) Remove the printer cover.
- (2) Remove the store name logo by pulling it in the direction of the arrow.

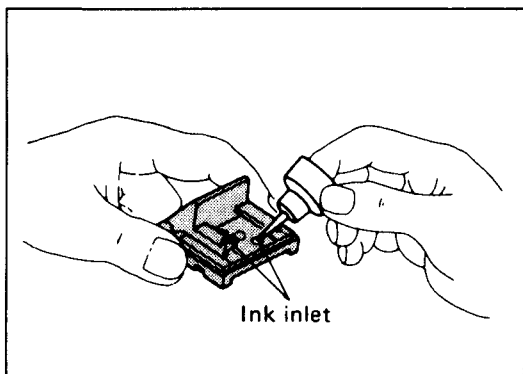

- (3) Pour two or three drops of logo ink through the ink inlet situated on the back of the logo.
- (4) Replace the logo by the reverse procedure of removing.
- (5) Replace the printer cover.


Precautions

1. The logo ink first gives a clear print 10 to 15 hours after being poured into the logo. Therefore, refilling after the daily business is most effective.
 2. Overinking should be avoided. This will create a blurry print.
 3. The ink is exclusively used for the logo.
Do not apply the ink to the ink ribbon and ink roller.
- * When the supplied ink is exhausted, purchase the logo ink specified by SHARP.

REMOVING THE TILL AND THE DRAWER


The till in the register is detachable. After closing your business for the day remove the till from the drawer and keep the drawer open. This will prevent money from being stolen. To detach the drawer, pull it forward fully with the till removed, and draw it out by lifting it up.

Note: For the machines delivered to those sales area that Sharp Electronics (Europe) covers, the drawer is an option.

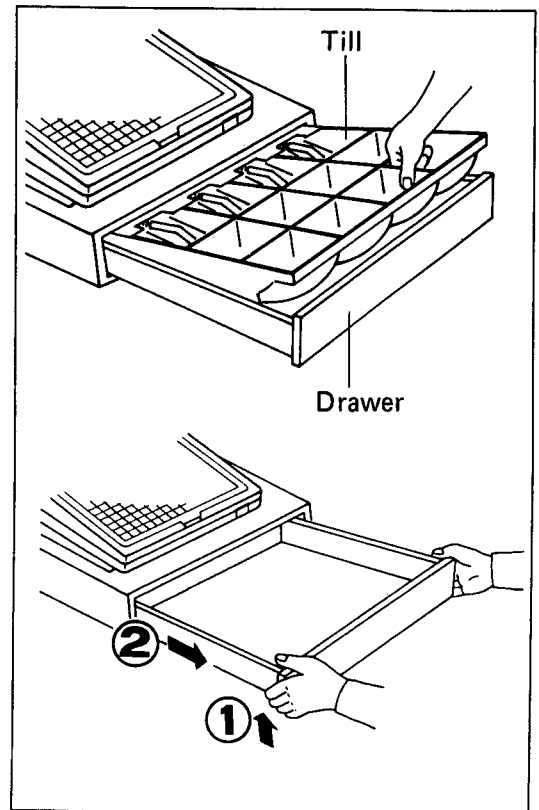

OPENING THE DRAWER BY HAND


The drawer automatically opens in the usual way, however, when power failure is encountered or the machine becomes out of order, open the drawer by inserting the supplied drawer lock key into the drawer lock on its right side and turning it 45 degrees clockwise. (See the figure at the right.)

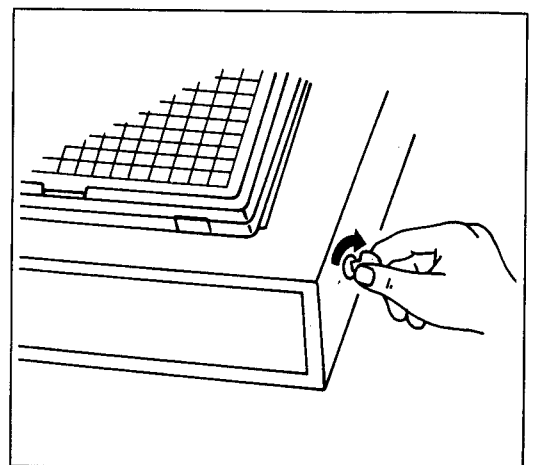

MOVING THE DRAWER FROM THE REGISTER

When the machine is delivered, the drawer is set as illustrated in Figure (A).

Where required, you are able to move the register frontward as illustrated in Figure (B).

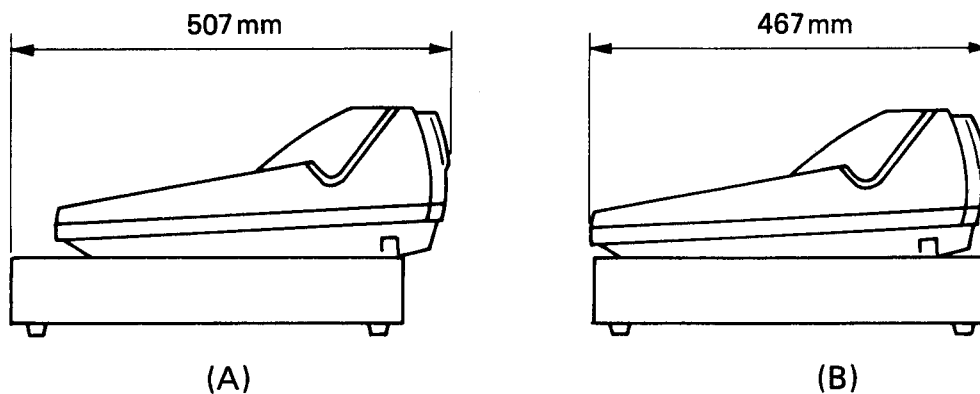

Also, you are able to separate the drawer from the register.
Please consult your dealer for details.

WARNING:

The separated drawers should be fixed to their surroundings, or somehow prevented from tipping when loaded to their full capacity with coin.

BEFORE CALLING FOR SERVICE

The malfunctions shown in the left-hand column below, labeled "Fault," do not necessarily indicate functional faults of the machine. It is therefore advisable to refer to the "Checking" shown in the right-hand column before calling for service.

Fault	Checking
(1) The display won't be illuminated even when the mode switch is turned to any other position than "⏻".	<ul style="list-style-type: none"> ● Is power supplied to the electric outlet? ● Is the power cord plug out or loosely connected to the electrical outlet? ● Is the power switch in the "ON" position?
(2) The display is illuminated, but the whole machine refuses entries.	<ul style="list-style-type: none"> ● Is the clerk key inserted? ● Is the mode switch set properly at the "REG" position?
(3) No receipt is issued.	<ul style="list-style-type: none"> ● Is the receipt paper roll properly installed? ● Is there a paper jam? ● Is the receipt ON-OFF switch in the "OFF" position?
(4) No journal paper is taken up.	<ul style="list-style-type: none"> ● Is the take-up spool installed on the bearing properly? ● Is there a paper jam?
(5) Printing is unusual.	<ul style="list-style-type: none"> ● Is the ink ribbon cassette installed properly? ● Is the ink ribbon's life completed?

LIST OF OPTIONS

For your ER-4100/4110, the following options are available.
For details, contact your dealer.

1. **RAM memory board ER-33MB (with 32KB RAM)**
 - The storage capacity can be increased up to 256KB in 32KB increment.
2. **RAM memory chip model ER-01RA (32KB)**
 - This option needs the ER-33MB RAM memory board.
3. **Wide printer**
 - This option needs the ER-41RS.
4. **Remote drawer model ER-37DW3**
 - West Germany model:
A maximum of four additional ER-37DW3s can be connected to your register.
 - U.K. or Australia model:
A maximum of three additional ER-37DW3s can be connected to your register.
5. **Till model ER-38CC and till cover model ER-38CV1/CV2/CV3/CV4/CV5**
6. **Spare mode switch models ER-31MD1/MD2/MD3/MD4/MD5**
 - A total of 100 spare switches, 20 for each of the 5 different types are available.
7. **RS232C interface model ER-41RS**
8. **Level converter model ER-67LC**
9. **1.5 meters cable model ER-52CB**
10. **Slip printer model ER-52SP and interface ER-41PI**
11. **Remote printer model ER-01RP or IO-17KP1**
 - The ER-01RP needs the ER-41MA or ER-41SL.
 - The IO-17KP1 needs the ER-41RS.
12. **Auxiliary power supply battery unit ER-30BT**
13. **SRN interface option for the inline system**
 - ER-41MA SRN-master control ROM and interface board
 - ER-41SL SRN-slave control ROM and interface board
14. **ER-02FD**
 - This option is a 3.5 inch floppy disk that is used for loading/dumping of preset data of the register.
 - This option needs the ER-52CB.

SPECIFICATIONS


Model:	ER-4100/4110		
External dimensions:			
West Germany model:	355 (W) x 467 (D) x 223 (H) (for ER-4100) 355 (W) x 467 (D) x 223 (H) (for ER-4110)		
U.K. or Australia model:	440 (W) x 507 (D) x 331 (H) (for ER-4100) 440 (W) x 507 (D) x 331 (H) (for ER-4110)		
Weight:			
West Germany model:	8.5 kg (for ER-4100)/9.5 kg (for ER-4110)		
U.K. or Australia model:	17.5 kg (for ER-4100)/18.3 kg (for ER-4110)		
Power source:	AC local voltage \pm 10%, 50/60 Hz		
Power consumption:	Stand-by	30 W	
	Operating	65 W	
Working temperature:	0°C to 40°C		
Electronics:	LSI (CPU), etc.		
Built-in battery:	Ni-Cd rechargeable battery, memory holding time about 1 month (with fully charged built-in battery, at room temperature)		
Display:	Upper display: Dot-matrix fluorescent tubes (16 positions) Lower display: 7-segment display (11 positions)		
Printer:			
Type:	2-station serial dot-matrix (7 x 9 font) printer		
Printing speed:	2.8 — 3.0 lines/second		
Printing capacity:	24 digits each for receipt and journal paper		
Other functions:	1. Logo function 2. Receipt ON-OFF switch, journal selective function 3. Receipt and journal independent paper feed function 4. Validation printing function 5. Validation slip detector 6. Paper-out sensor (only for journal paper) 7. Automatic cutting of receipts with perforation		
Ink ribbon:	Color:	Purple (single color)	
(Cassette type)	Width:	13 mm	
	Length:	12 meters	
Logo:	Dimensions of the printing face: 30 (W) x 20 (H) mm		
Paper roll:	Width:	44.5 \pm 0.5 mm	
	Max. diam.:	83 mm	
	Weight:	52.3 — 64.0 g/m ² (bond paper)	
Cash drawer:	4 slots for bills, and 8 for coins		

Accessories:	Manager key	2	
	Submanager key	2	
	Operator key	2	
	Clerk key	6 kinds (A, B, D, E, H, K) x 2	
	Drawer lock key	2 (for U.K. or Australia model)	
	Printer cover lock key	2	
	Ink ribbon cassette	1	
	Standard logo	1 (mounted on the main body)	
	Logo ink	1 (5 cc)	
	Paper roll	2	
	Spool	1	
	Key sheet for the standard keyboard layout	1 (mounted on the main body)	Supplied with the ER-4100
	Blank key sheet	1	
	Key sheet for programming	1	
	Dust cover	1 sheet	
	Instruction manual	1 copy	

* Specifications and appearance subject to change without notice for improvement.

SLIP PRINTER (OPTION) MODEL ER-52SP

1. Physical characteristics

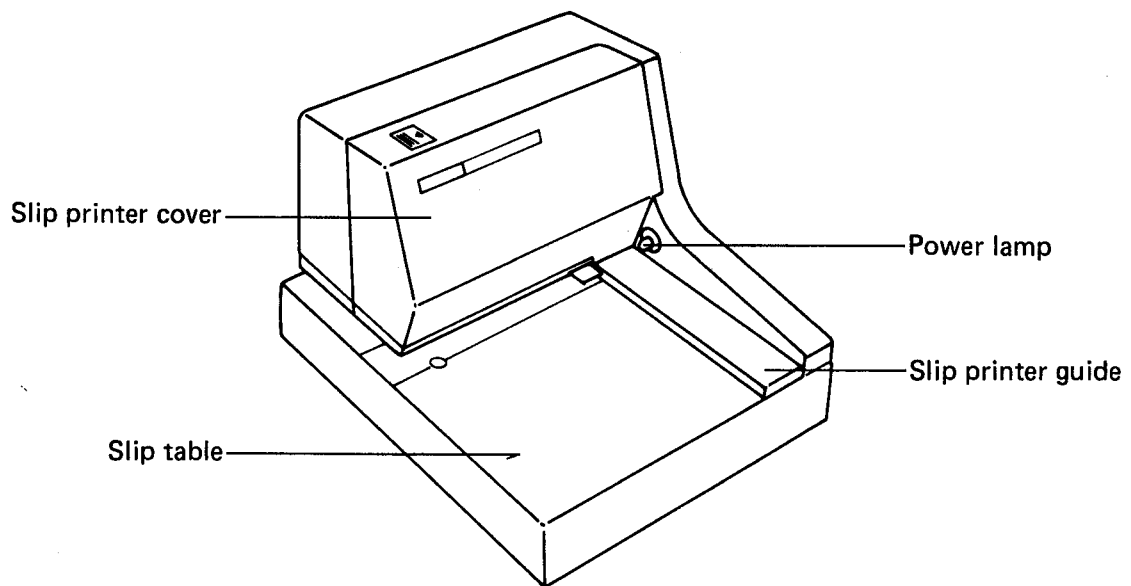

2. Slip

2-1. Selecting slips

Slips used for the slip printer must conform to the following standard. The use of slips that do not meet the standard causes problems, such as difficult seating of them or blurry printing.

(1) Paper specifications

- Ordinary paper
- Thickness: 0.09 – 0.25 mm

(2) Form

Ordinary paper + carbon paper, or printing paper.

(3) Dimensions

Width: 100 to 210 mm

Length: 80 to 297 mm

Observe the dimensions shown in illustration at right.

For details, contact your dealer.

(4) Numbering

Print numbers as shown in illustration at right. The numbers printed in the center indicate the serial numbers of printing lines, and the numbers at the right side are used to line up the slip in order to print on the proper lines. The number 1 is printed on the 7th line from above as shown in illustration at right, and the subsequent numbers are printed on the following underlines in sequence.

Format of recommended slip Unit: mm

The illustration shows a slip with the following structure and dimensions:

- Header:** "SHARP" logo.
- Form Fields:**

DATE	SERVER	TABLE	CHECK NO.
- Table:** A table with 27 rows. The first 7 rows have numbers 1 through 7 in the center. The next 20 rows have numbers 8 through 27 in the center. The last row is empty.
- Dimensions:**
 - Width:** Over 130 (W)
 - Height:** Over 219 (L)
 - Top Margin:** Over 40
 - Table Height:** 4.2
 - Bottom Margin:** Over 20
 - Table Width:** Over 89.5

2-2. Use of slips available in the market

Select slips which have dimensions specified in (1) and (3) of item "2-1. Selecting slips" above.

3. Printing position, alignment of slips

3-1. At the use of recommended slips


Hold a slip in parallel to the slip printer guide, and align number 1 at the right side of the slip with the printing line mark guide when beginning the printing from the 1st line.

3-2. Using other slips that are available on the market

Hold a slip in parallel to the slip printer guide, and align the printing area (line) with the printing line mark of the slip table.

- The following method is also available.

- (1) Cut the line numbers (part G) from the left side of the slip as shown in illustration at right.
- (2) Insert another slip (with part G not cut off), and align the center of first printing line with the printing line mark on the slip table as to where you want the 1st line to print. Make notation on the slip table where the bottom of the slip is located.
- (3) Turn the part G cut off in step (1) above upside down, and glue it on the slip printer guide. When gluing the part G, align number 1 with the notation that was made on the slip printer guide in step (2) above which designates where the bottom of the slip is to be positioned in order to print on the 1st line of the slip. (If possible, make your own guide with the number right side up for easier reading.)
- (4) Perform the alignment for two or three lines and print to make certain part G is properly made and glued on the proper position.

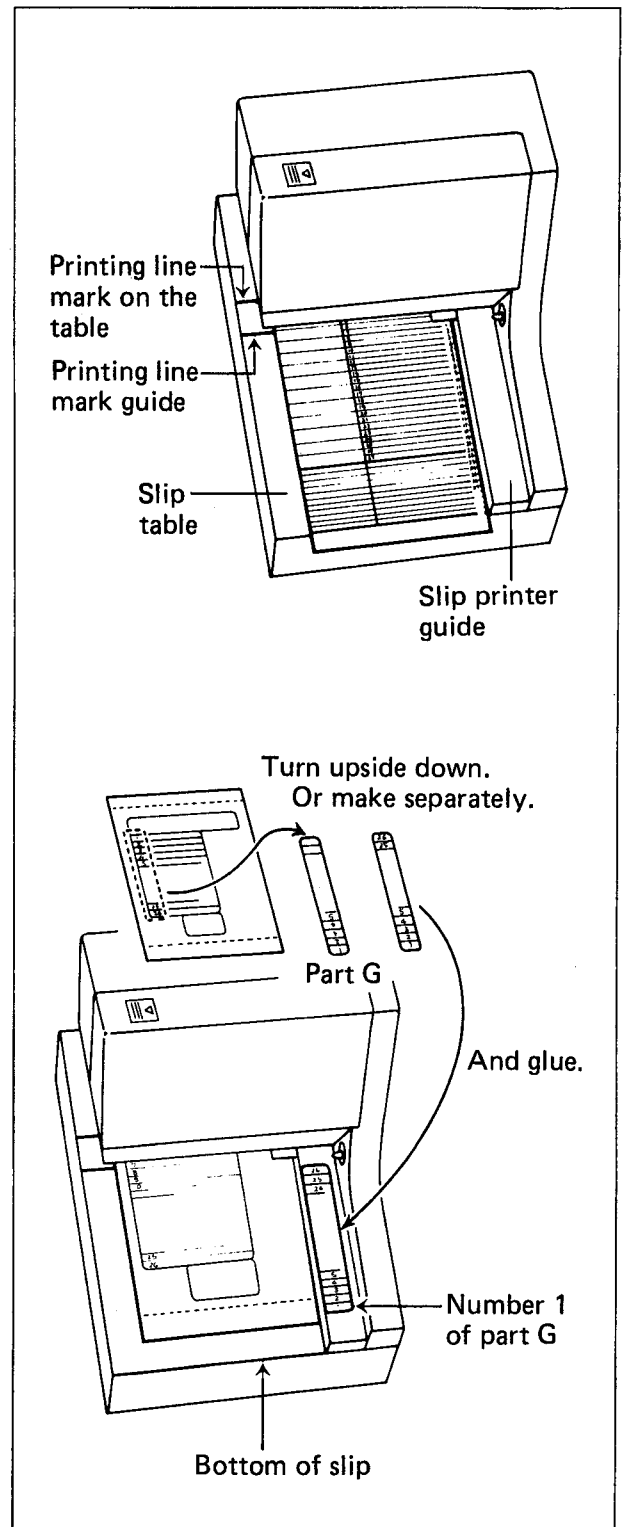

4. Programming

Program the initial line spacing (0 – 64 lines), the maximum number of slip print lines, and the slip printing counter.

5. Operation

5-1. Printing transaction details on a slip

Two different slip printing systems are available. It depend on how your register has been programmed which of these is used.

These are the buffered slip system and the real-time slip system.

(Consult your local dealer for this selection.)

- **Buffered slip system:**

All entries made during a transaction are temporarily stored in memory and then printed when the SLIP key is pressed after the transaction is finalized.

When the slip printing is demanded with "SLIP" message, or when the slip printing is optionally performed:

< Procedure >

- ① Perform the registration.

- ② Insert a slip in the slip printer.

Hold the slip in parallel to the guide, and advance the slip deep into the slip printer until it touches the holder.

- ③ Press the SLIP key. (Starting slip print)

- **Real-time slip system:**

The slip printing will occurs whenever the item entries are made.

In case of "compulsory slip printing", if a slip has already been inserted in the slip printer, the slip printing starts automatically.

When the slip printing is demanded with "SLIP" message, or when the slip printing is optionally performed:

< Procedure >

- ① Insert a slip in the slip printer.

Hold the slip in parallel to the guide, and advance the slip deep into the slip printer until it touches the holder.

- ② Press the SLIP key. (Starting compulsory slip print)

- ③ Perform the registration. (Starting optionally slip print)

Key operation	Print
1000 <input type="button" value="NC"/>	<div> 30/12/88 6:32P 123#1154 *A* CLERK01 GLU#1000 ***PBAL 0.00 DPT.02 35.00 DPT.03 27.00 SUBTOTAL 62.00 TAXABLE1 62.00 VAT 1 2.95 NET 1 59.05 CASH 62.00 </div>
3500 <input type="button" value="2"/>	
2700 <input type="button" value="3"/>	
<input type="button" value="TL"/>	
<input type="button" value="SLIP"/>	

Sample printout

30/12/88 6:32P 123#1154	*A* CLERK01	GLU#1000
	***PBAL	0.00
DPT.02		35.00
DPT.03		27.00
SUBTOTAL		62.00
TAXABLE1		62.00
VAT 1		2.95
NET 1		59.05
	CASH	62.00

Notes: Slip detectors


If the slip advances inward and is out of contact with the slip detectors in the course of printing, an error occurs.

In this case your register displays the error message "INSERT SLIP" and delivers an error alarm sound.

Meanwhile, the slip printer prints "NEXT P." on the slip and release its paper holder.

If such a situation occurs, clear the error by pressing the **CL** key, insert a new slip, and press the **SLIP** key.

The slip printer prints a header line (date, time, register no., consecutive no., and cashier/clerk code) on the slip and then prints the information which was not yet printed at the time of the error.

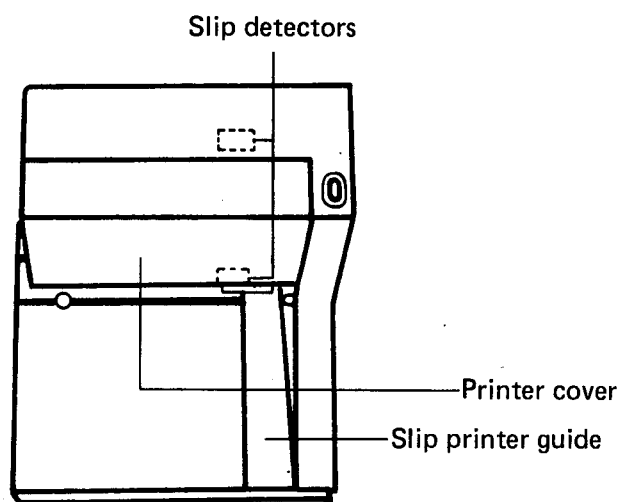


5-2. Validation printing

Connecting a slip printer to your register prevents its built-in printer from performing validation printing. Carry out validation printing by use of the slip printer.

After item entries or finalized transaction hold a validation slip to the slip guide, align with the printing line mark the area to print the information on, then press the **VP** key. This achieves validation printing.

- Validation paper specifications and printing position

Paper quality and thickness of validation slips must be the same as those of common slips. Observe the dimensions shown in the illustration below. The hatched area is printing space.

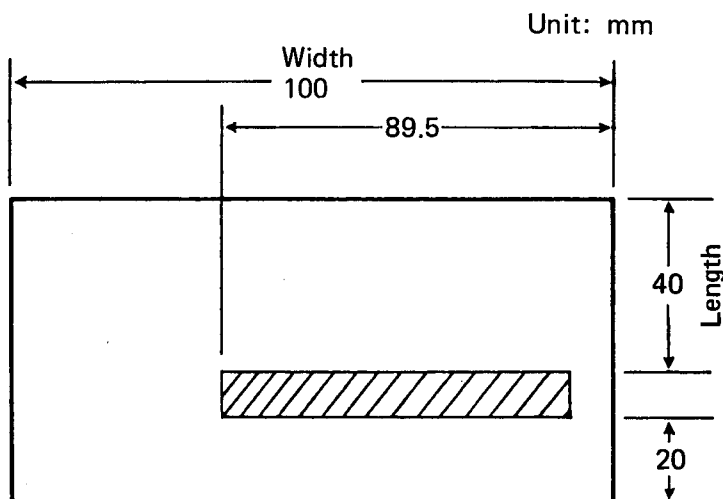


6. Mounting the ink ribbon cassette

(1) Remove the slip printer cover by pulling it to the left.

(2) When the printer head stays on the right, shift it to the left in either method ① or ②.

① Set the mode switch to the "PGM1", "PGM2", or "OP X/Z" position, and push **SLIP** key.

② Set the mode switch to the position "REG" and push **TL** key and then **VP** for validation printing.

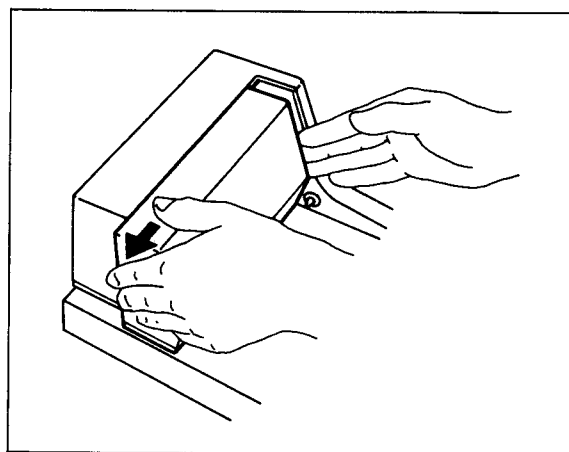


(3) For safety, unplug your register.

(4) Turn the feeding knob of the ribbon cassette with your finger as indicated in the illustration and rotate the ribbon take-up knob in the direction of the arrow ① to tense the ink ribbon.

(5) Set the cassette so that the two protuberances on the printer fit into the two holes in the cassette.

(6) Run the ink ribbon between the head and the ribbon guide as indicated by the arrow ②, and then, set the ribbon case to the ribbon unit as indicated by the arrow ③.

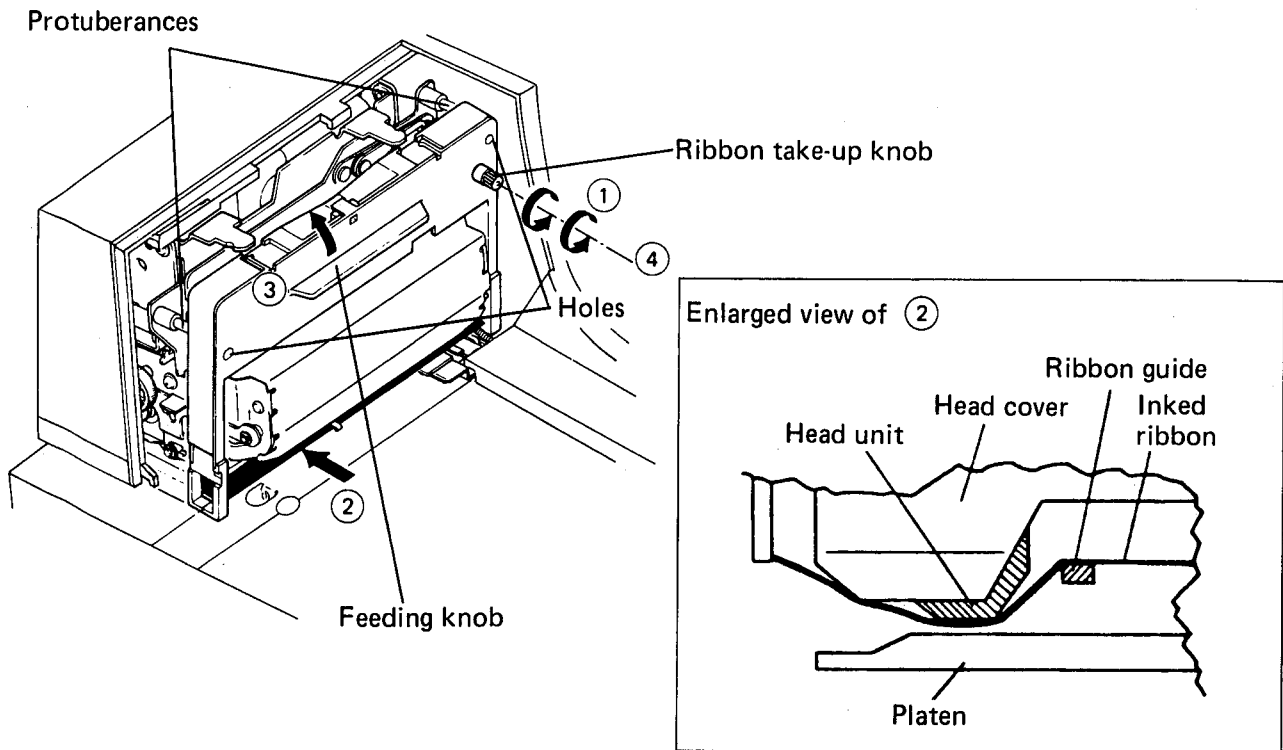

(7) After setting the ribbon cassette, rotate the ribbon take-up knob in the direction of the arrow (4), and check if the inked ribbon is not twisted or folded.

(8) Close the slip printer cover.

7. Replacing the ink ribbon cassette


When printing becomes faint, replace with a new slip printer ink ribbon cassette specified by SHARP.

(1) For safety precautions, unplug your register. Remove the slip printer cover by pulling it to the left.

(2) Remove the existing ink ribbon cassette. Hold the knob at the center and pull the cassette toward you. (See the figure at right.)

(3) Install a new ink ribbon cassette according to the procedure given in "Mounting the ink ribbon cassette" and check if the inked ribbon is not twisted or folded.

(4) Close the slip printer cover.

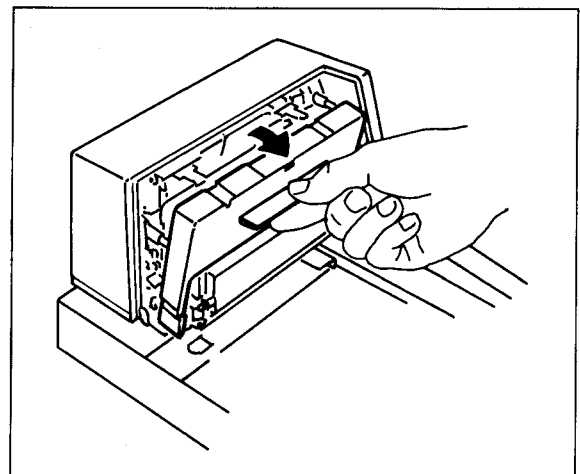


8. Before calling for service

The malfunctions shown in left-hand column below, labeled "Problem", do not necessarily indicate a malfunction of the slip printer. It is therefore advisable to refer to the "Check" shown in the right-hand column before calling for service.

Problem	Check
1. Any slip cannot be inserted.	<ul style="list-style-type: none">• Does the thickness of the slip satisfy the standard?• Is the printer in the "release" condition?• If the printer is not in the "release" condition, perform either of the following operations.<ol style="list-style-type: none">1. Remove the printer cover, push up the manual release lever to put the printer in the "release" condition, and then insert a slip. (See the figure below.)2. Turn the mode switch of your register to the PGM1, PGM2, or OP X/Z position and press the SLIP key to put the printer in the "release" condition. Then insert a slip.• Look for paper jam.
2. The slip swerves at printing.	<ul style="list-style-type: none">• Does the slip meet the specification?
3. No printing	<ul style="list-style-type: none">• Is the slip inserted properly or is it in contact with the detectors?• No faulty operation?• Is the ink ribbon cassette fitted properly?• Does the ink ribbon lack enough ink?

- When you call your local dealer for service, please inform of the product name (SLIP PRINTER), model (ER-52SP), and details of malfunction.

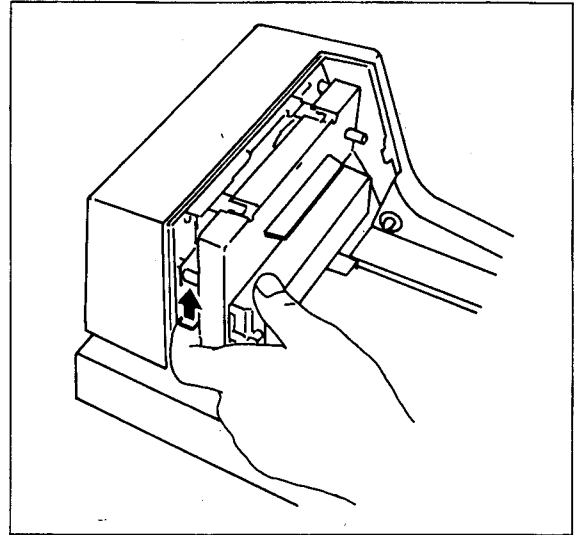

9. Specifications

Model:	ER-52SP
External dimensions:	219(W) x 267(D) x 172(H) mm
External dimensions of slip table:	156(W) x 253(D) mm
Weight:	4 kg
Operating temperature:	0°C to 40°C
Printing system:	Serial dot-matrix (7 x 9 font) printer
Printing speed:	Approx. 3.0 lines/sec.
Print column capacity:	53 columns
Allowable dimensions of slip:	100(W) x 80(L) mm to 210(W) x 297(L) mm
Allowable thickness of slip:	0.09 to 0.25 mm
Ink ribbon:	Housed in an endless cassette, purple in color
Accessories:	Ink ribbon cassette 1 piece Test slip paper 2 sheets

MC-Service